



## WHAT'S IN THE BOX

1x Aluminum Frame, 1x Canopy Top, 1x Wheeled Bag,  
4x Sand Bags, 4x Ropes & Stakes

## INSTALLATION STEPS

### 1. Expand the Frame

- Place the folded frame at the setup area.
- With a partner standing on the opposite side, each person grasps two outer legs, gently lifts the frame, and pulls outward to open it.
- Stop when the frame is expanded to approximately three-quarters of its full width (Fig. A).

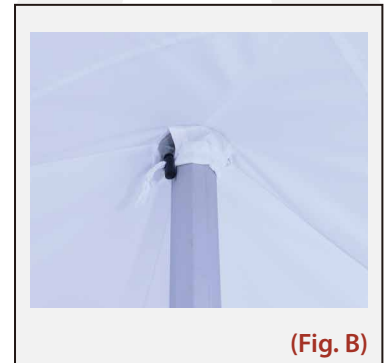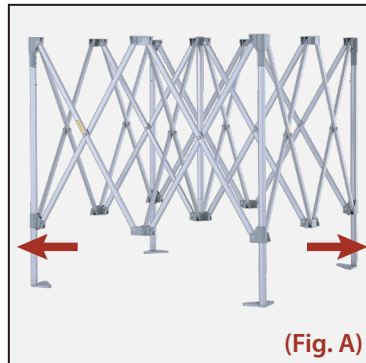

### 2. Install the Canopy Top

- Unfold the canopy top and place it over the partially opened frame.
- Secure the inner peak sleeve around the center frame structure (Fig. B).
- Align the hook-and-loop strips located at each corner of the canopy with the corresponding strips on the frame corners and fasten them firmly (Fig. C).




### 3. Fully Open the Frame

- With a partner, each person holds the outer legs, gently lifts the frame, and continues pulling outward until the structure is almost fully opened (Fig. D).

### 4. Lock the Corner Sliders

- Each corner of the tent features a sliding lock mechanism (Fig. E).
- Hold the leg tube with one hand. With the other hand, slightly lift the corner of the frame and push upward until the slider clicks into the locking hole on the leg.
- Repeat this process for all four corners.

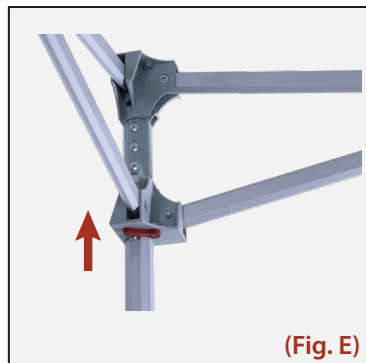

### 5. Adjust the Height

- Working with a partner, step on the foot pad, press the height adjustment button, and lift two adjacent legs to the desired height (Fig. F). Each leg offers 4 height settings.
- Repeat for the remaining legs.

### 6. Secure the Top

- Wrap the top straps around the frame and fasten them firmly (Fig. G).



### 7. Secure the Tent

- For best performance, we recommend securing the tent with ABCCANOPY weight bags and/or stake kit.

**Your ABCCANOPY Canopy  
is now fully set up!**

## INTERNATIONAL ABC, INC

696 S NEW HAMPSHIRE AVE, UNIT 2336  
LOS ANGELES, CA 90005  
customersupporter@abccanopy.com  
Copyright 2025 INTERNATIONAL ABC, INC. USA. All rights reserved.

## TAKEDOWN

**Important:** Before takedown, undo all top straps connecting the top to the frame to avoid tearing (Fig. A).

### 1. Lower the Tent Legs

- Press the height adjustment button and fully retract each leg (Fig. B).
- With a partner, press the red release buttons located under the four corner sliders to lower the legs (Fig. C).

### 2. Partially Close the Tent

- Lift the tent slightly and push inward until the frame is about three-quarters closed (Fig. D).

### 3. Remove the Canopy Top

- Undo the hook-and-loop fasteners at all four corners first.
- Loosen the inner peak sleeve and remove the canopy top from the frame (Fig. E).

### 4. Fully Close the Frame

- Each partner grasps two outer legs and gently pushes the frame together until it is completely closed.

### 5. Pack the Tent

- Place the folded frame and canopy top into the storage bag (Fig. F).

## CARE & MAINTENANCE

To ensure long-lasting performance and optimal protection from your ABCCANOPY canopy, please follow the care guidelines below:

- Clean the canopy top using mild soap and clean water only.
- To prevent mildew, make sure the frame and canopy top are completely dry and free of debris before closing or storing.
- Store the canopy in a cool, dry place when not in use. Avoid prolonged exposure to direct sunlight while stored, as this may accelerate material aging.

### Replacement Parts

[www.abccanopy.com/collections/canopy-accessories](http://www.abccanopy.com/collections/canopy-accessories)





### Warranty Information

[www.abccanopy.com/pages/warranty](http://www.abccanopy.com/pages/warranty)

### Warranty Terms

The warranty is void if the product is altered, modified, or used in a manner not in accordance with official instructions.

The warranty does not cover damage caused by weather conditions, natural disasters, accidental impact, or improper use.

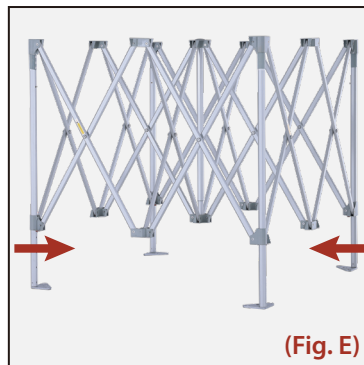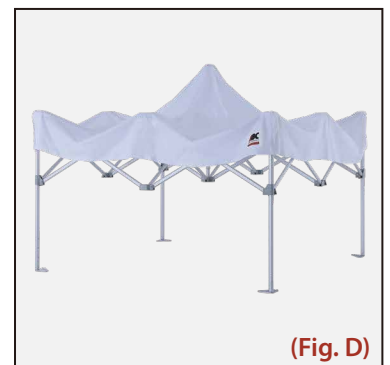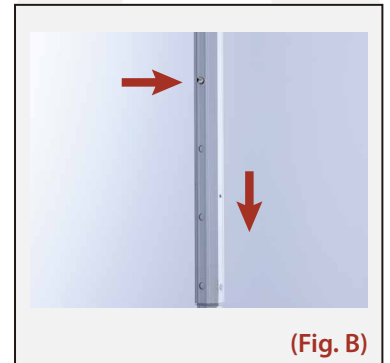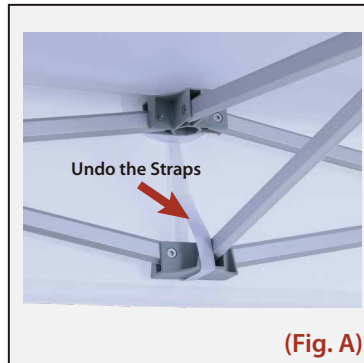

## SAFETY INFORMATION

1. Do not use the canopy in strong winds, heavy rain, or severe weather conditions.
2. This canopy is designed for temporary use only. Do not leave it assembled for extended periods.
3. Use caution when opening or closing the frame to avoid pinching fingers.

### Fire Safety Warning

- Keep all open flames and heat sources away from the canopy fabric and accessories.
- Although the canopy top meets recognized flame-resistant standards, it may still ignite if exposed to open flame or prolonged high heat.
- Any chemical treatment or foreign substance may reduce its flame-resistant properties.

This canopy top complies with the following standards:

CPAI-84  
NFPA 701  
California Title 19

## INTERNATIONAL ABC, INC

696 S NEW HAMPSHIRE AVE, UNIT 2336  
LOS ANGELES, CA 90005  
customersupporter@abccanopy.com  
Copyright 2025 INTERNATIONAL ABC, INC. USA. All rights reserved.