




11'x 13' Outdoor Hardtop  
Wood Framed Gazebo








## ASSEMBLY AND OPERATING INSTRUCTIONS

## Recommended number

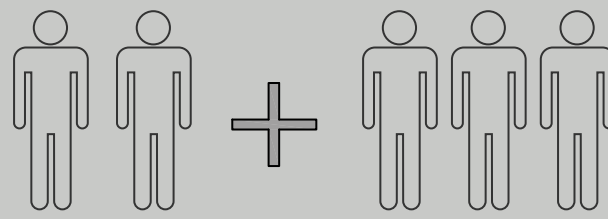

## Needed for assembly

(The following tools are not included)

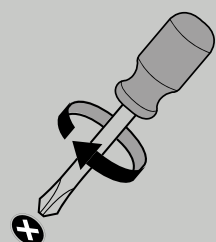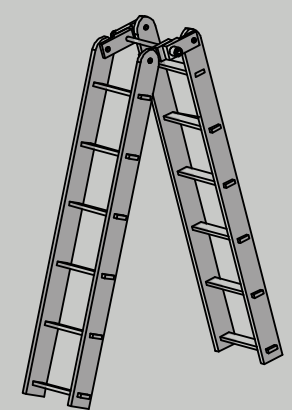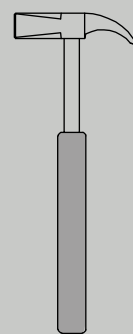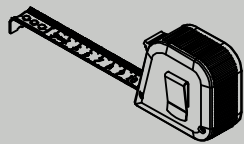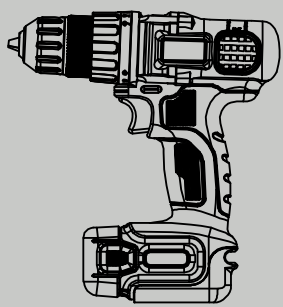

## Installation Tips

(Do not fully tighten the screws)


- 1.** When assembling **Step 8**, please do not fully tighten the EE/AA of E, until one side of wood post and beams are completely assembled(Step 9).
- 2.** When assembling **Step 11**, the EE/AA of E and D need to be loosened a bit, then tighten them once finishing assemble H1 and H2.
- 3.** When assembling **Step 15**, please do not fully tighten the II and HH, until all the top support parts (K-1, I-1, I-2, J) are completely assembled with the wood.
- 4.** When assembling **Step 17**, please do not fully tighten the OO/HH of M and N, until each L7 and L8 are connected. Then install L6 and tighten BB.





Parts List


Part# Qty


01  X2

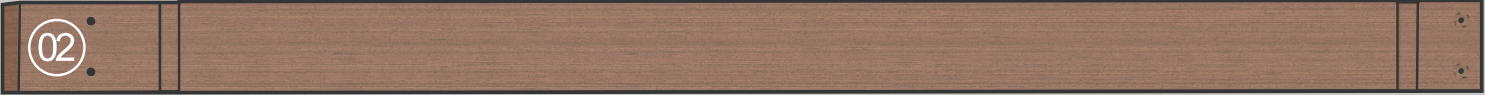02  X2

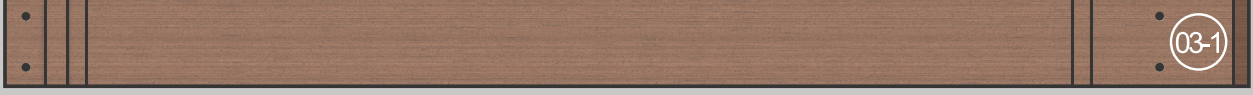03  X2

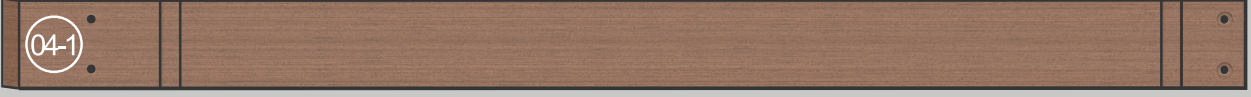
04  X2

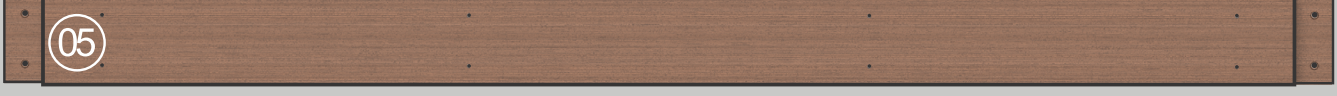
05  X2

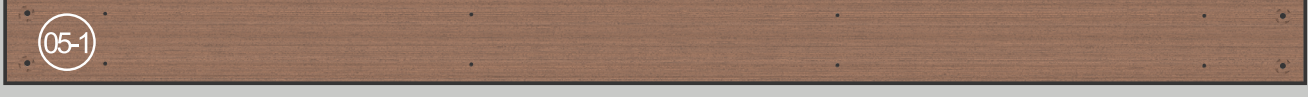
05-1  X2


06  X4


07-1  X4

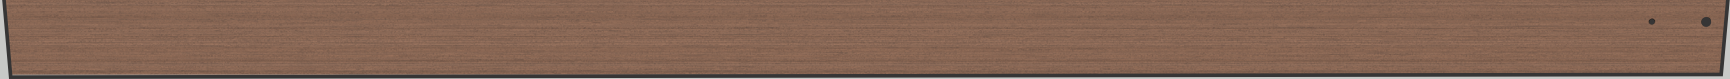
08  X4

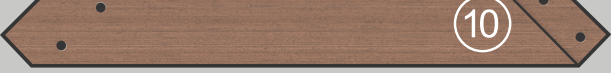
10  X4

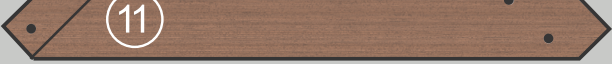
11  X4

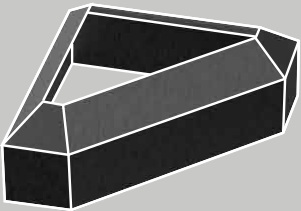
B  X4

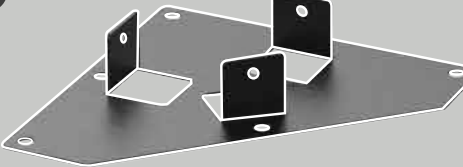C  X4

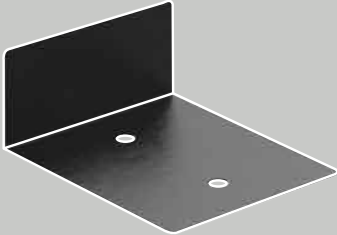D  X4

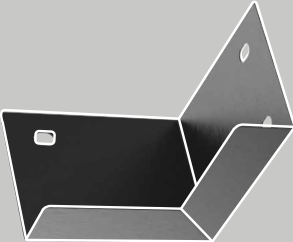E  X4

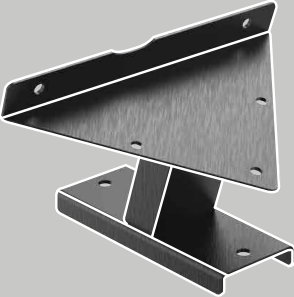F  X4

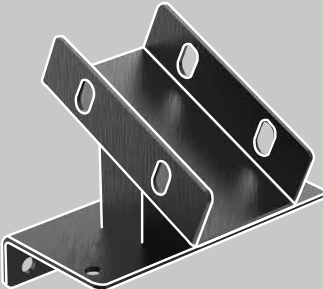G  X6


Parts List

Part#		Qty
X1		X1
I-1		X4
I-2		X4
J		X4
K-1		X6
L3-1		X4
L3-2		X4
L4-1		X4
L4-2		X4
L5		X4
L6		X2
L7		X4
L8		X4
M	 X6	
N	 X4	

# Parts List


Part#

P1

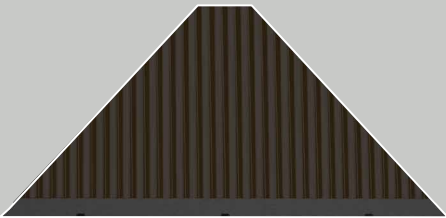

X2

Q1

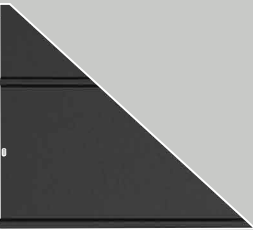


X4

P2




X2

Q3

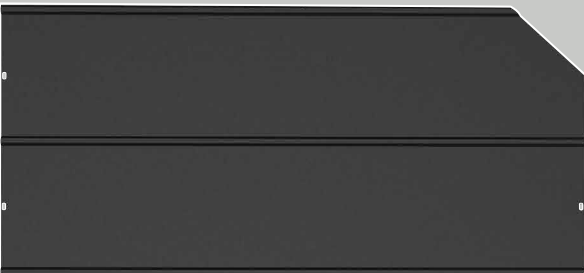


X4

Q2

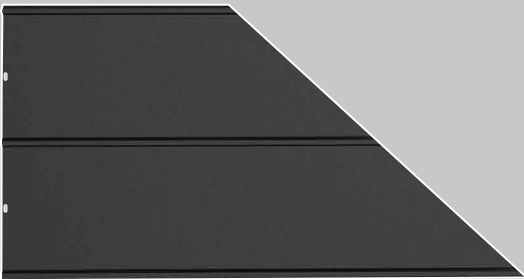

X4

Q5

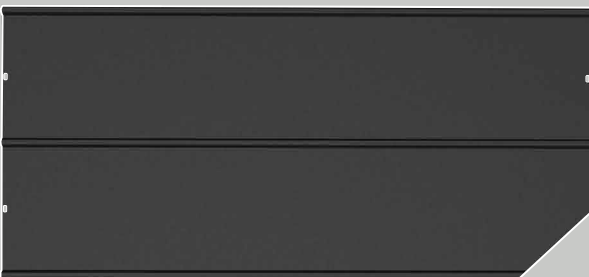

X4

Q4



X2

Q7



X4

Q6




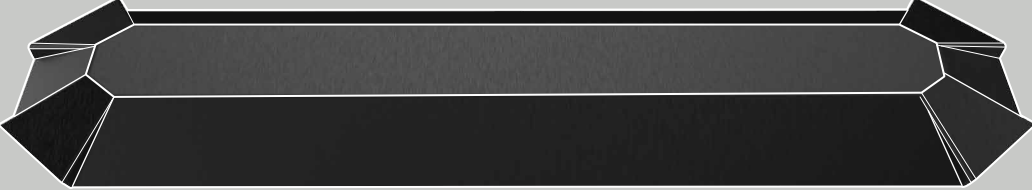



X4

S1








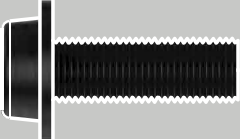





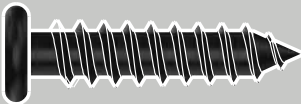

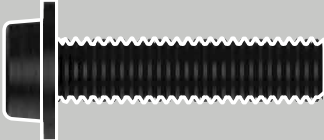

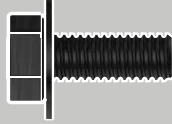










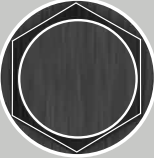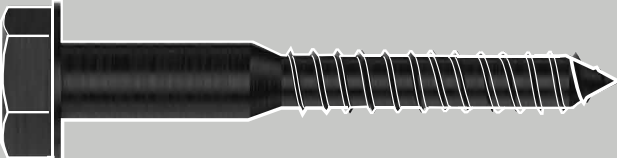


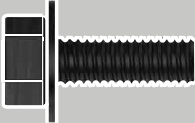


X6

# Parts List

Part#		
S2		X8
R1		X1
T		X2
H1		X4
H2		X4


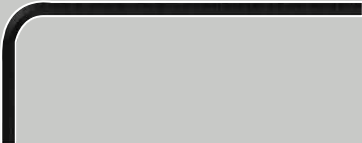

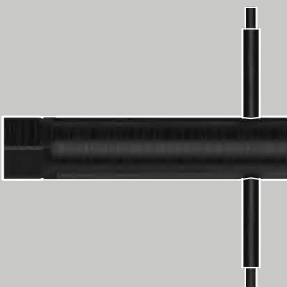
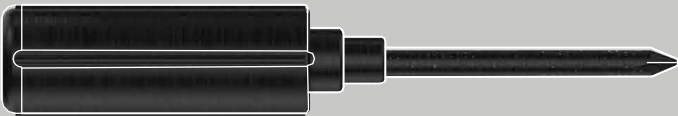


Parts List





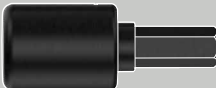
Part#				Qty
AA	M10x135			8
BB	M5x30			56+2
CC	M8x25			24+1
DD	M5x40			56+2
EE	M10x70			8
FF	M8x35			16+1
GG	M8x35			16+1
HH	M6x16			112+3
II	M6x55			12+1
JJ	M10			8
KK	M6			14+1
LL	M8			16+1
MM	M6			14+1
NN	M8			Preassemble
OO	M6x20			4
PP	Ø8			12
Z1	Ø3			2





# Parts List

Part#			Qty
Z2	M6		2
Z3	M8		1
Z4	M10		2
Z5	M10		1
Z6			1


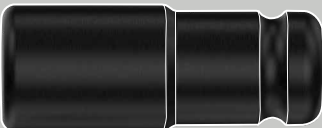
# Complimentary Parts

ZA		1
ZB		1
ZC		1
ZD		1
ZE		1


# Step 1

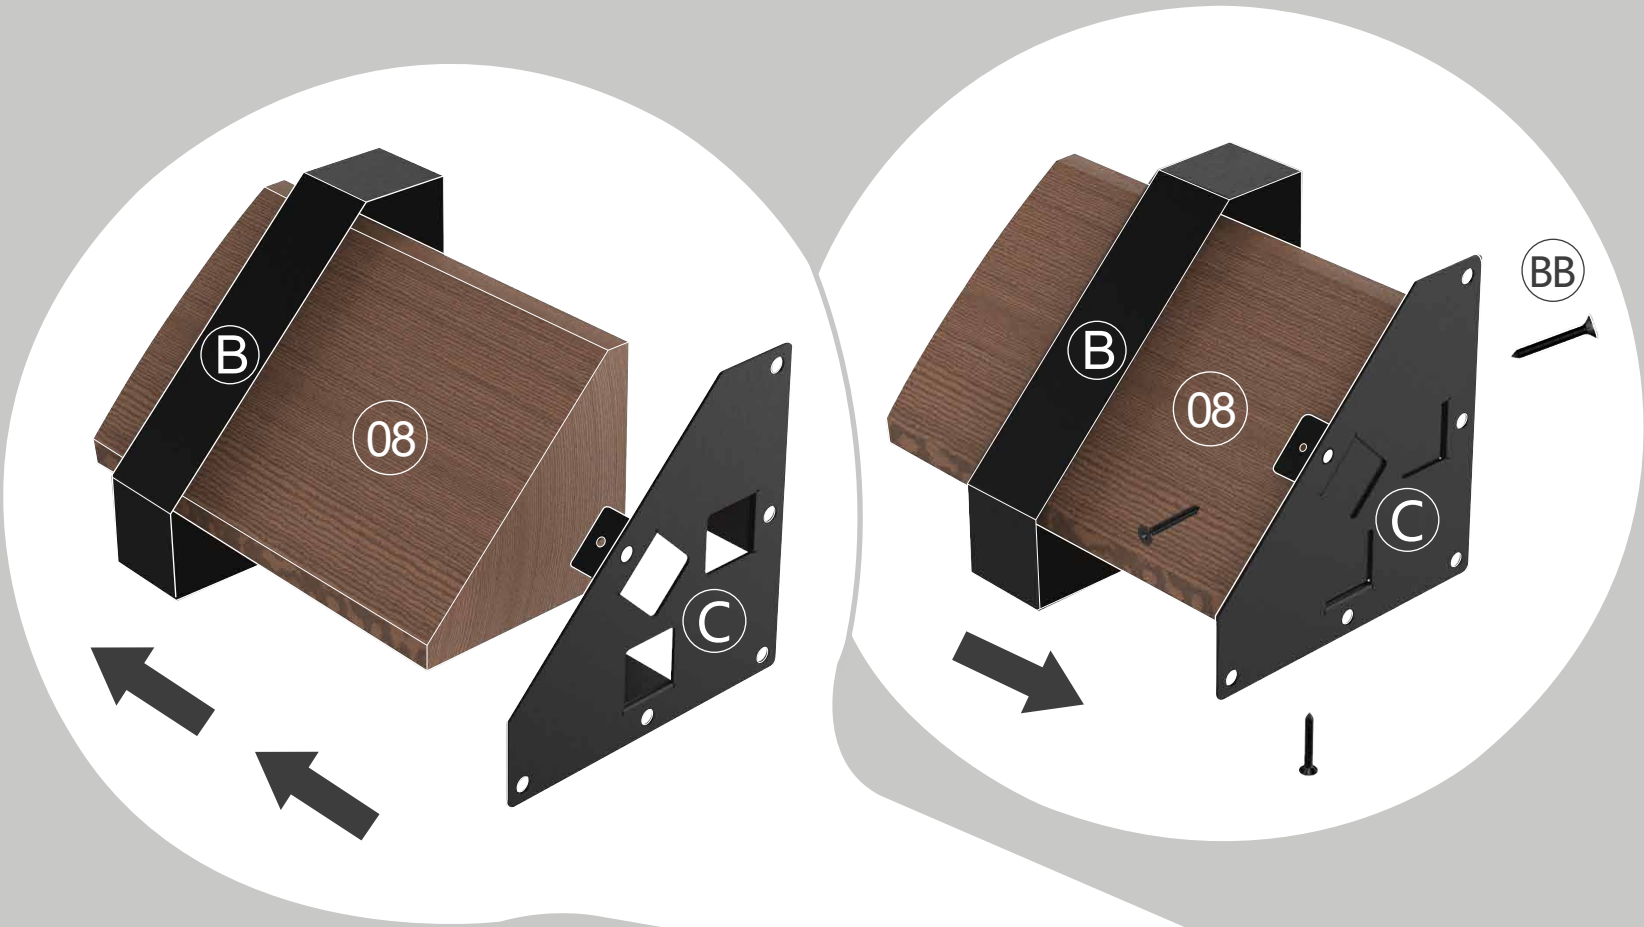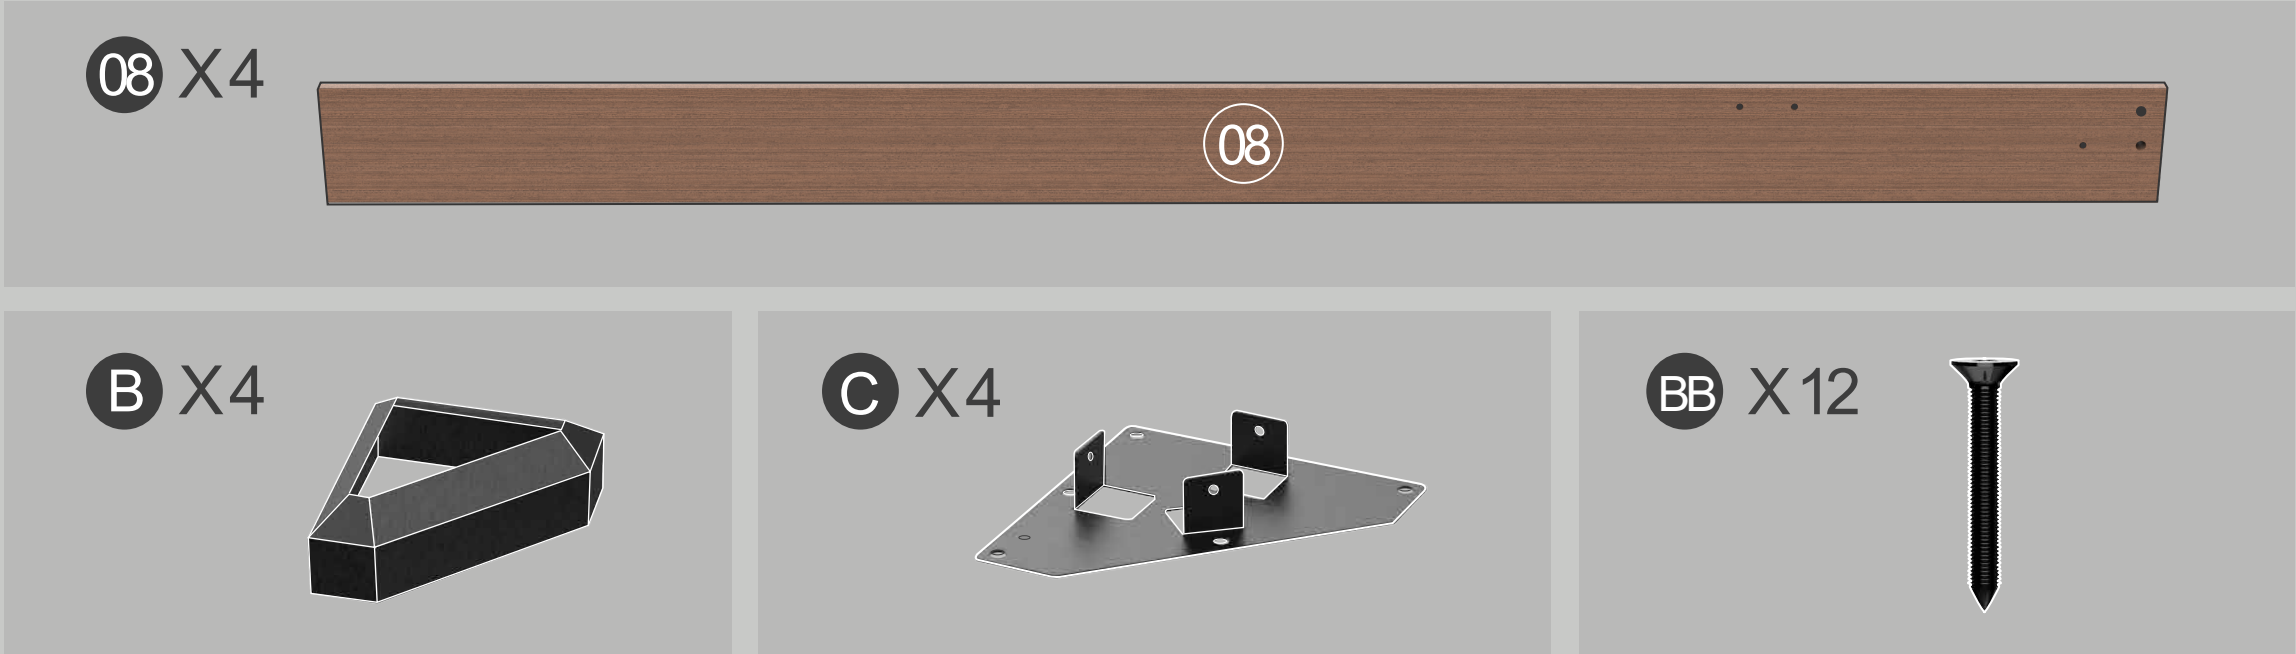

Step 2

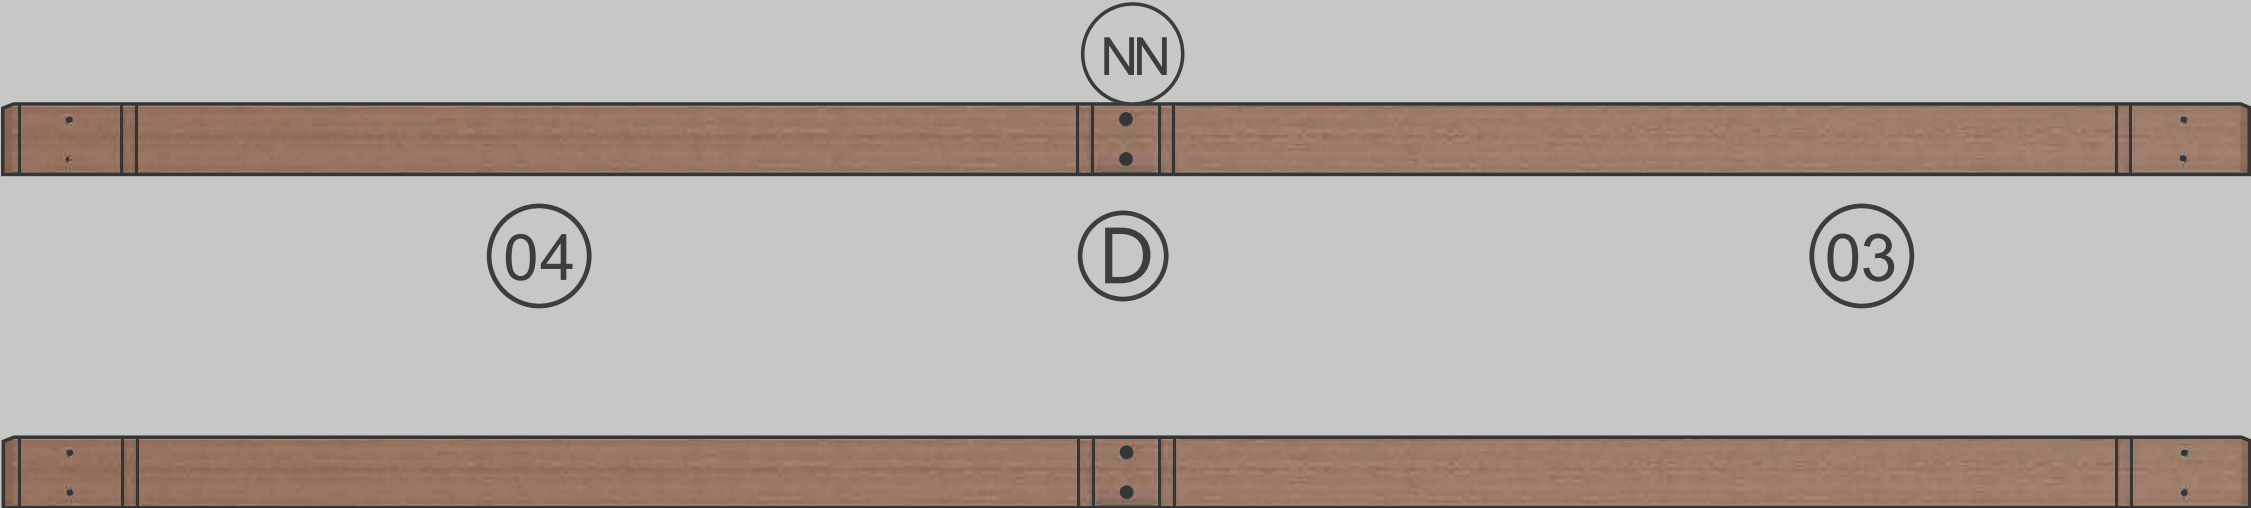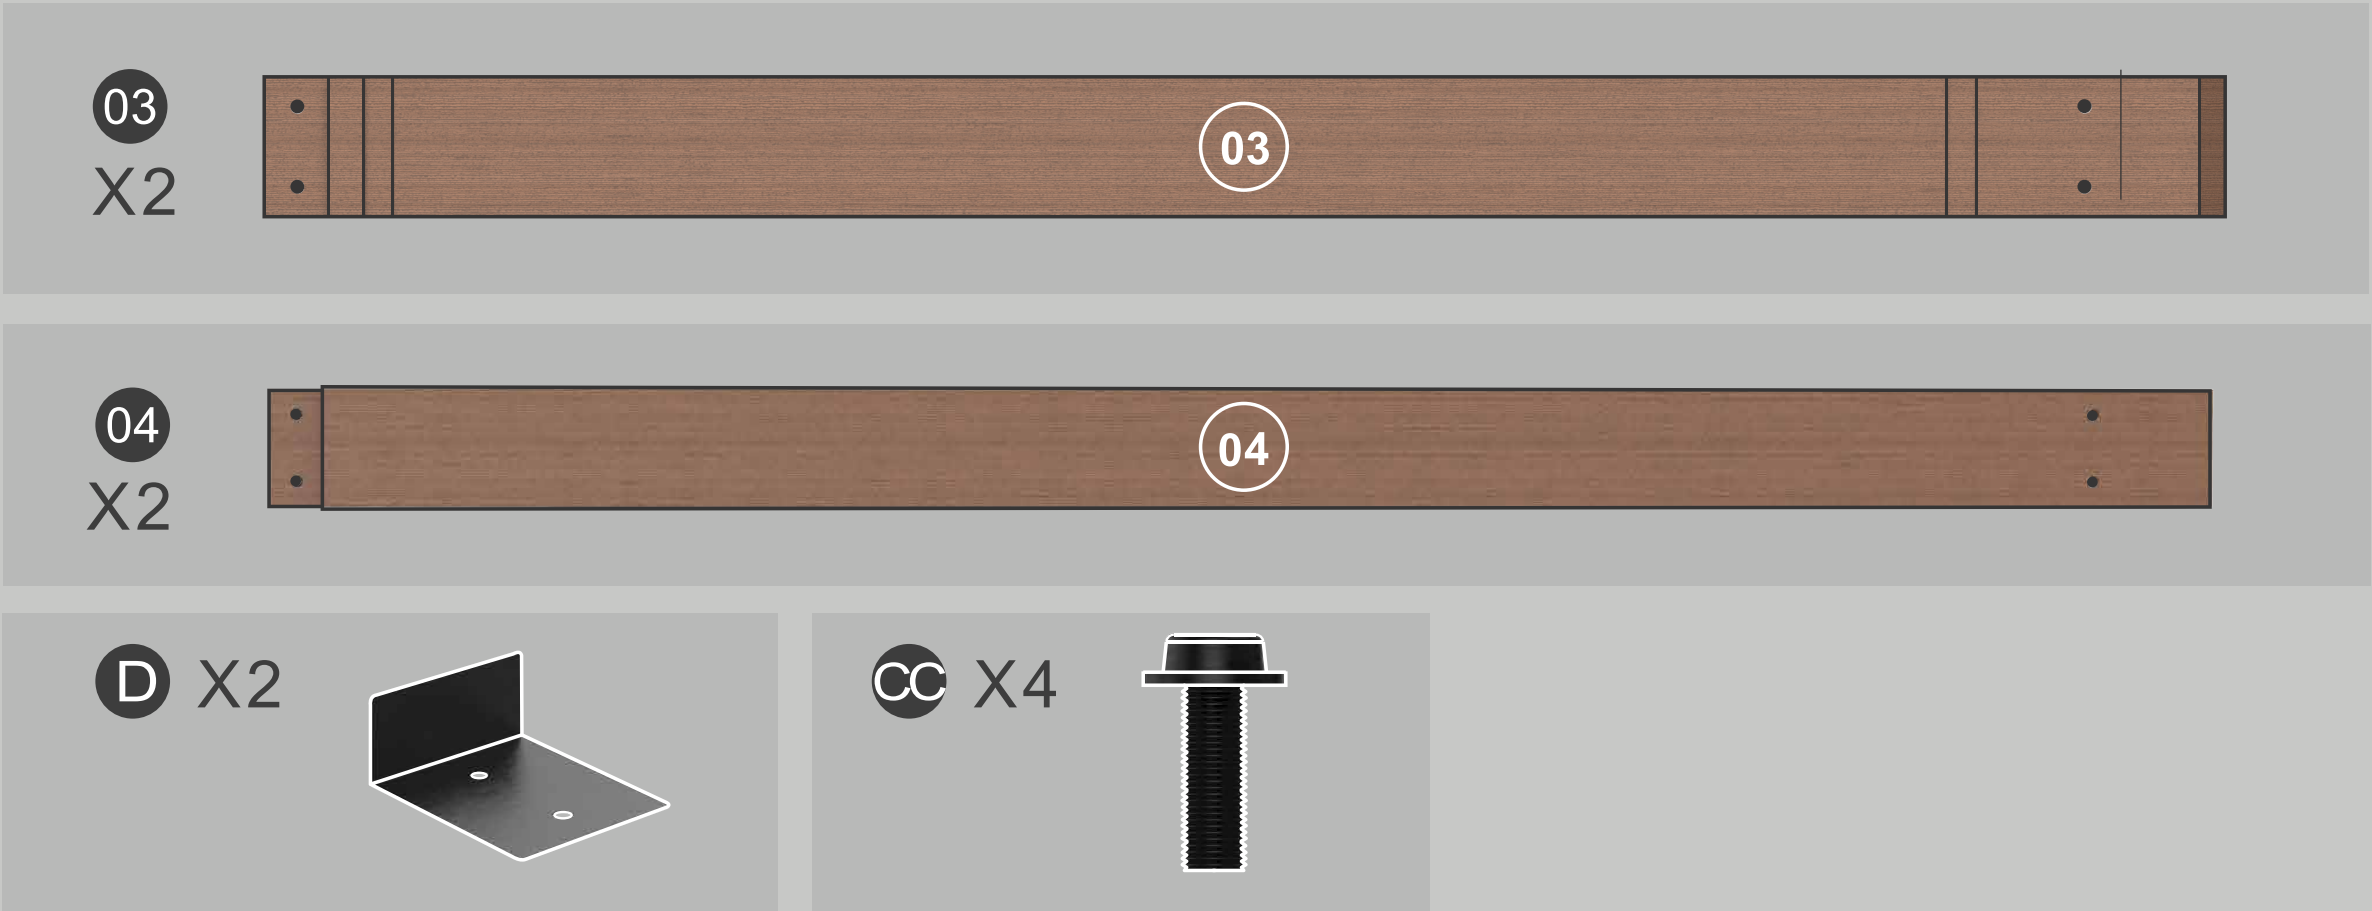



Step 3

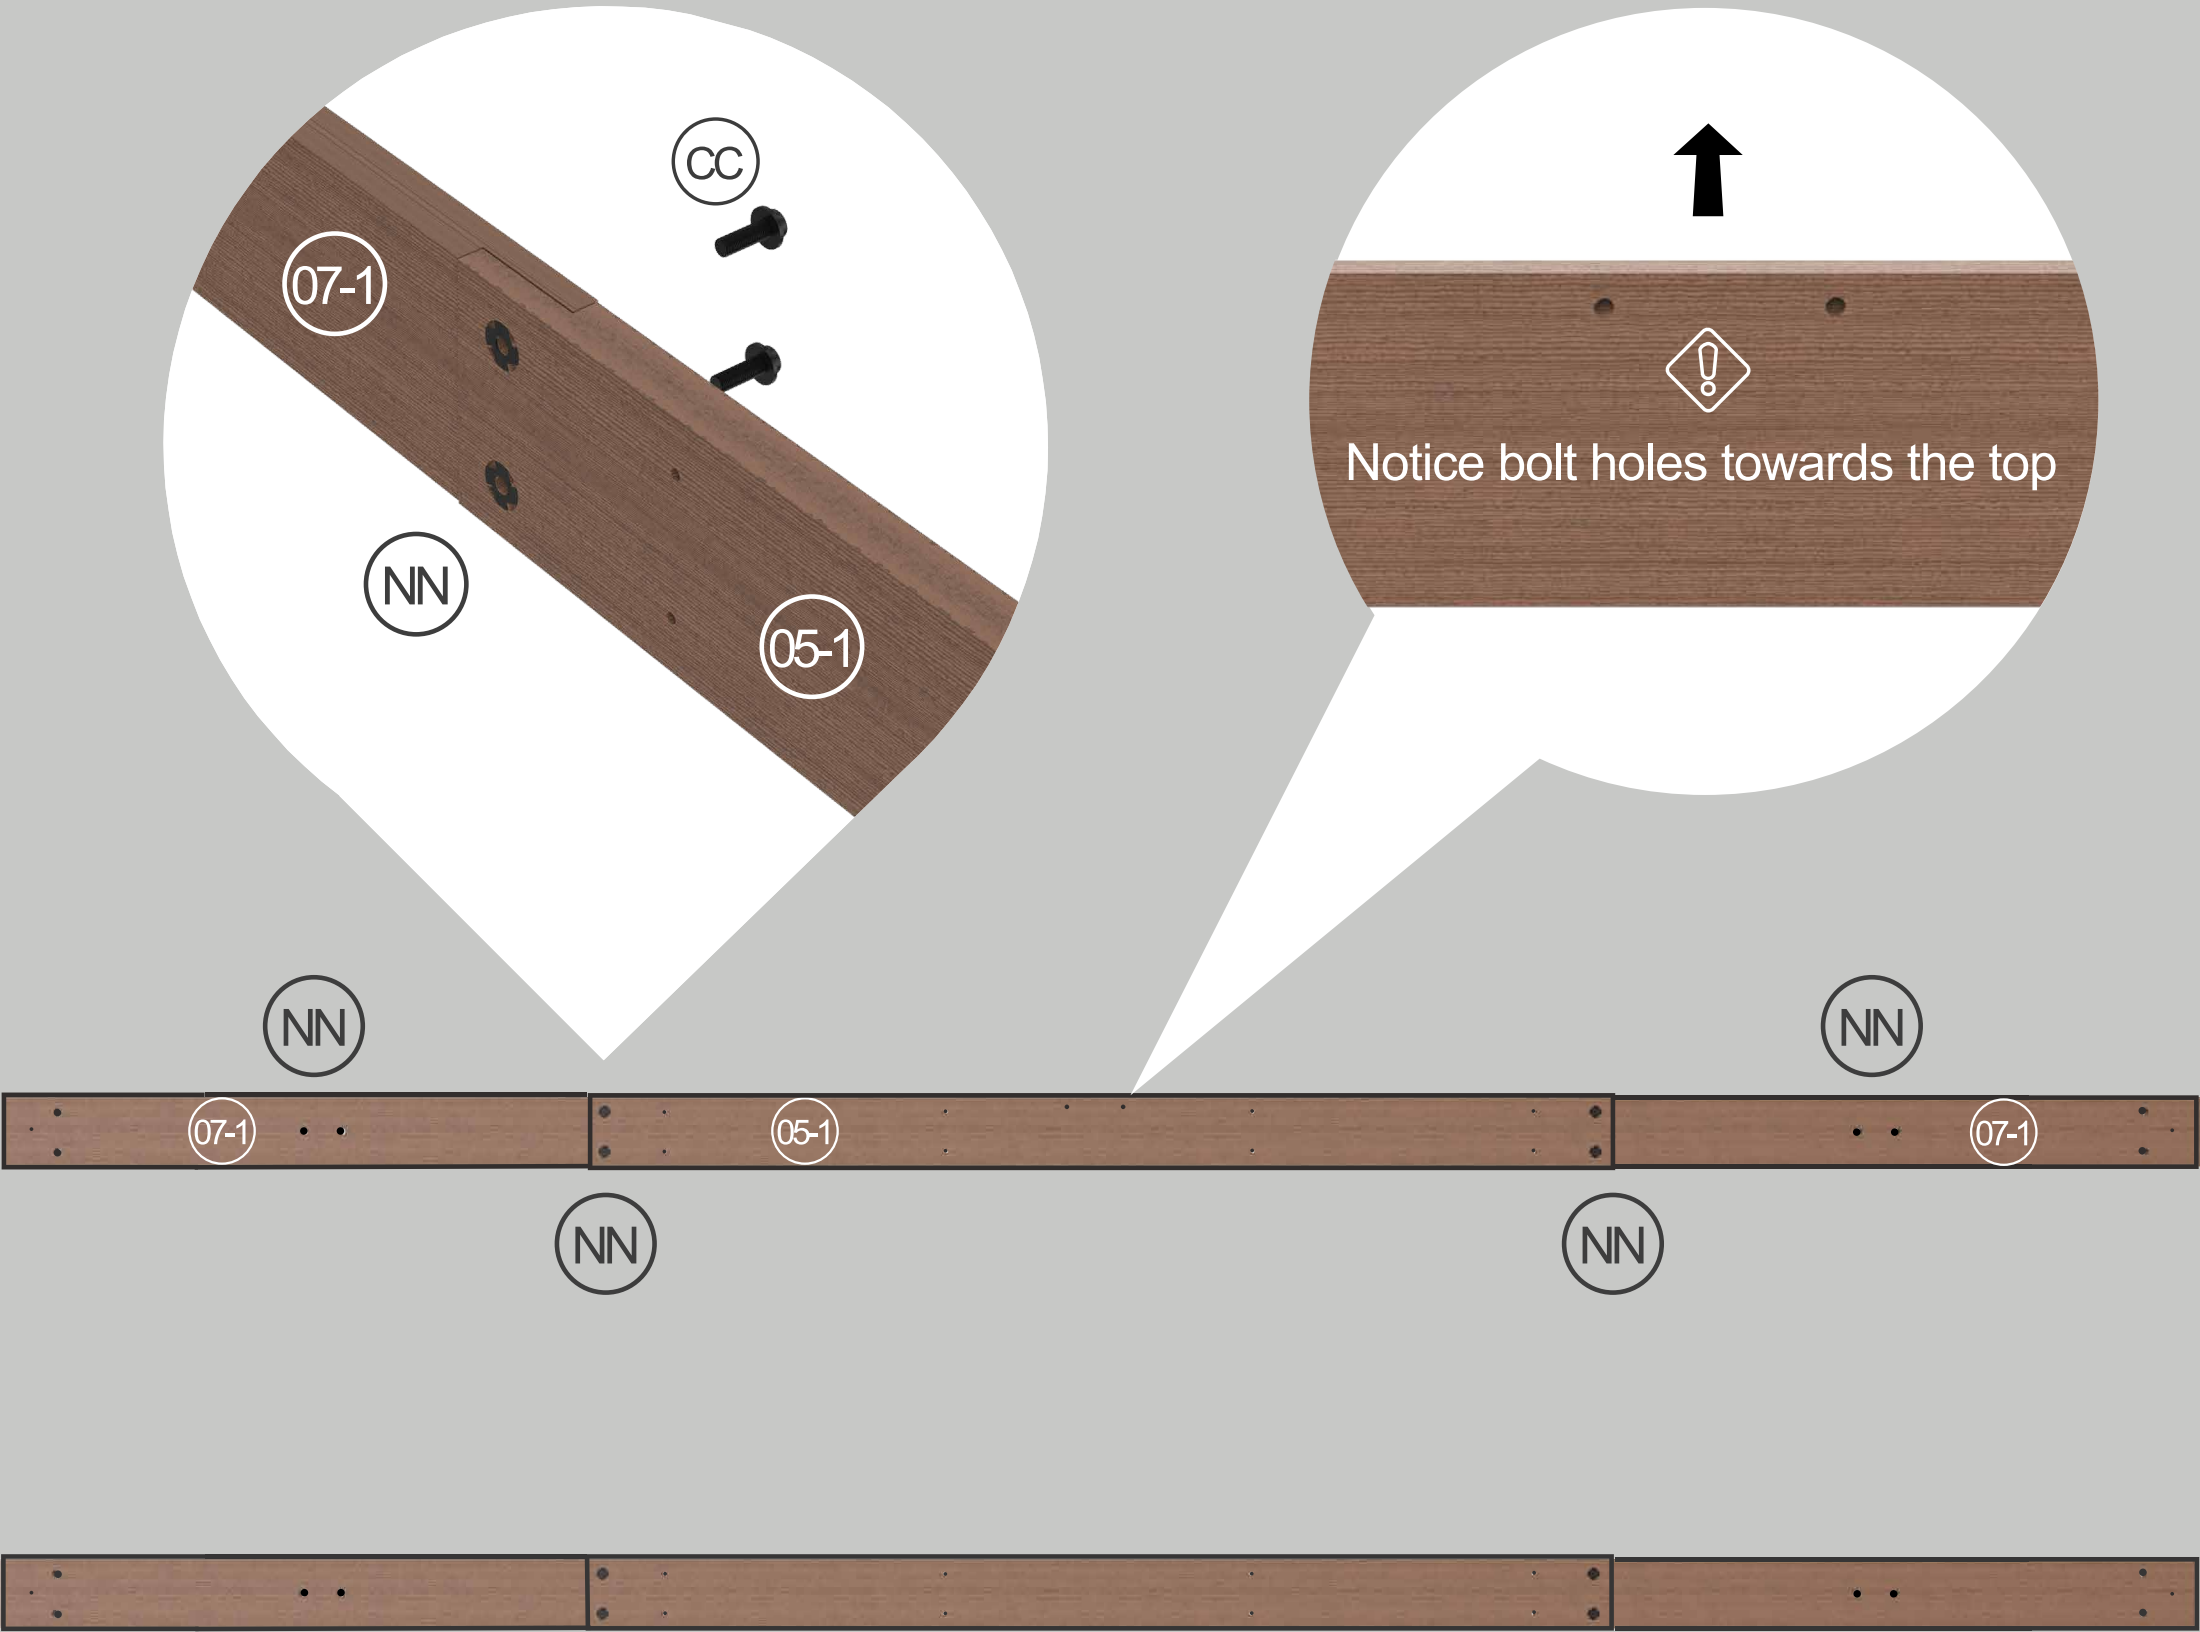





Step 4

Assemble the components installed in step 2 and Step 3, as shown in the following figure.

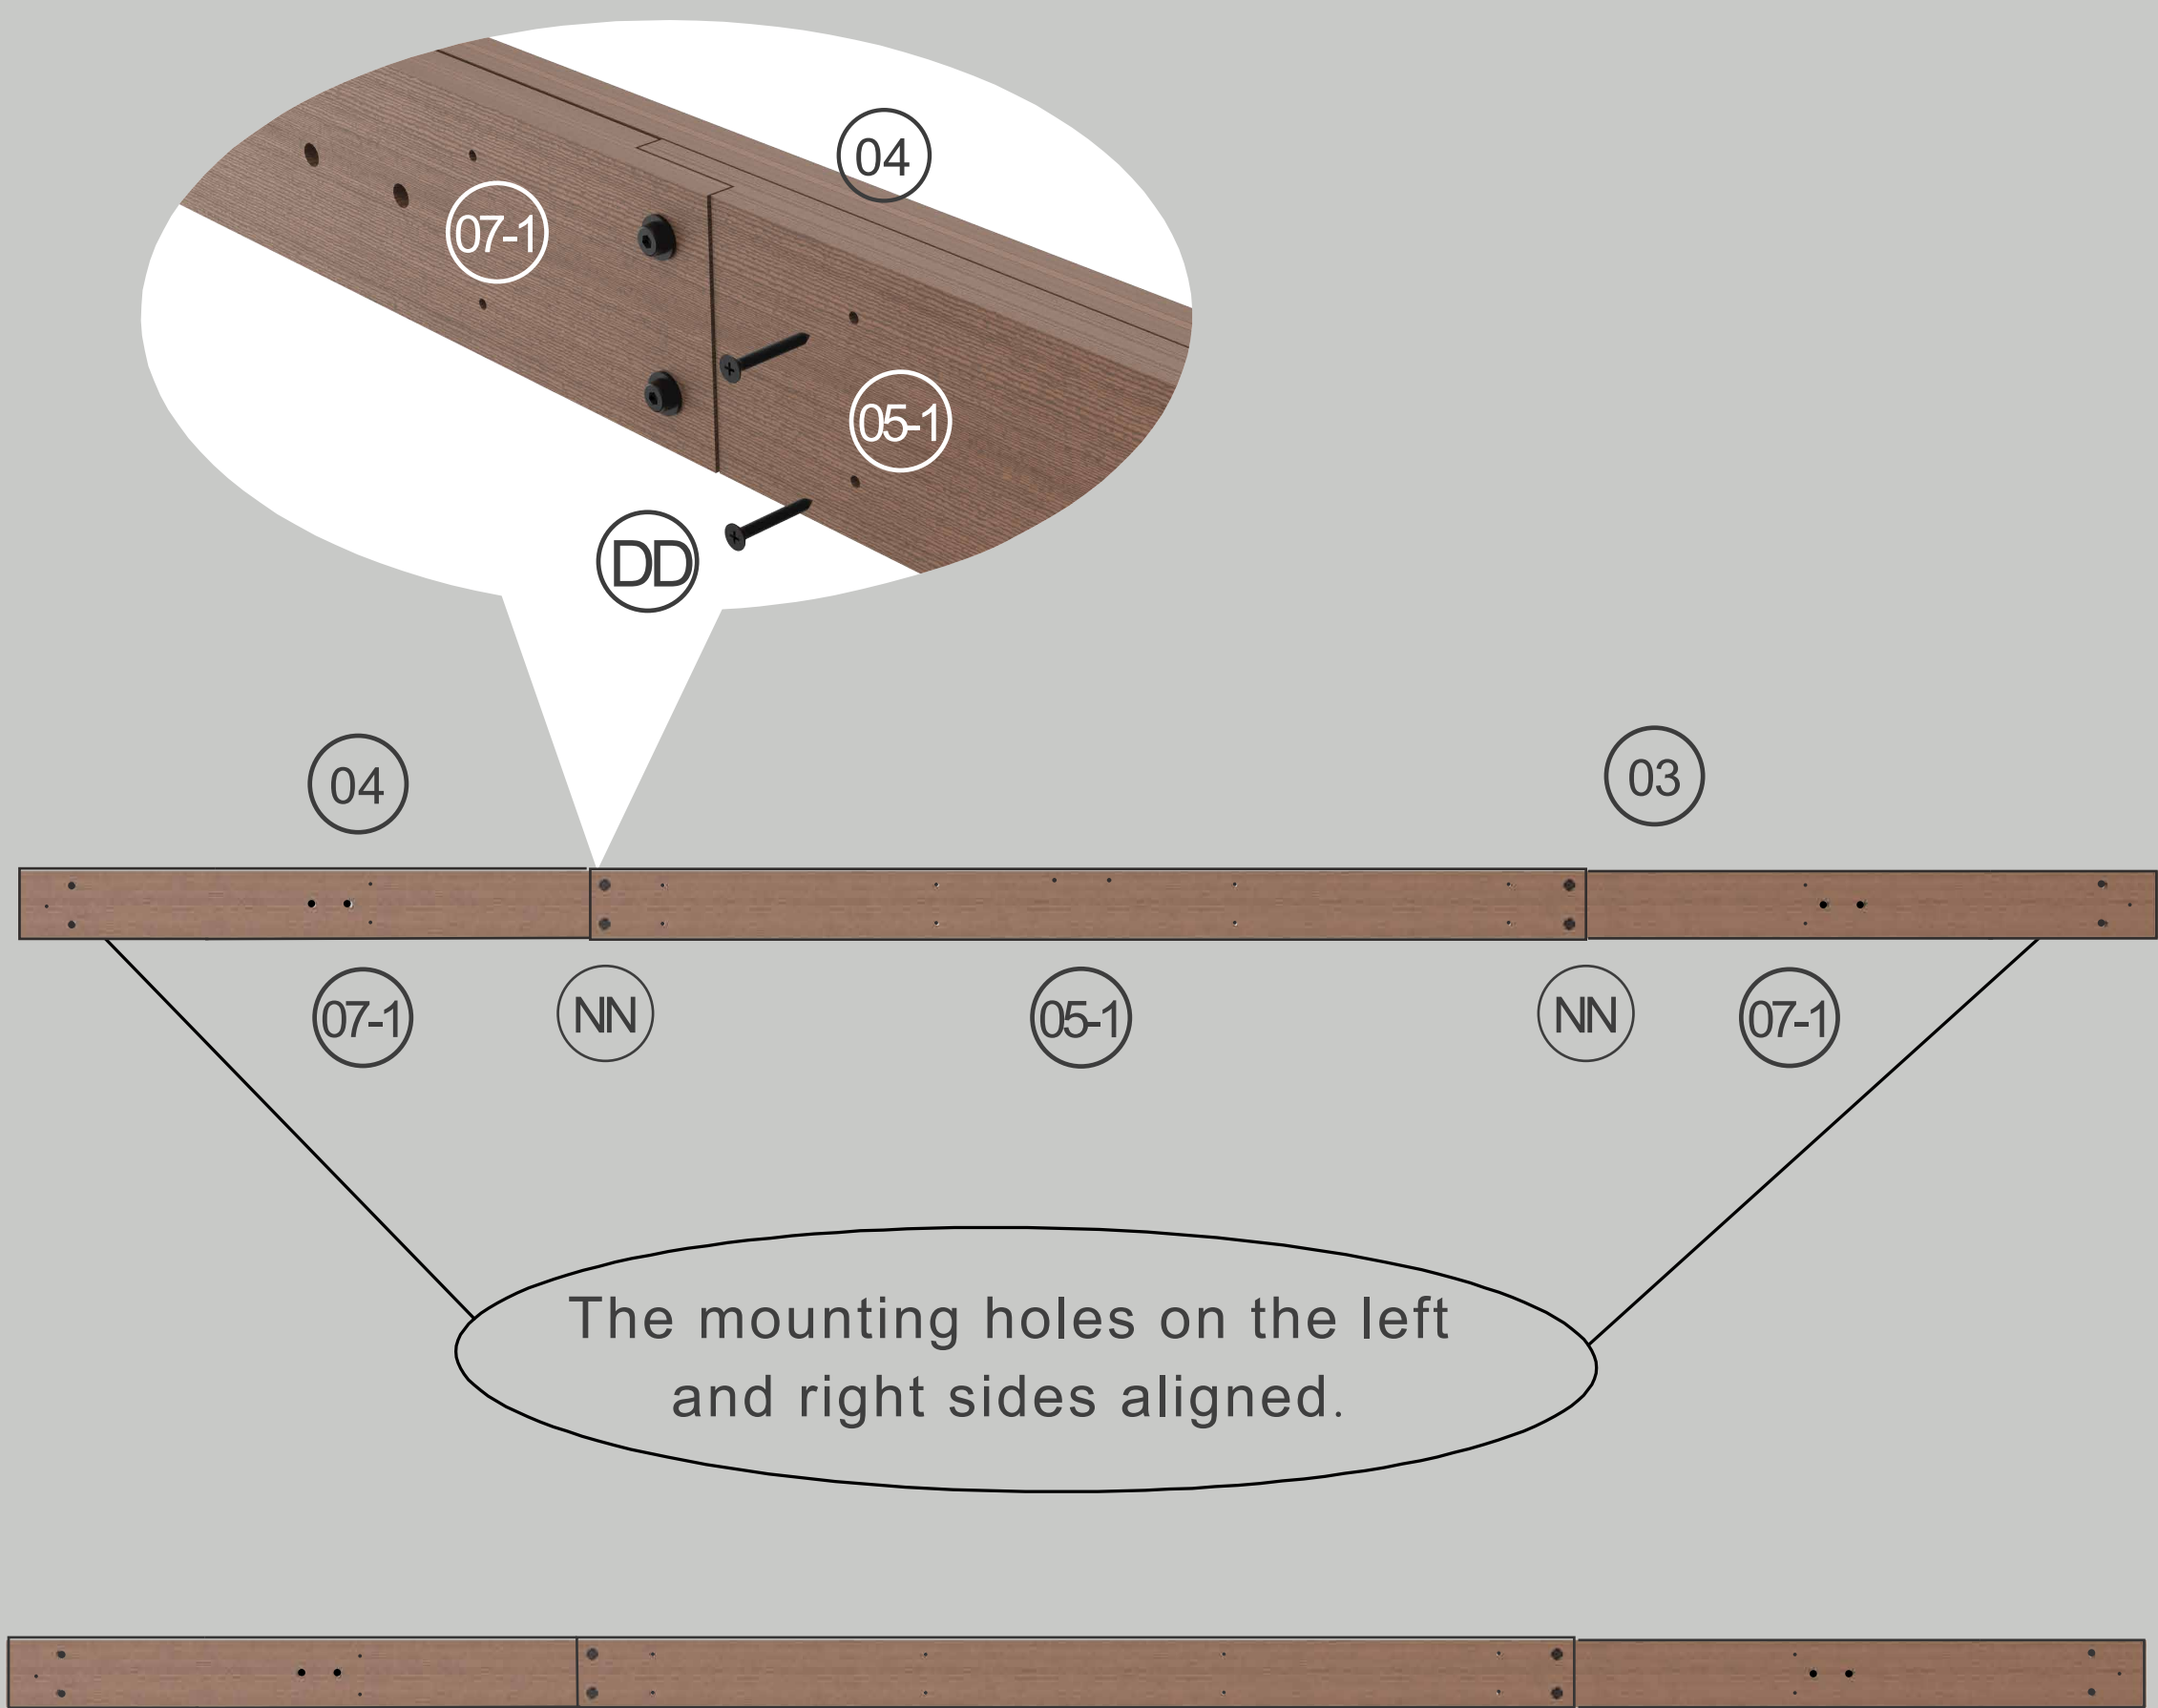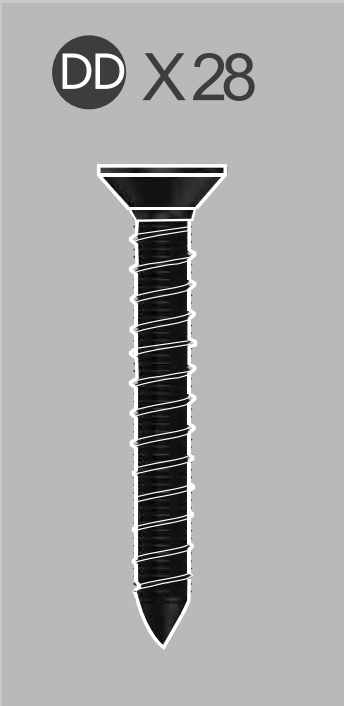




# Step 5

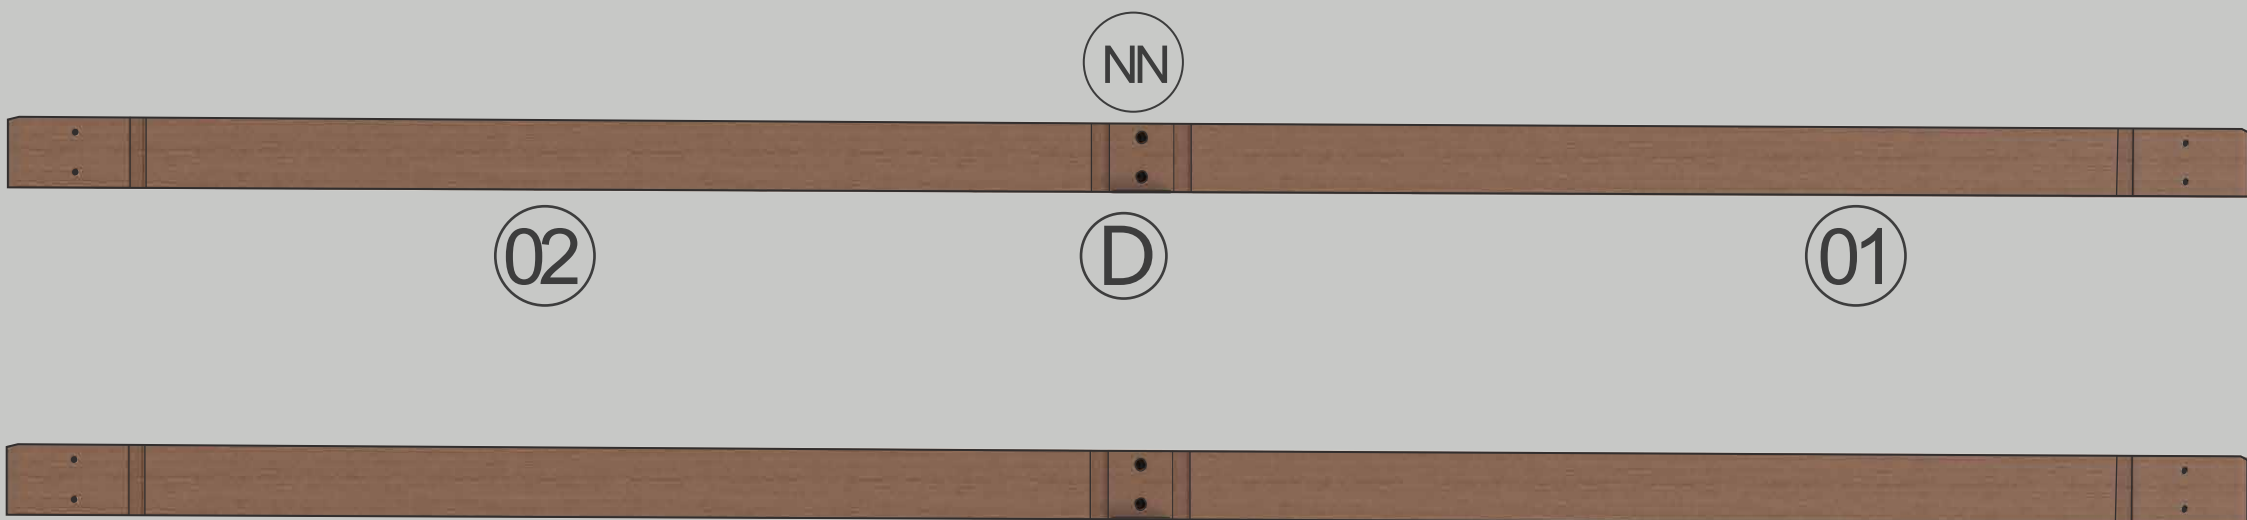
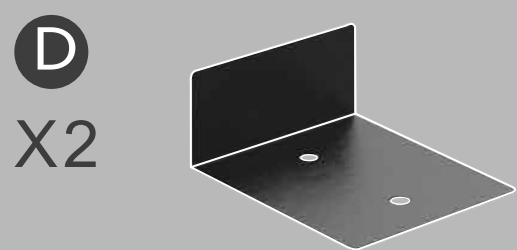


Step 6

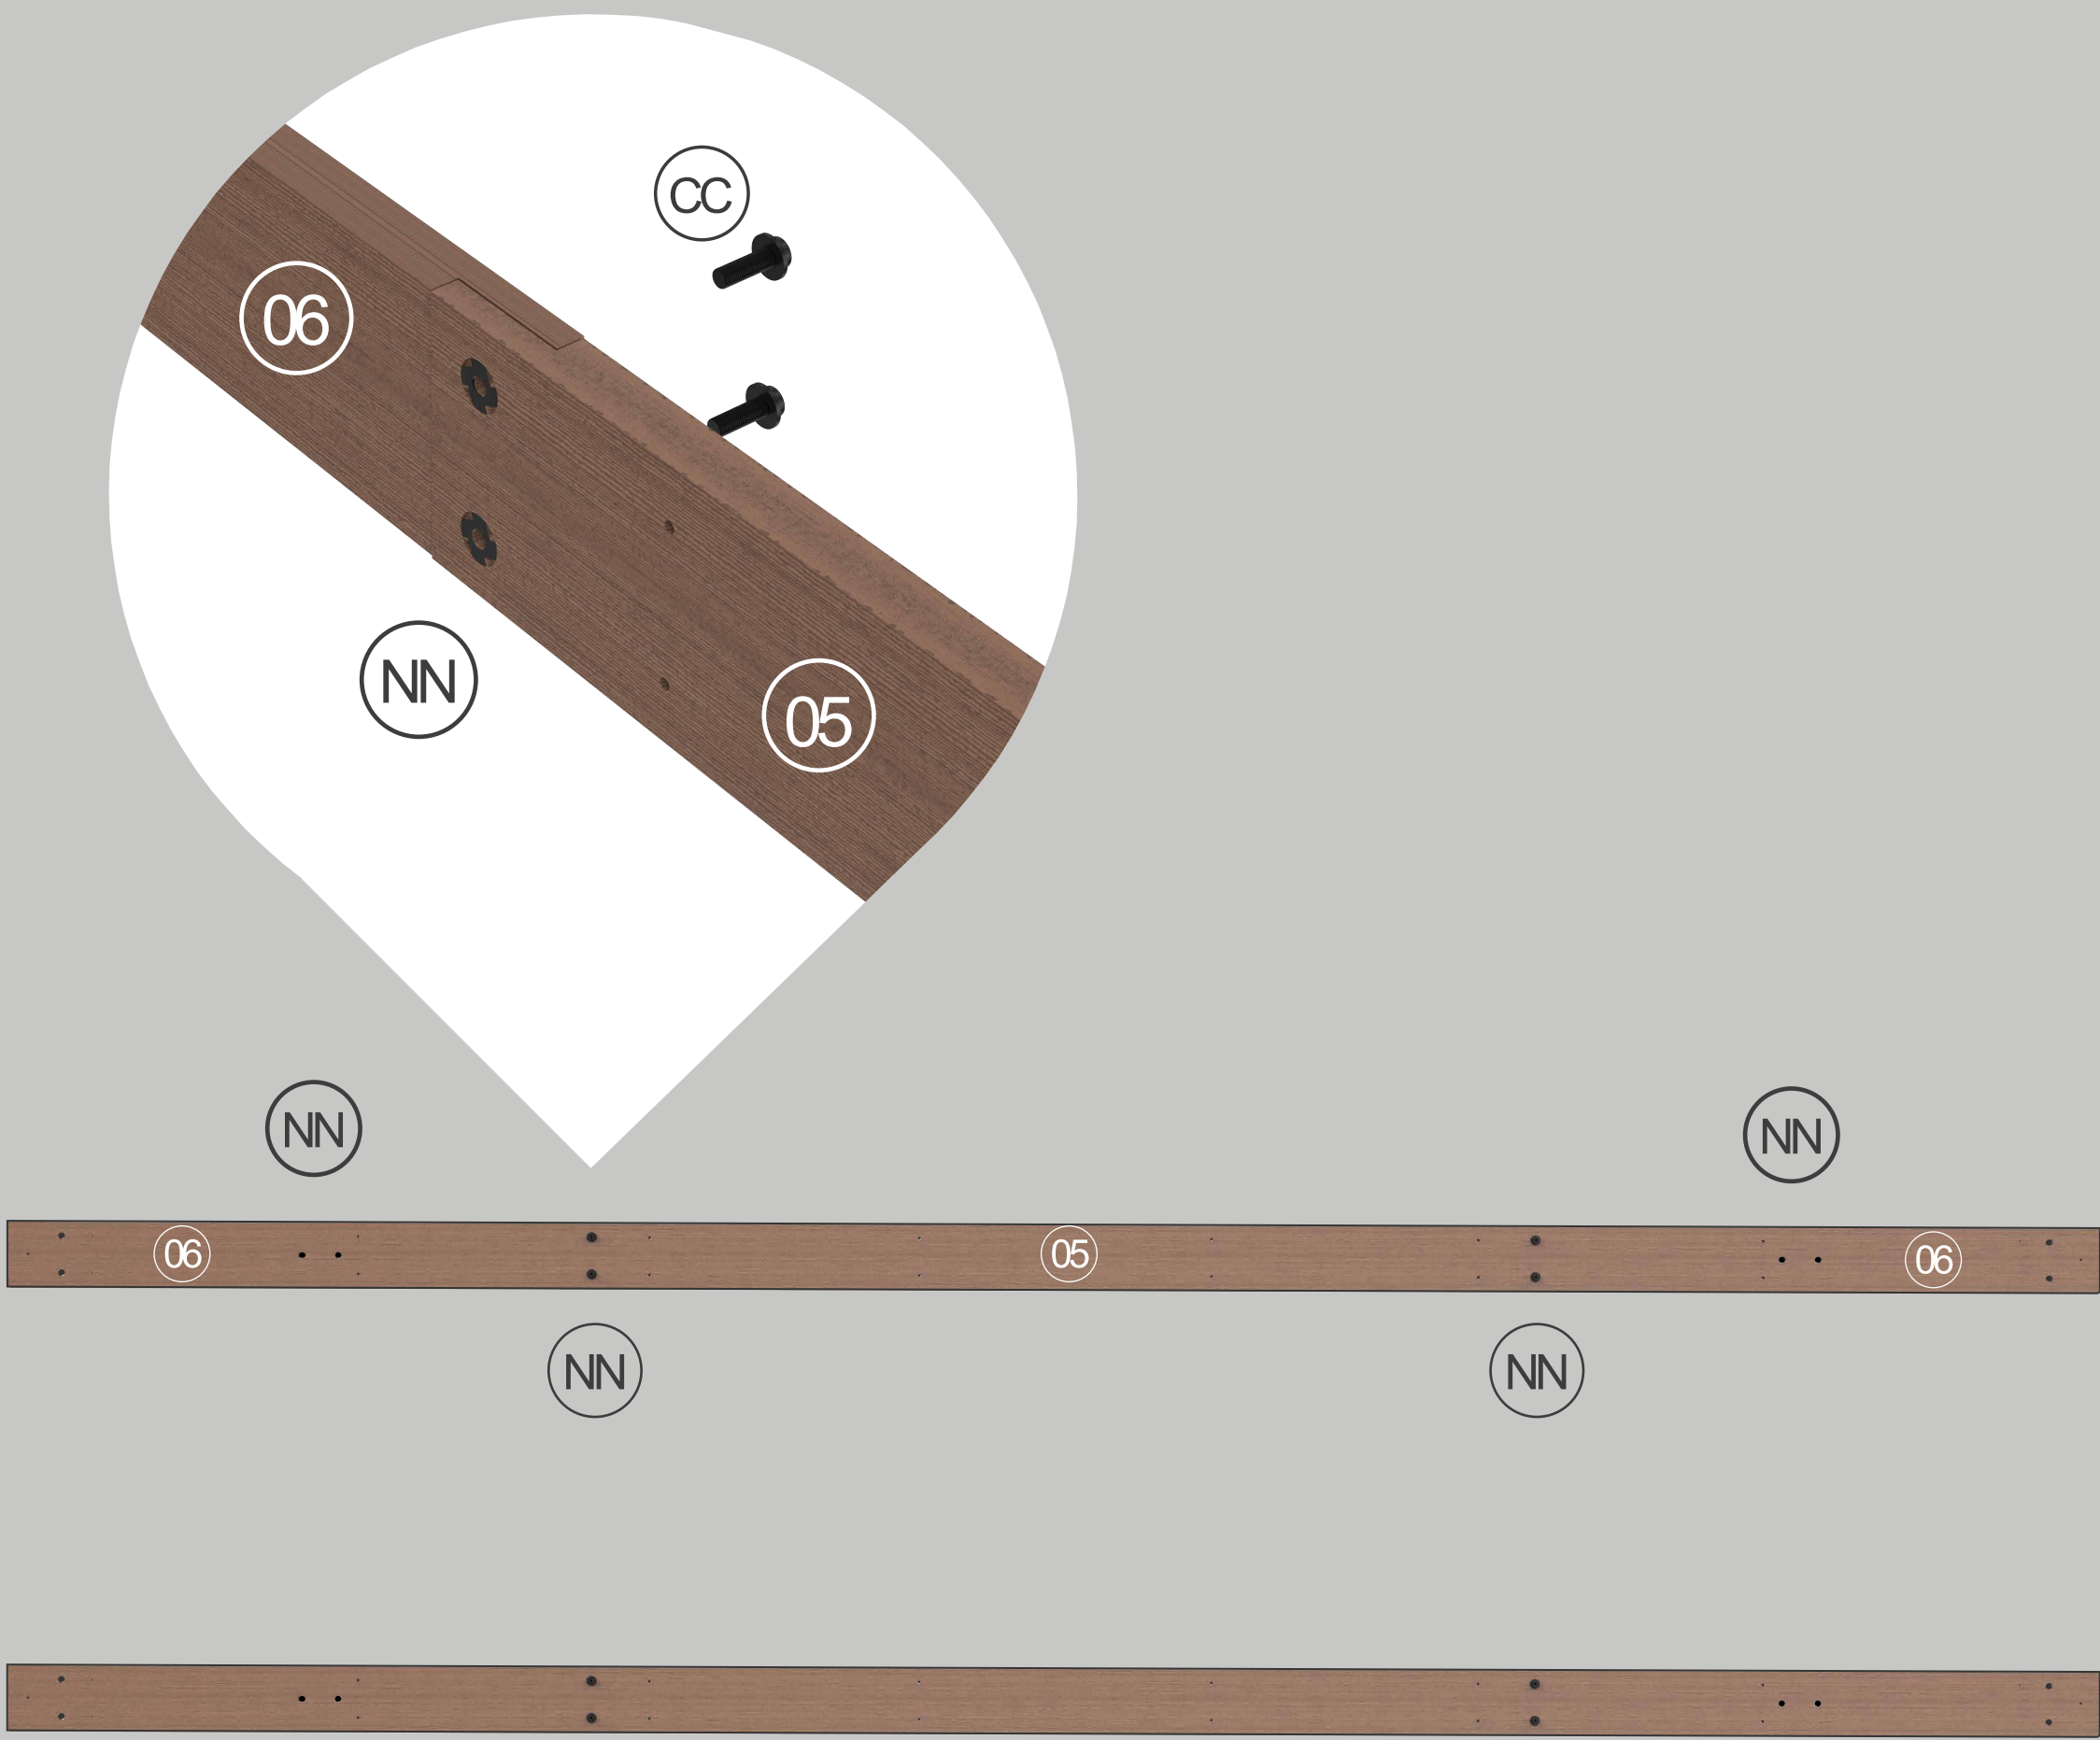

# Step 7

Assemble the components installed in step 5 and Step 6,as shown in the following figure.

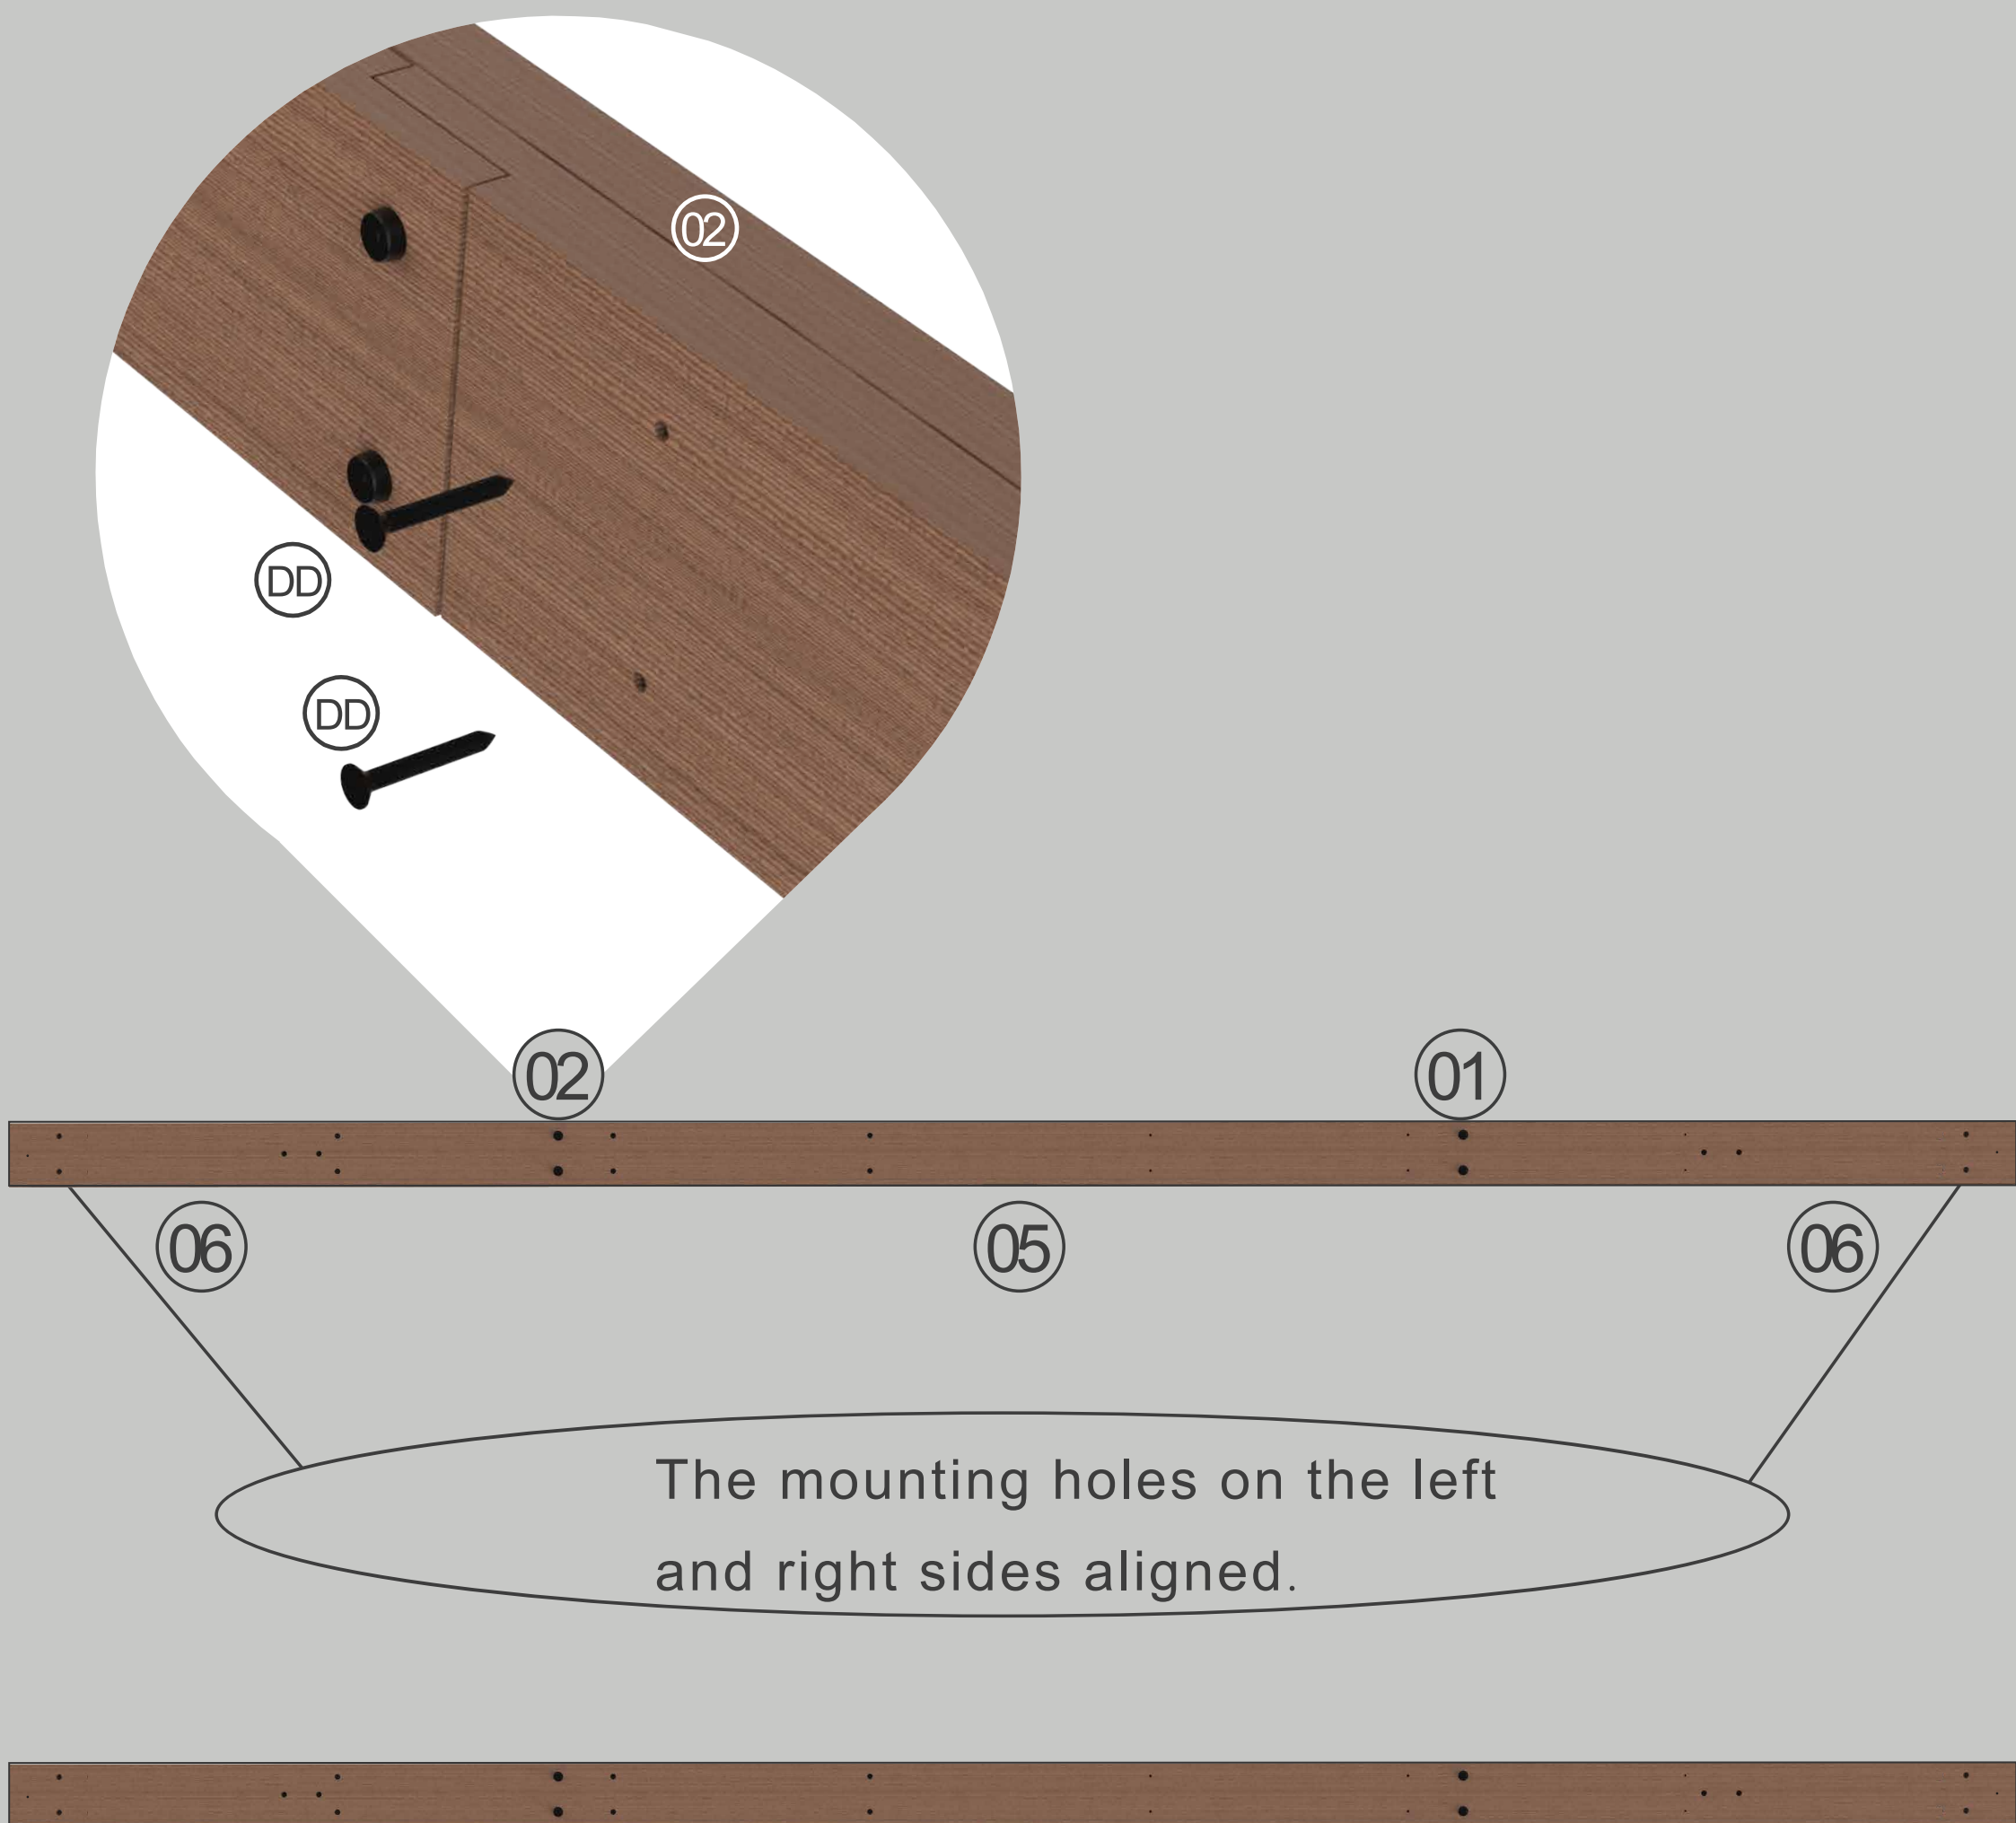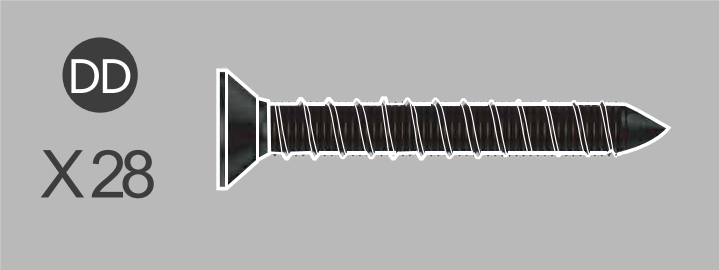




Step 8


AA  
X4





EE  
X4



E  
X4

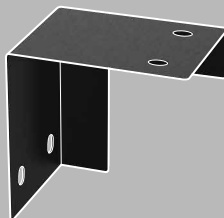

JJ  
X4

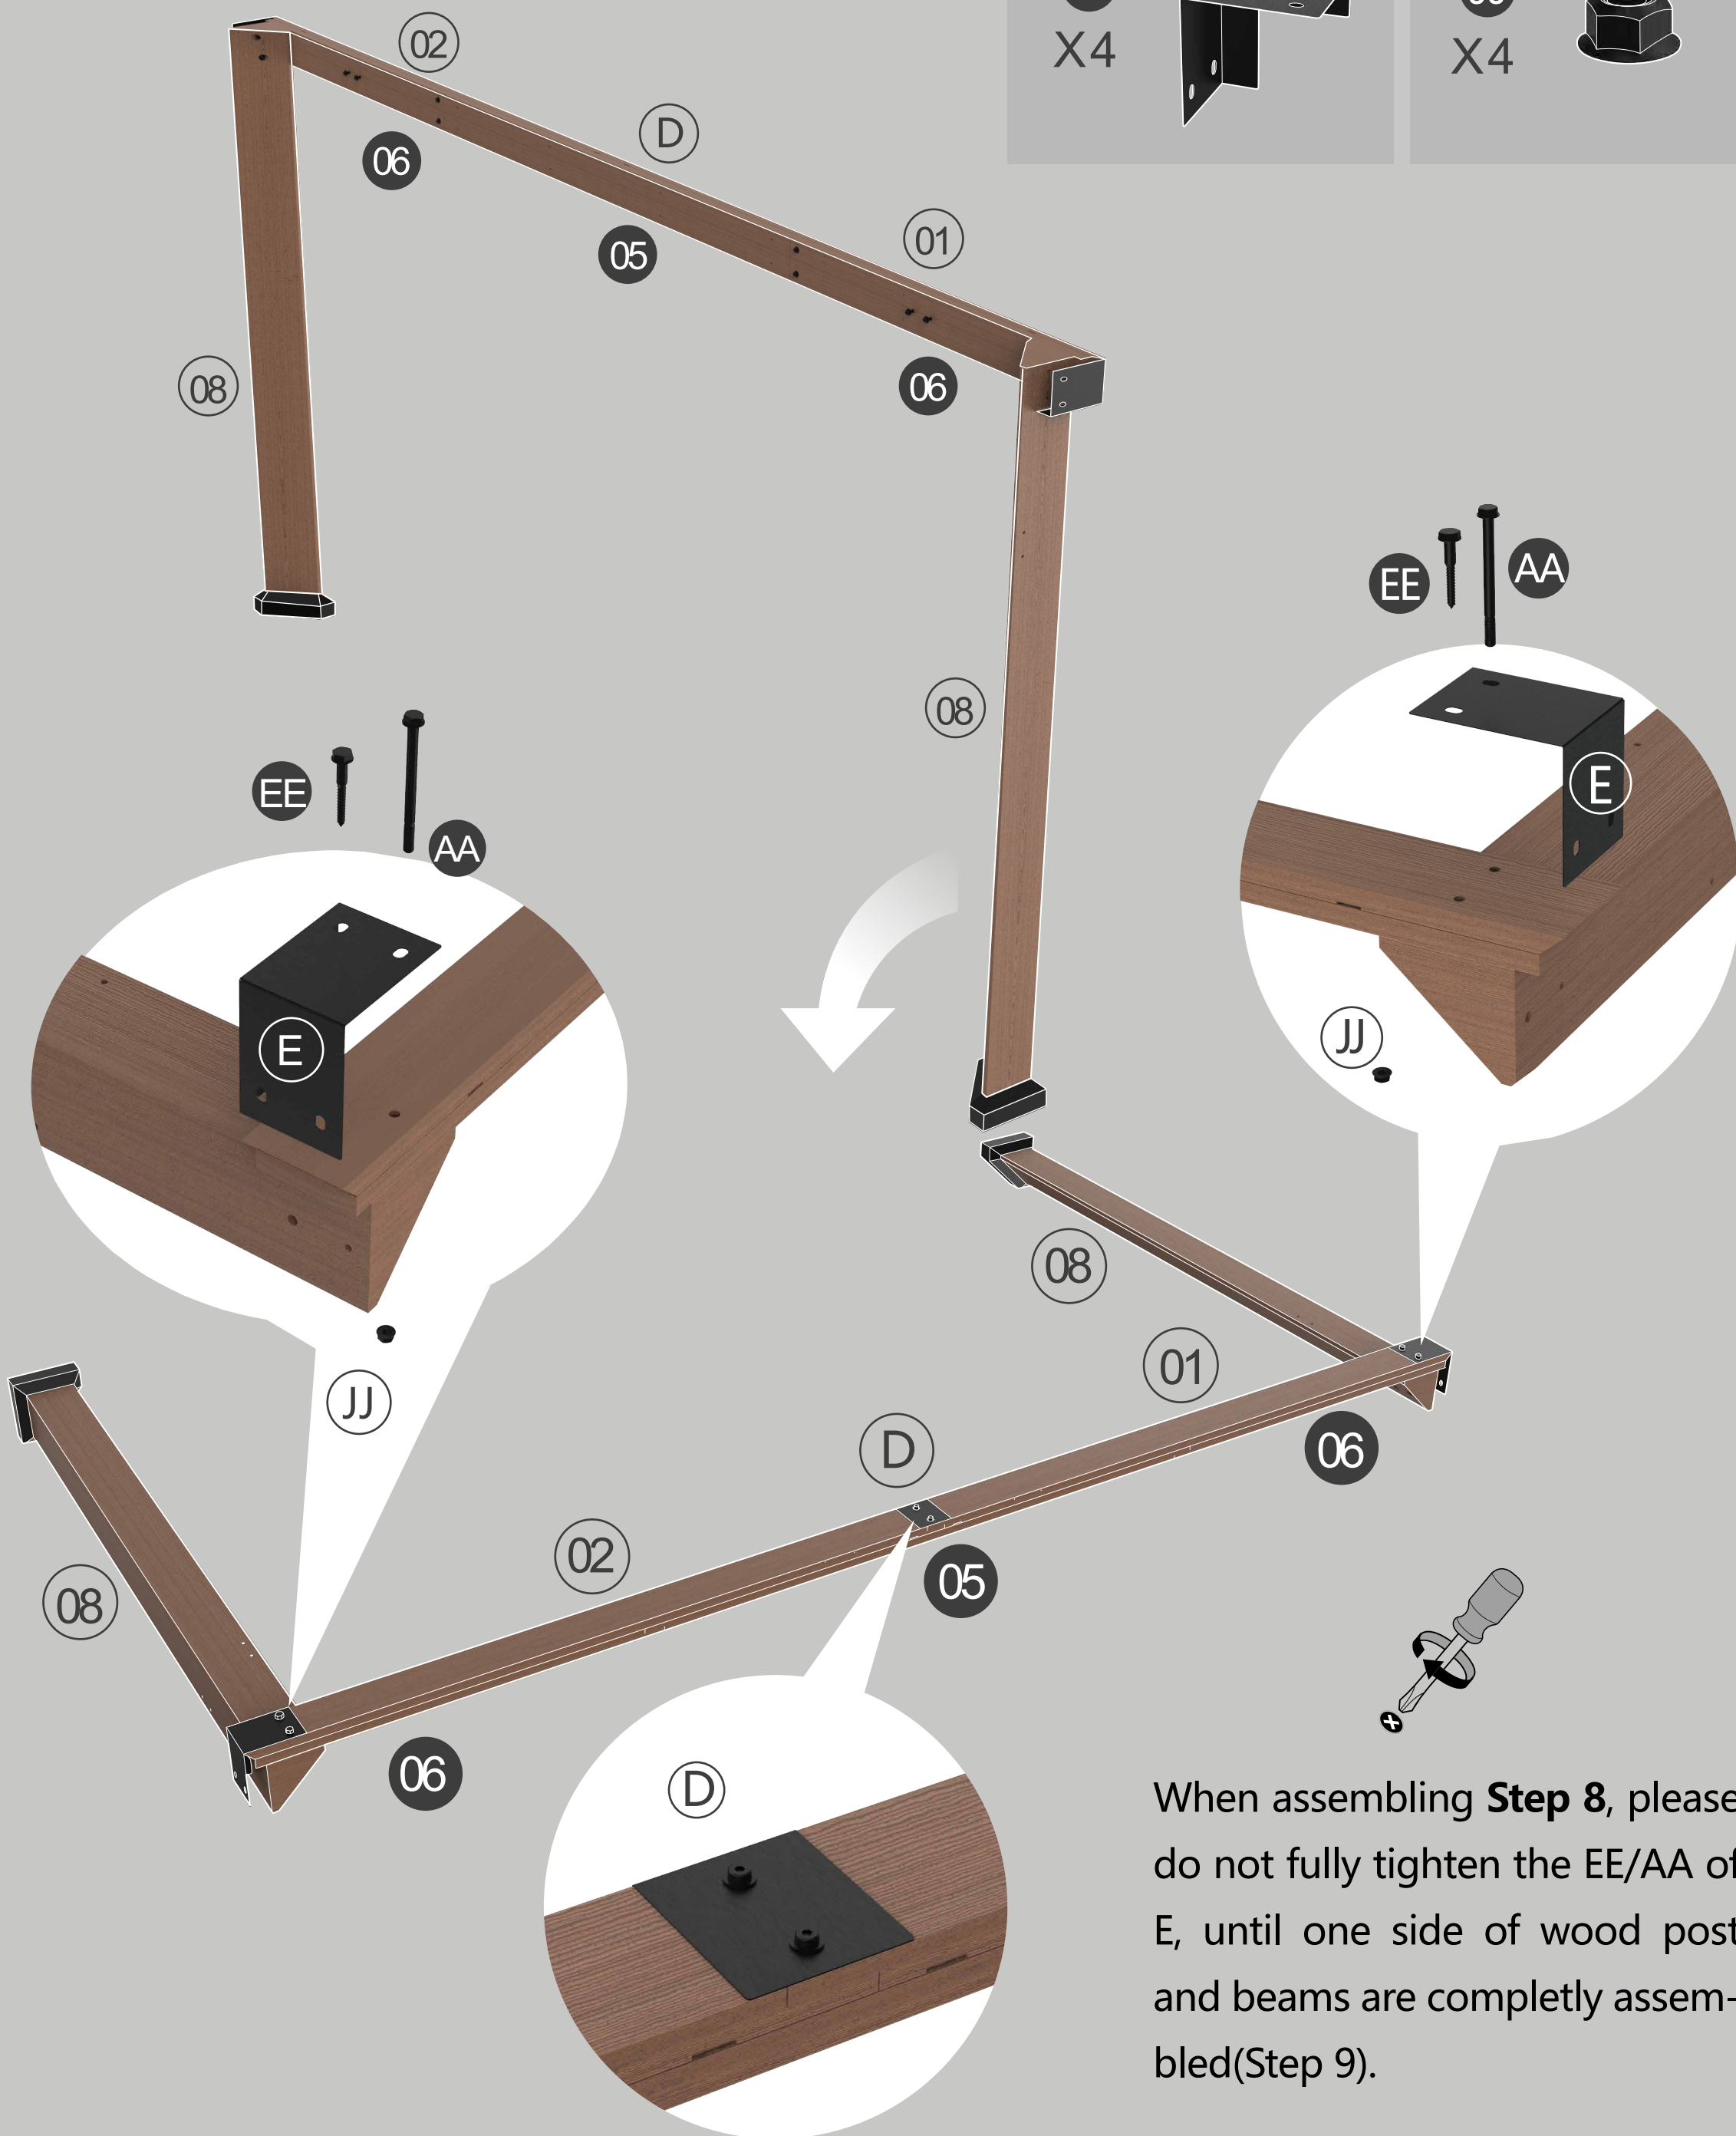


When assembling **Step 8**, please do not fully tighten the EE/AA of E, until one side of wood post and beams are completely assembled(Step 9).

Step 9


EE

X4




JJ


X4

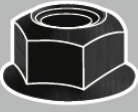

AA


X4



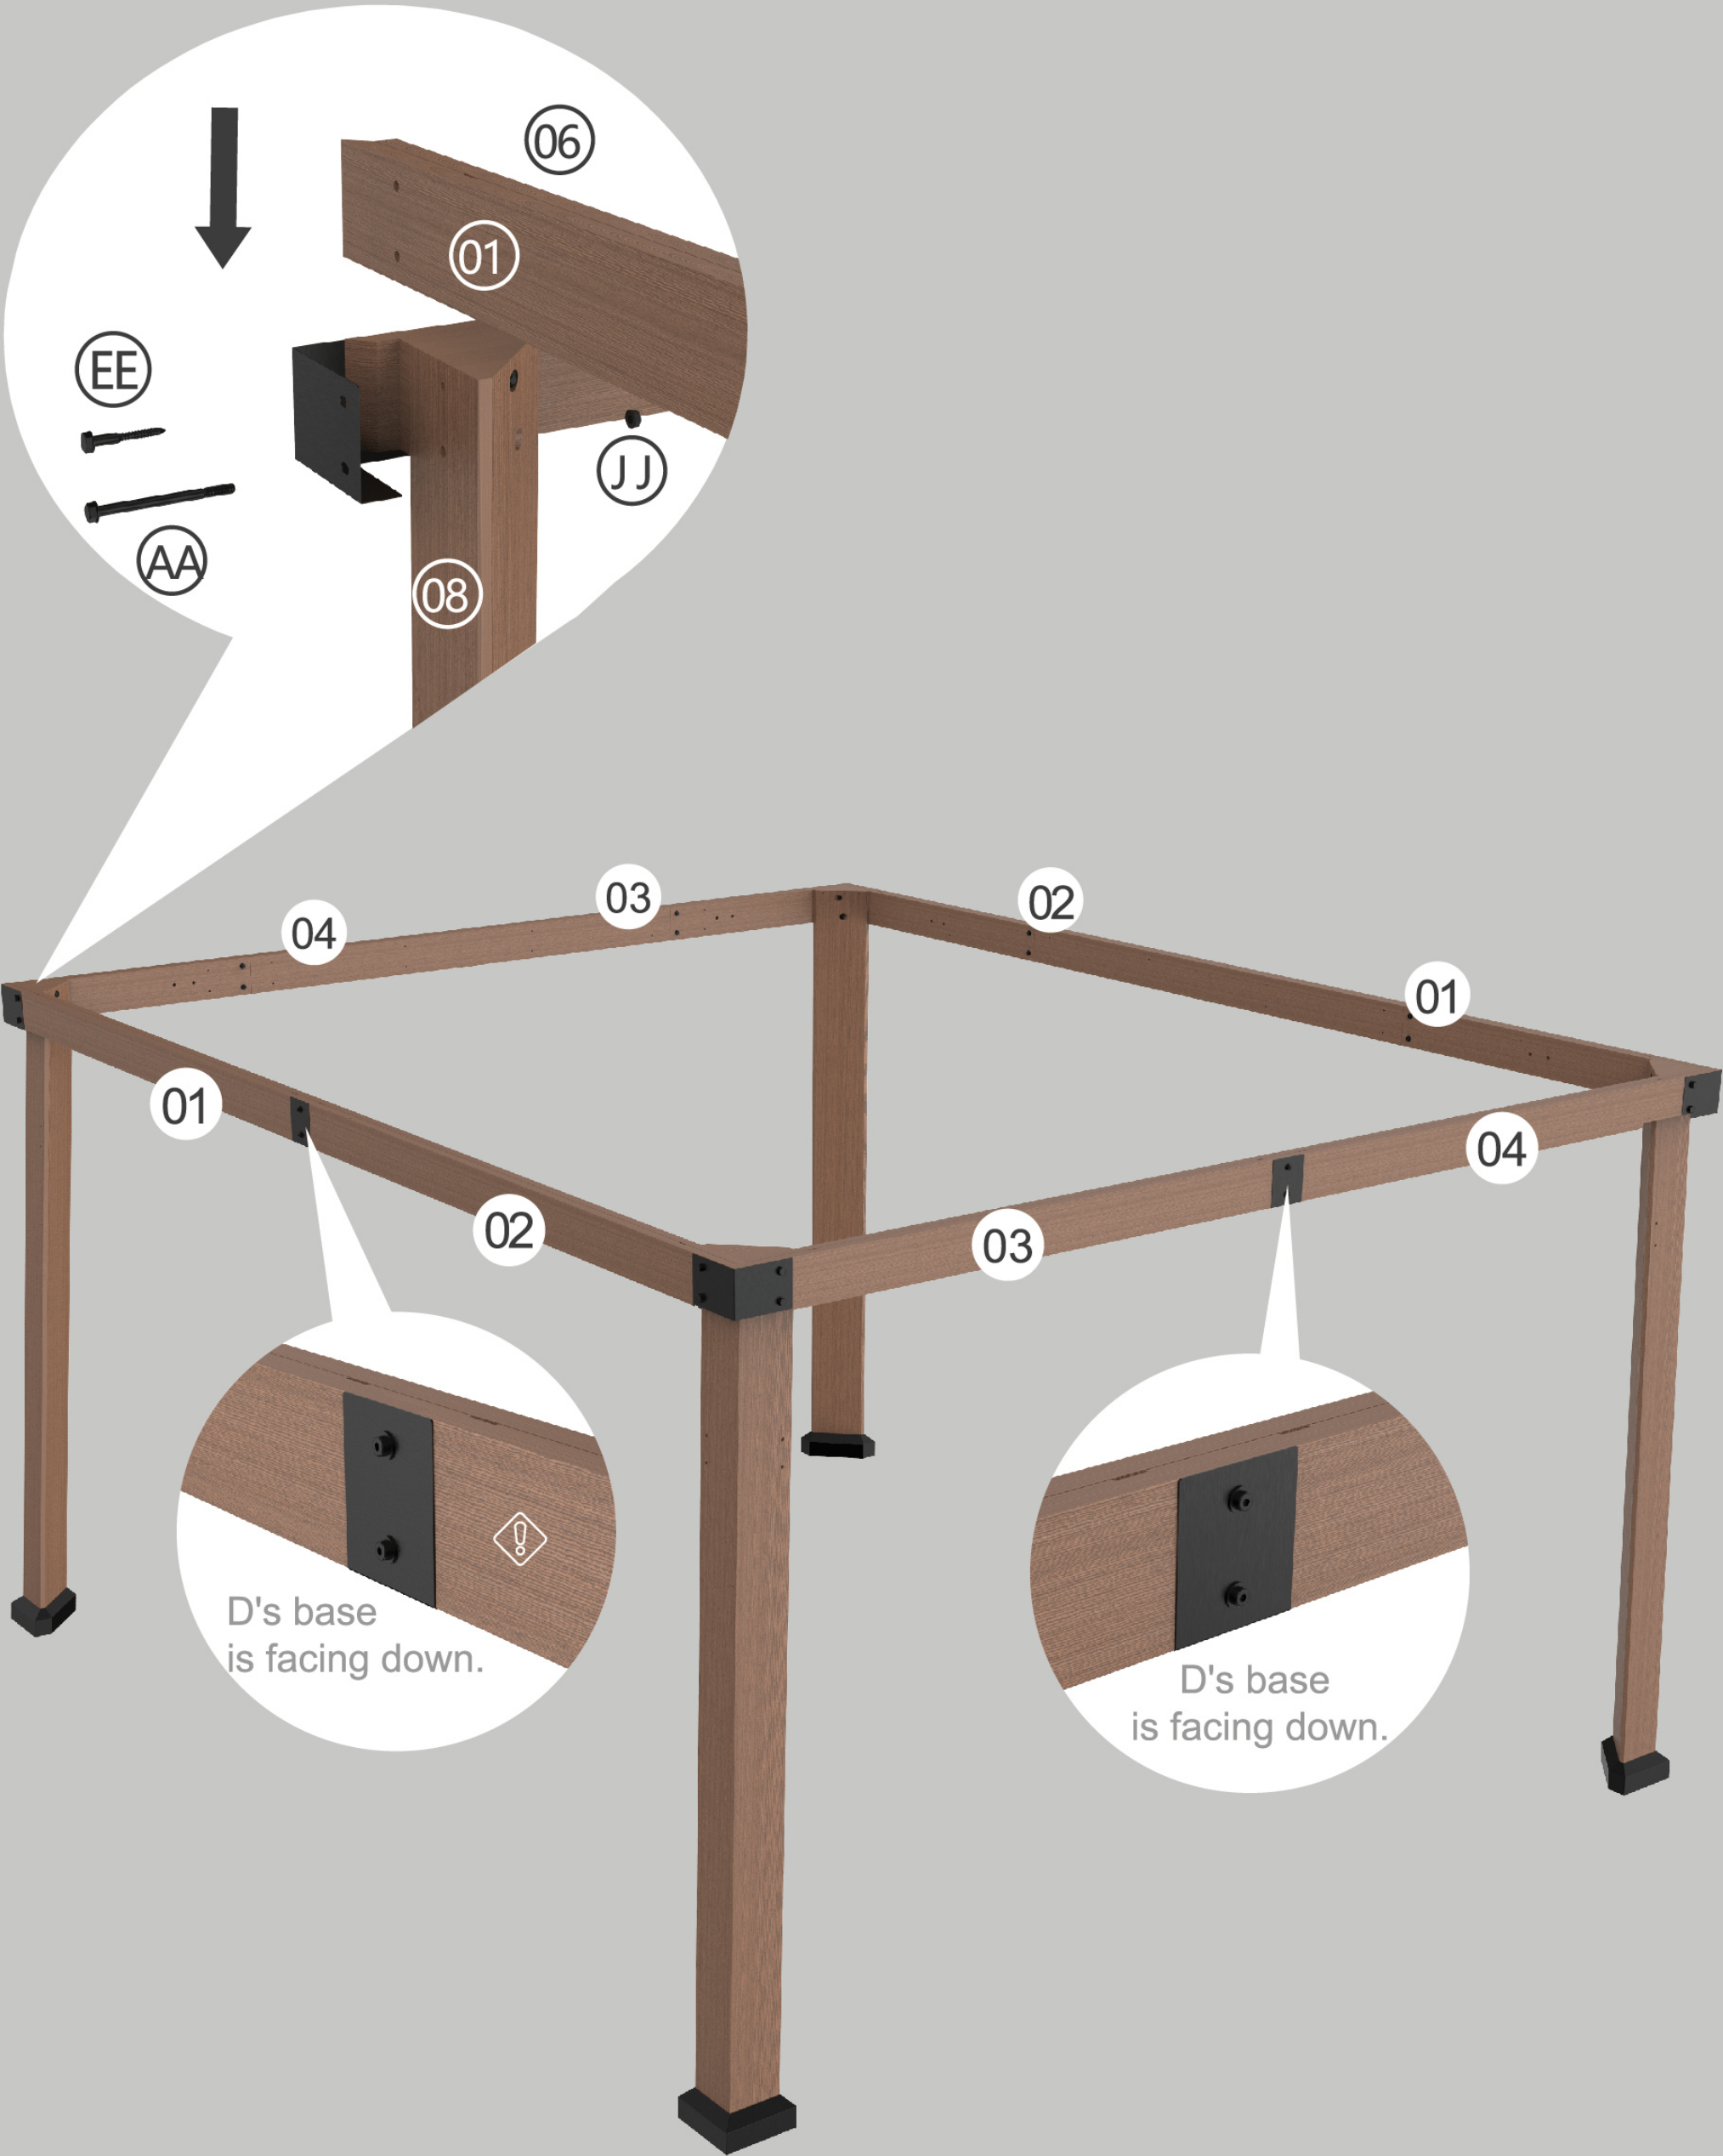




# Step 10

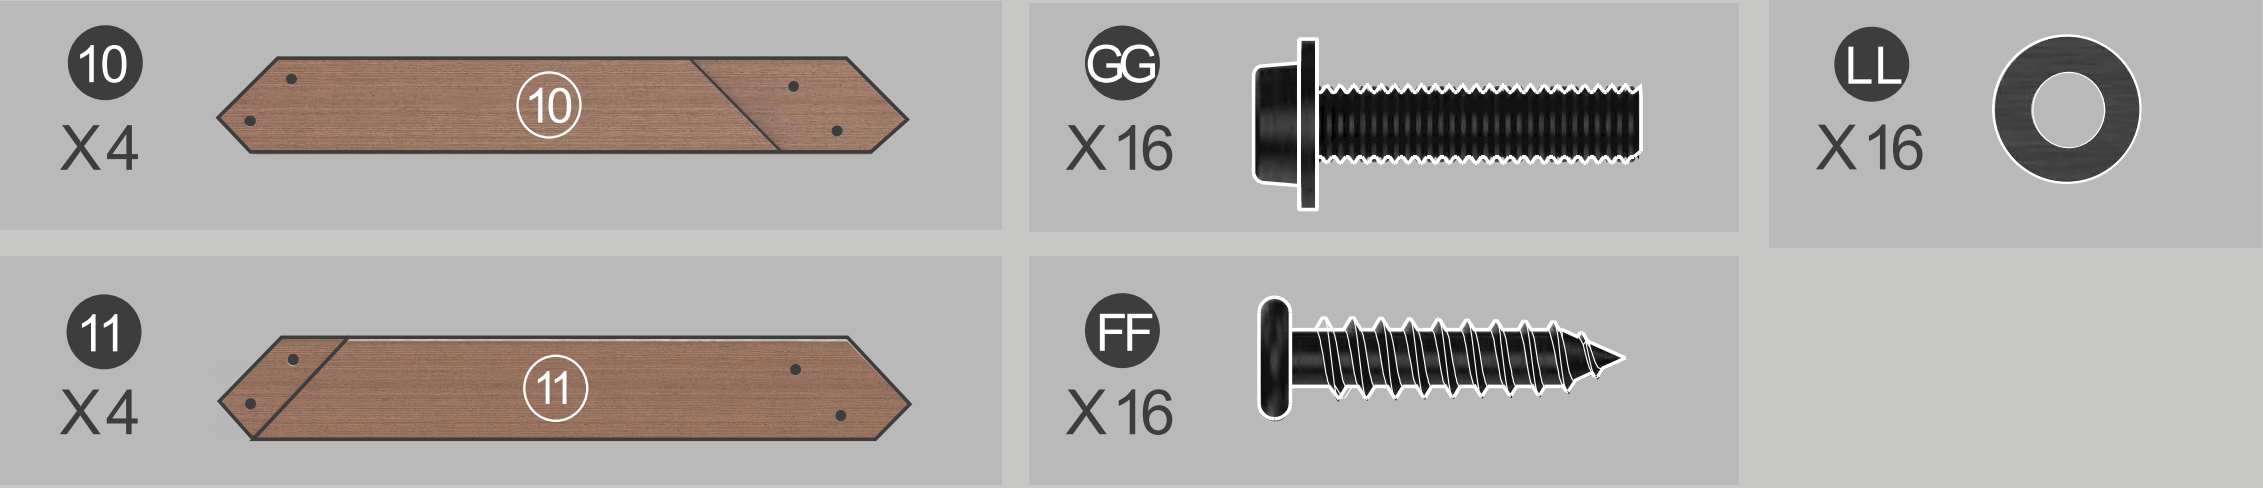


! d1 = d2

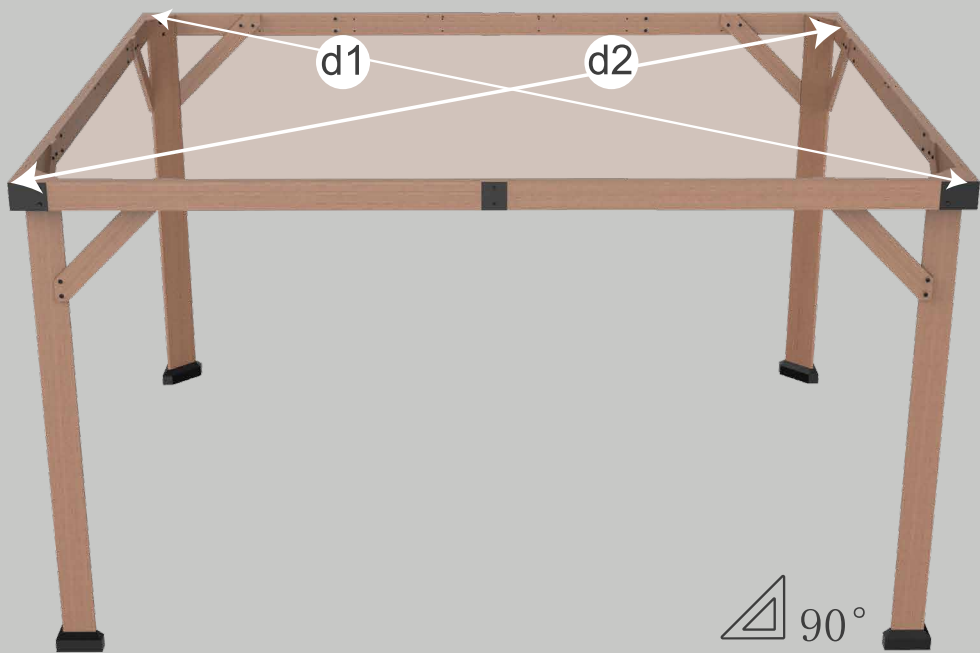

## Tips:

Please measure to make sure *the length of d1 is equal to d2* before moving to next step to ensure a square frame and best results.Keep the beam at right angles to the post,the post at right angles to the ground,and keep the beam horizontal.

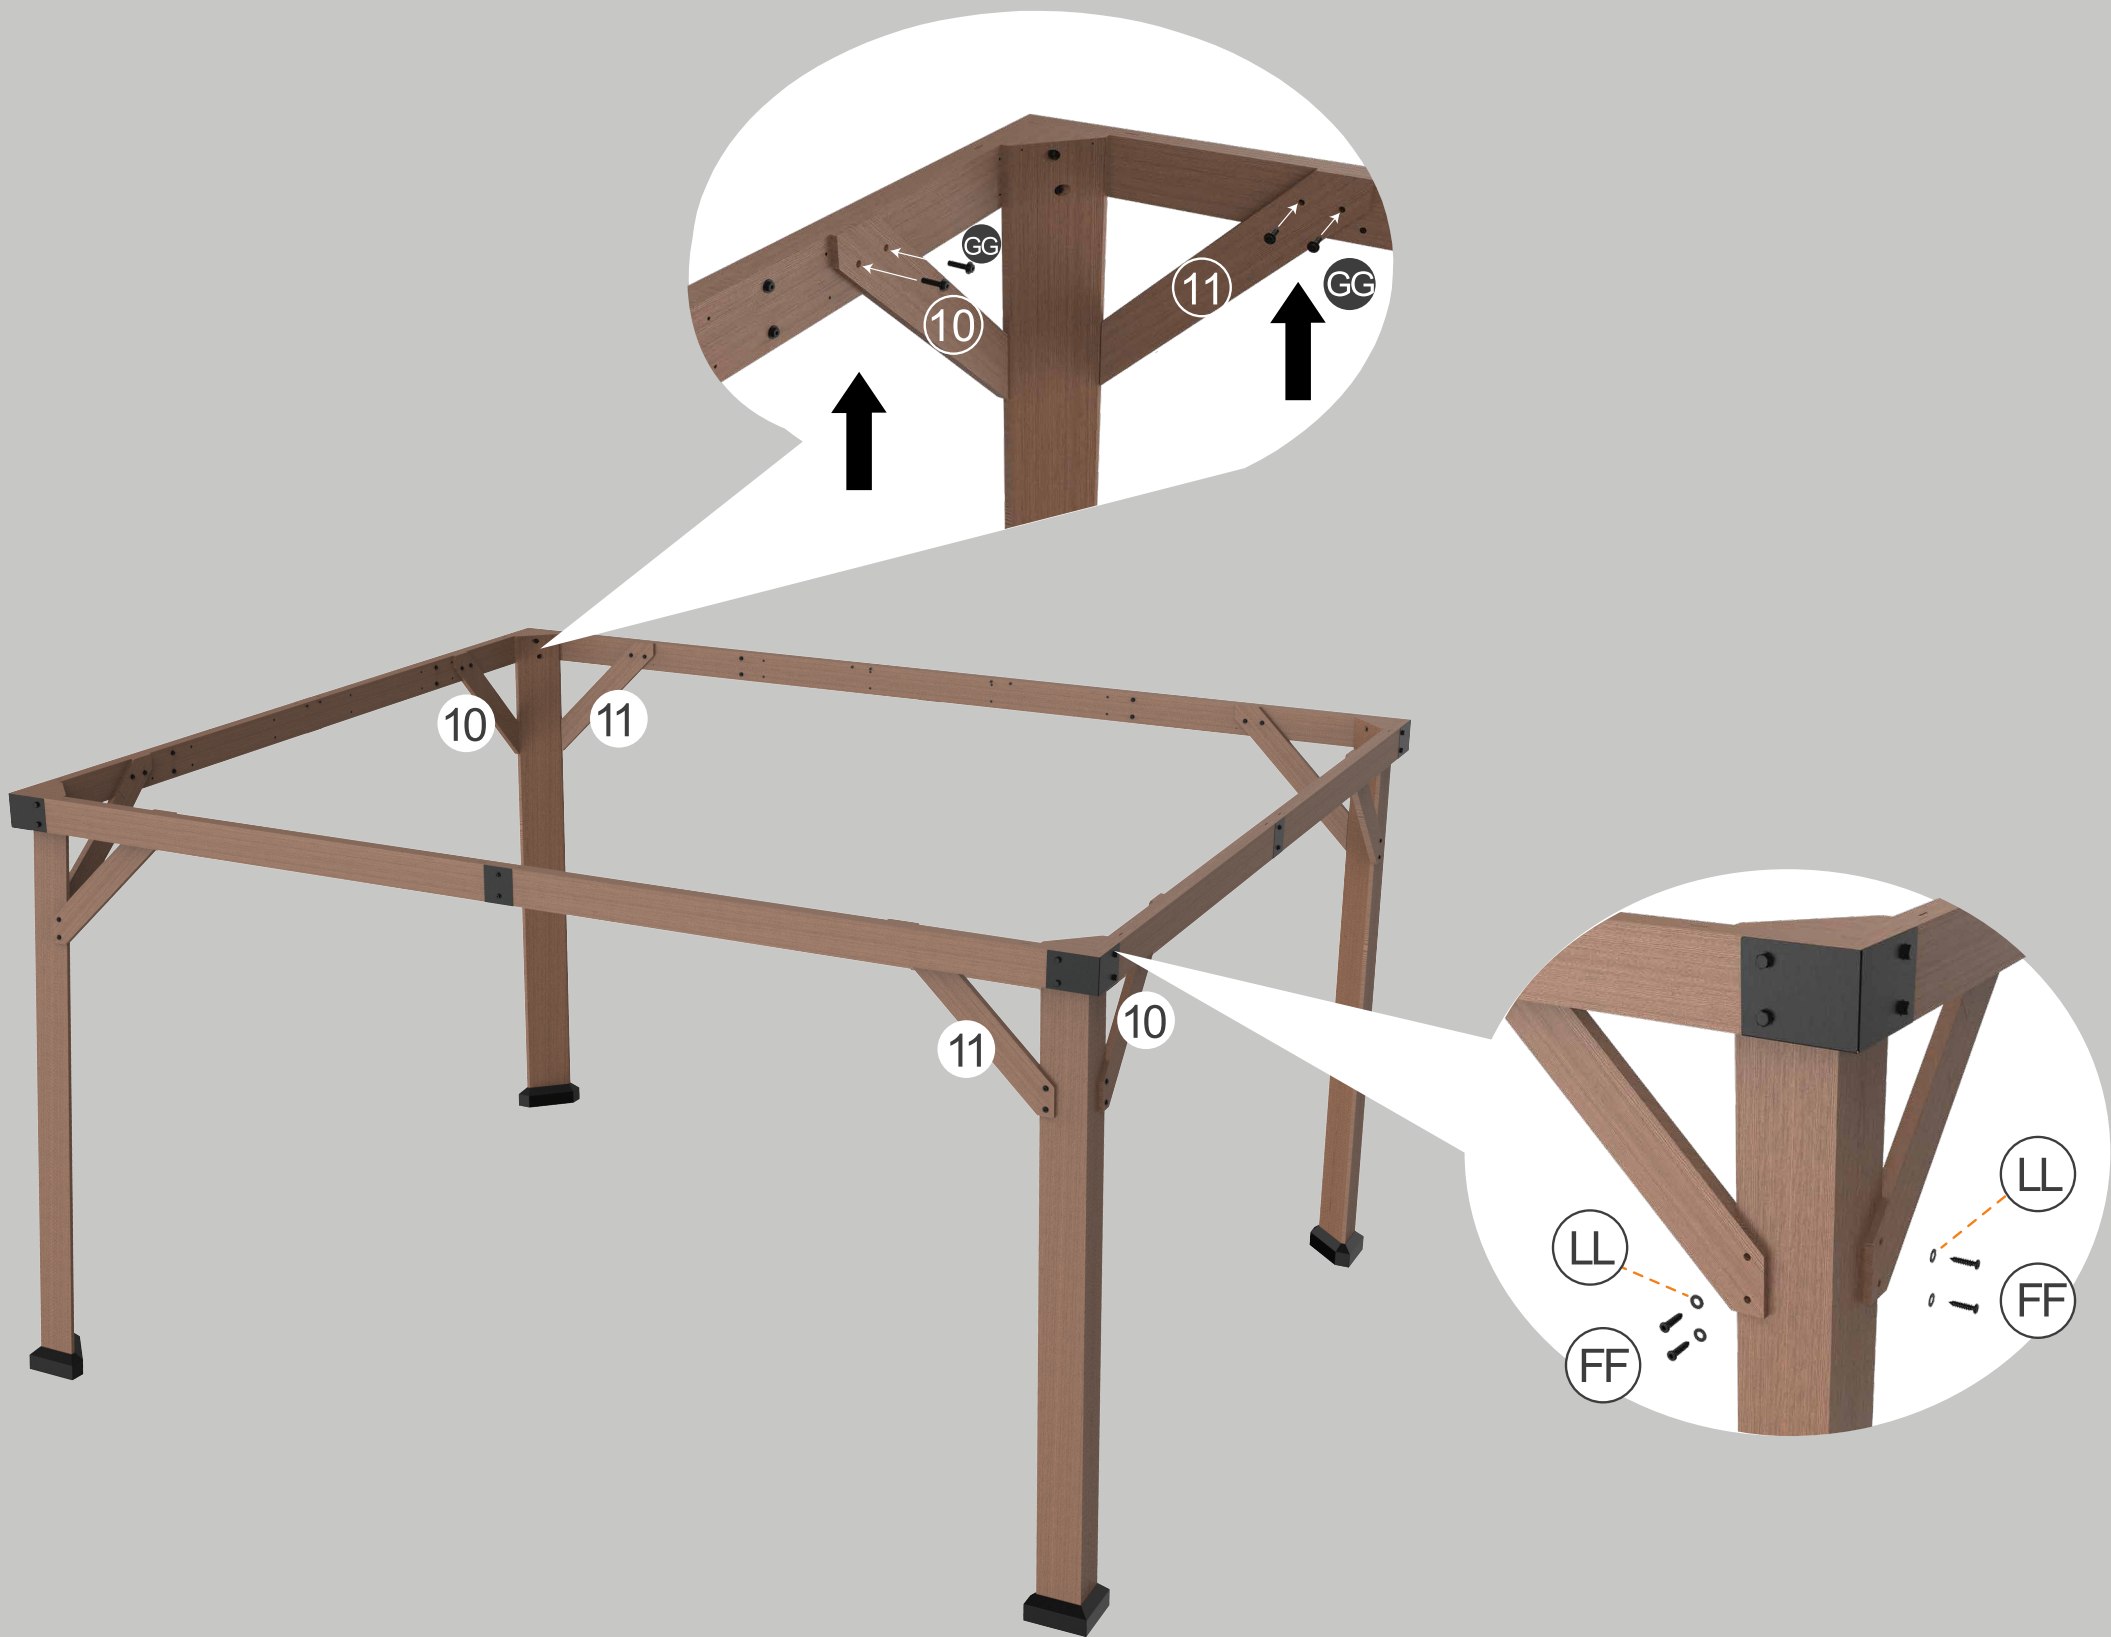

# Step 11



H1

X4





H2

X4

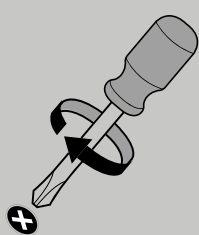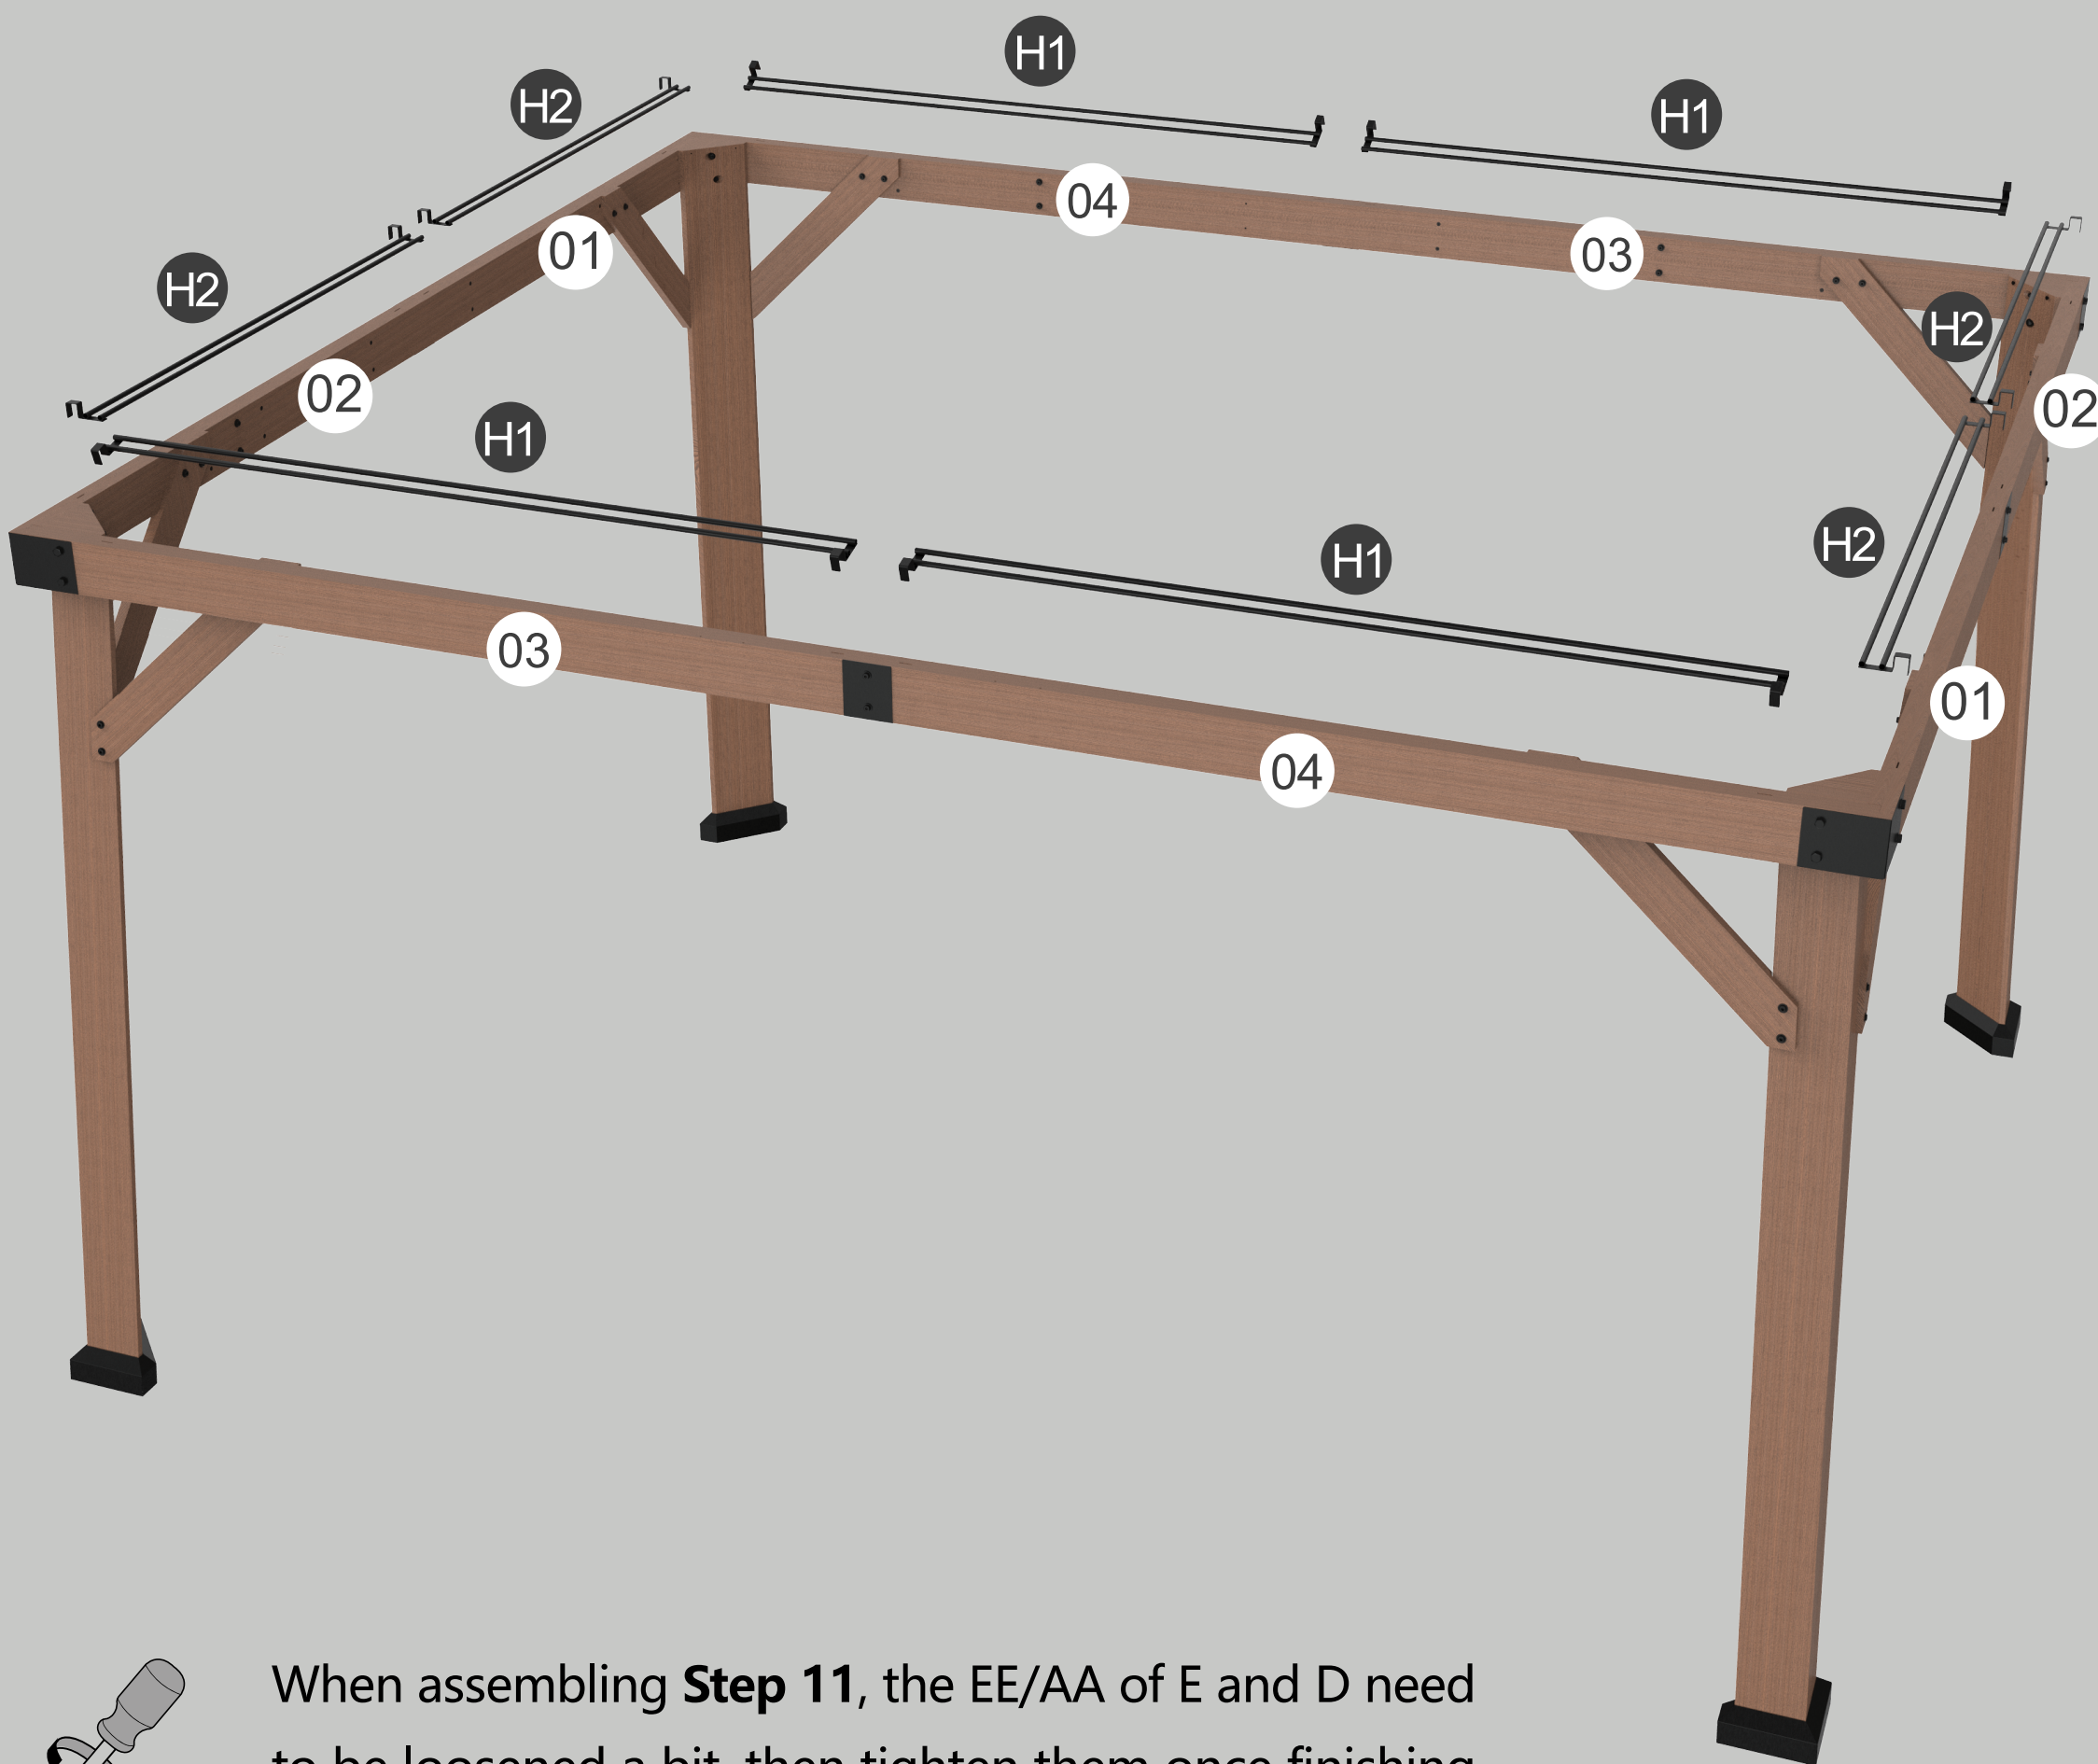






When assembling **Step 11**, the EE/AA of E and D need to be loosened a bit, then tighten them once finishing assemble H1 and H2.

Step 12

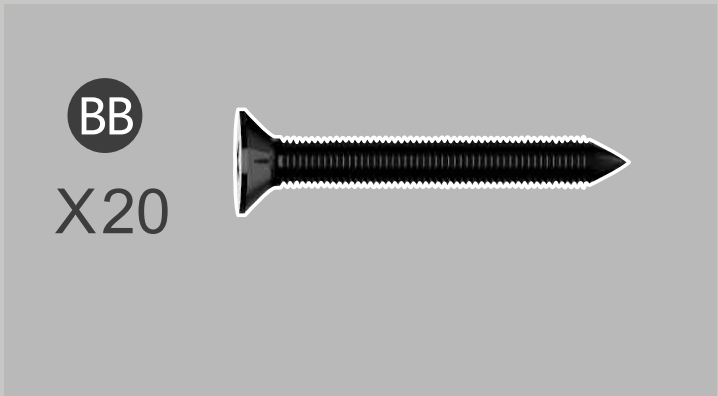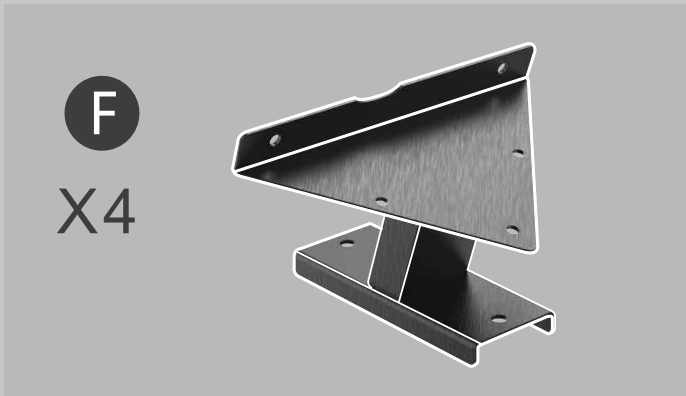




# Step 13

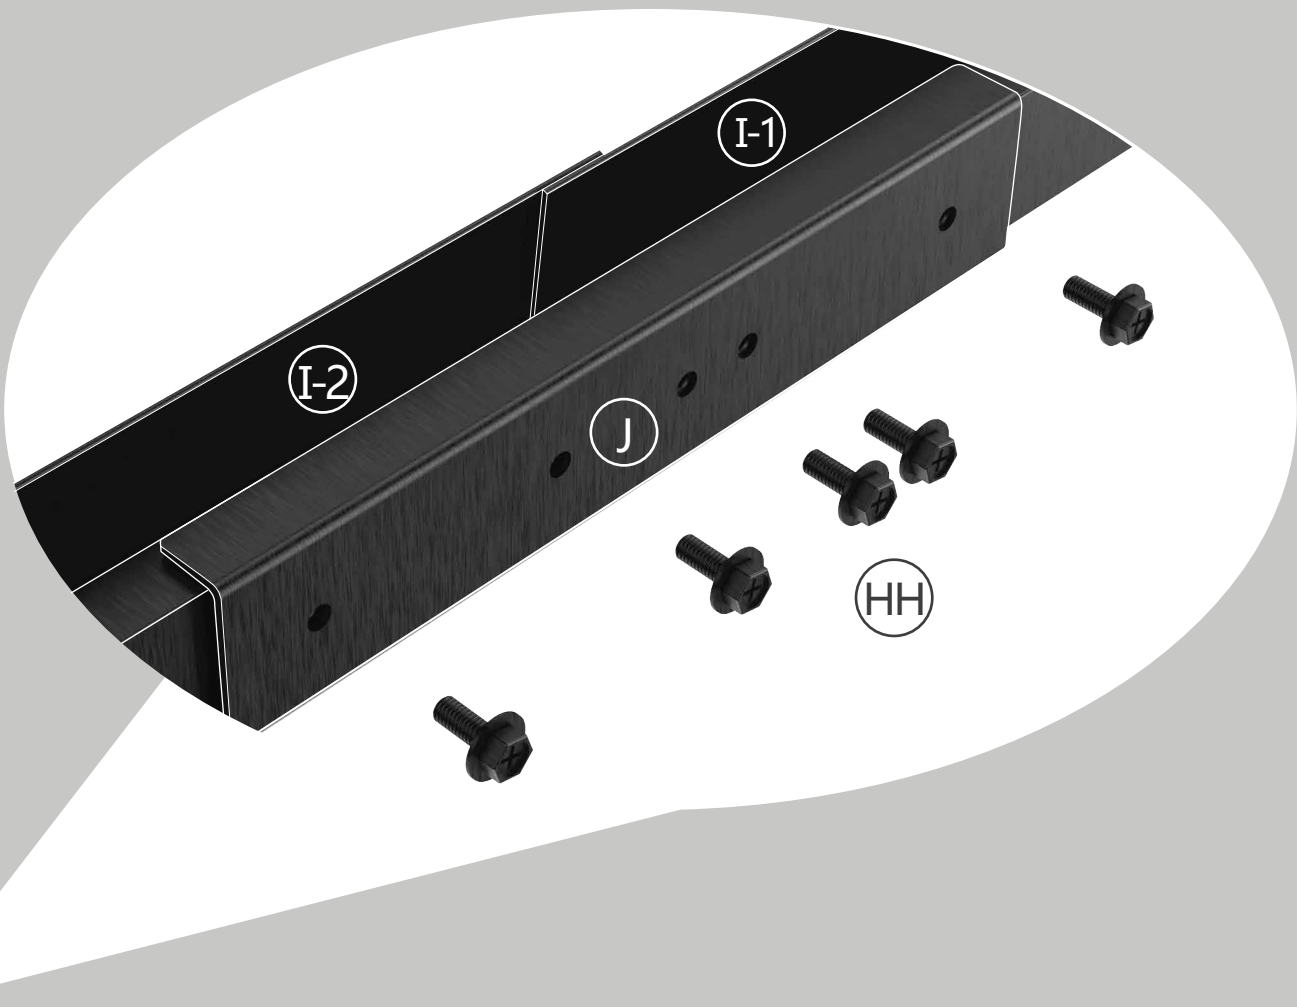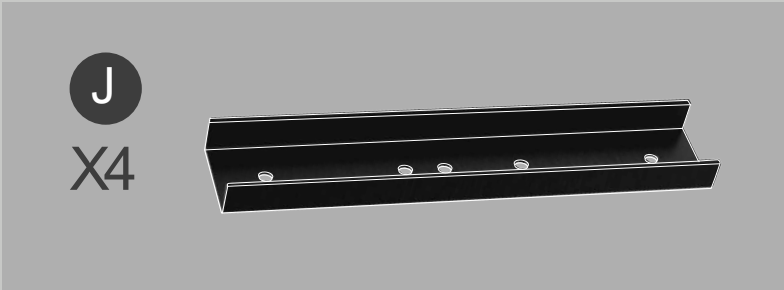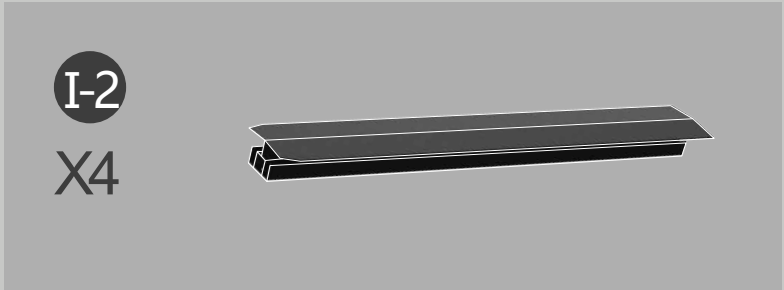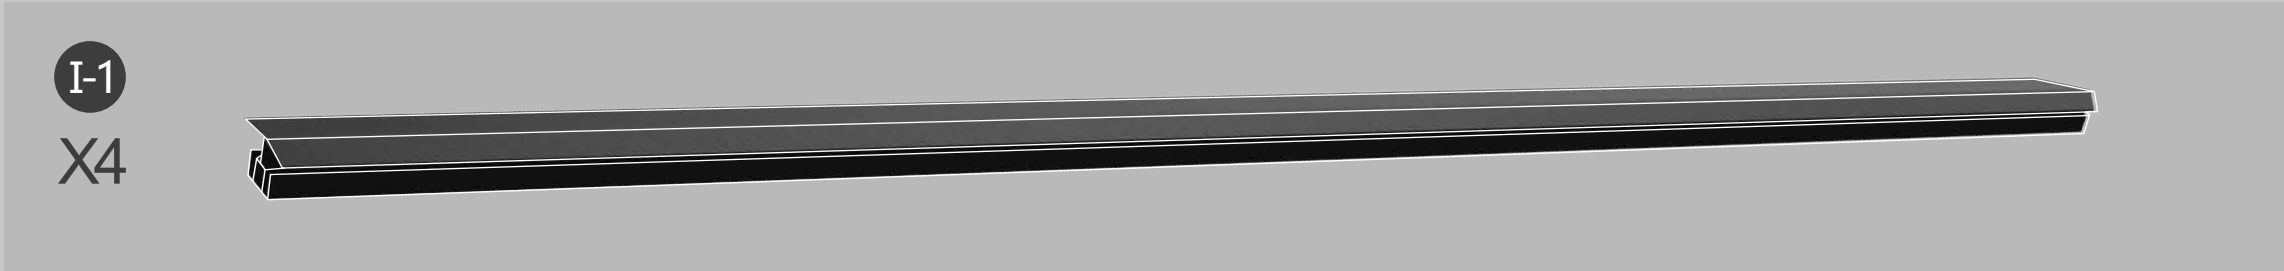

Step 14


X1

X1

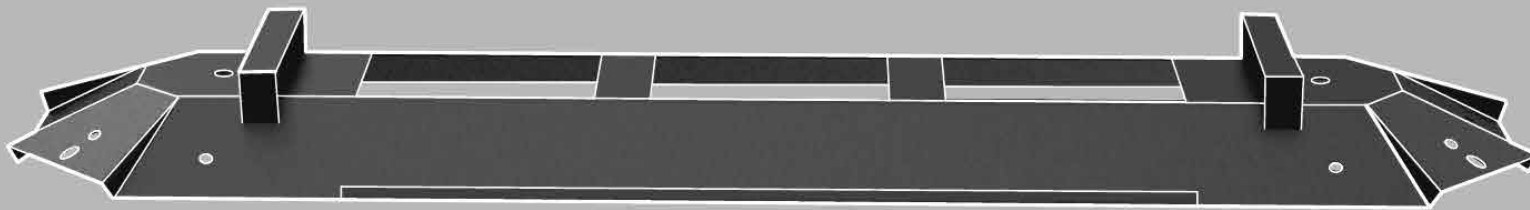

HH

X 16


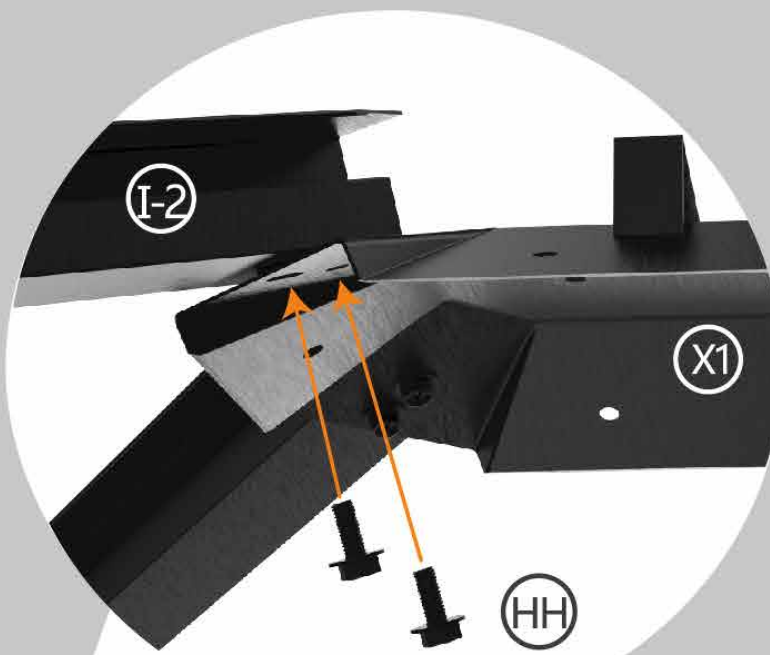




# Step 15









When assembling **Step 15**, please do not fully tighten the II and HH, until all the top support parts (K-1, I-1, I-2, J) are completely assembled with the wood.

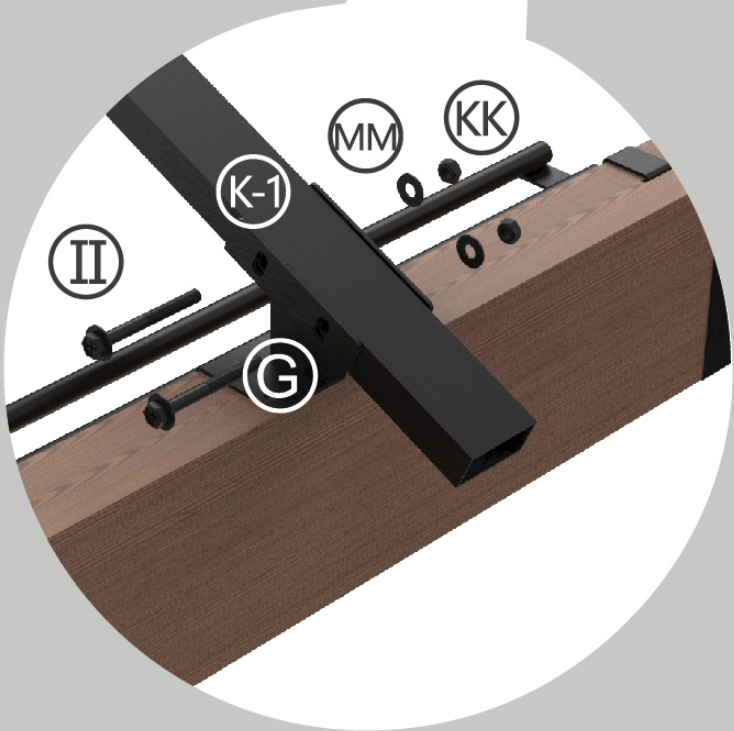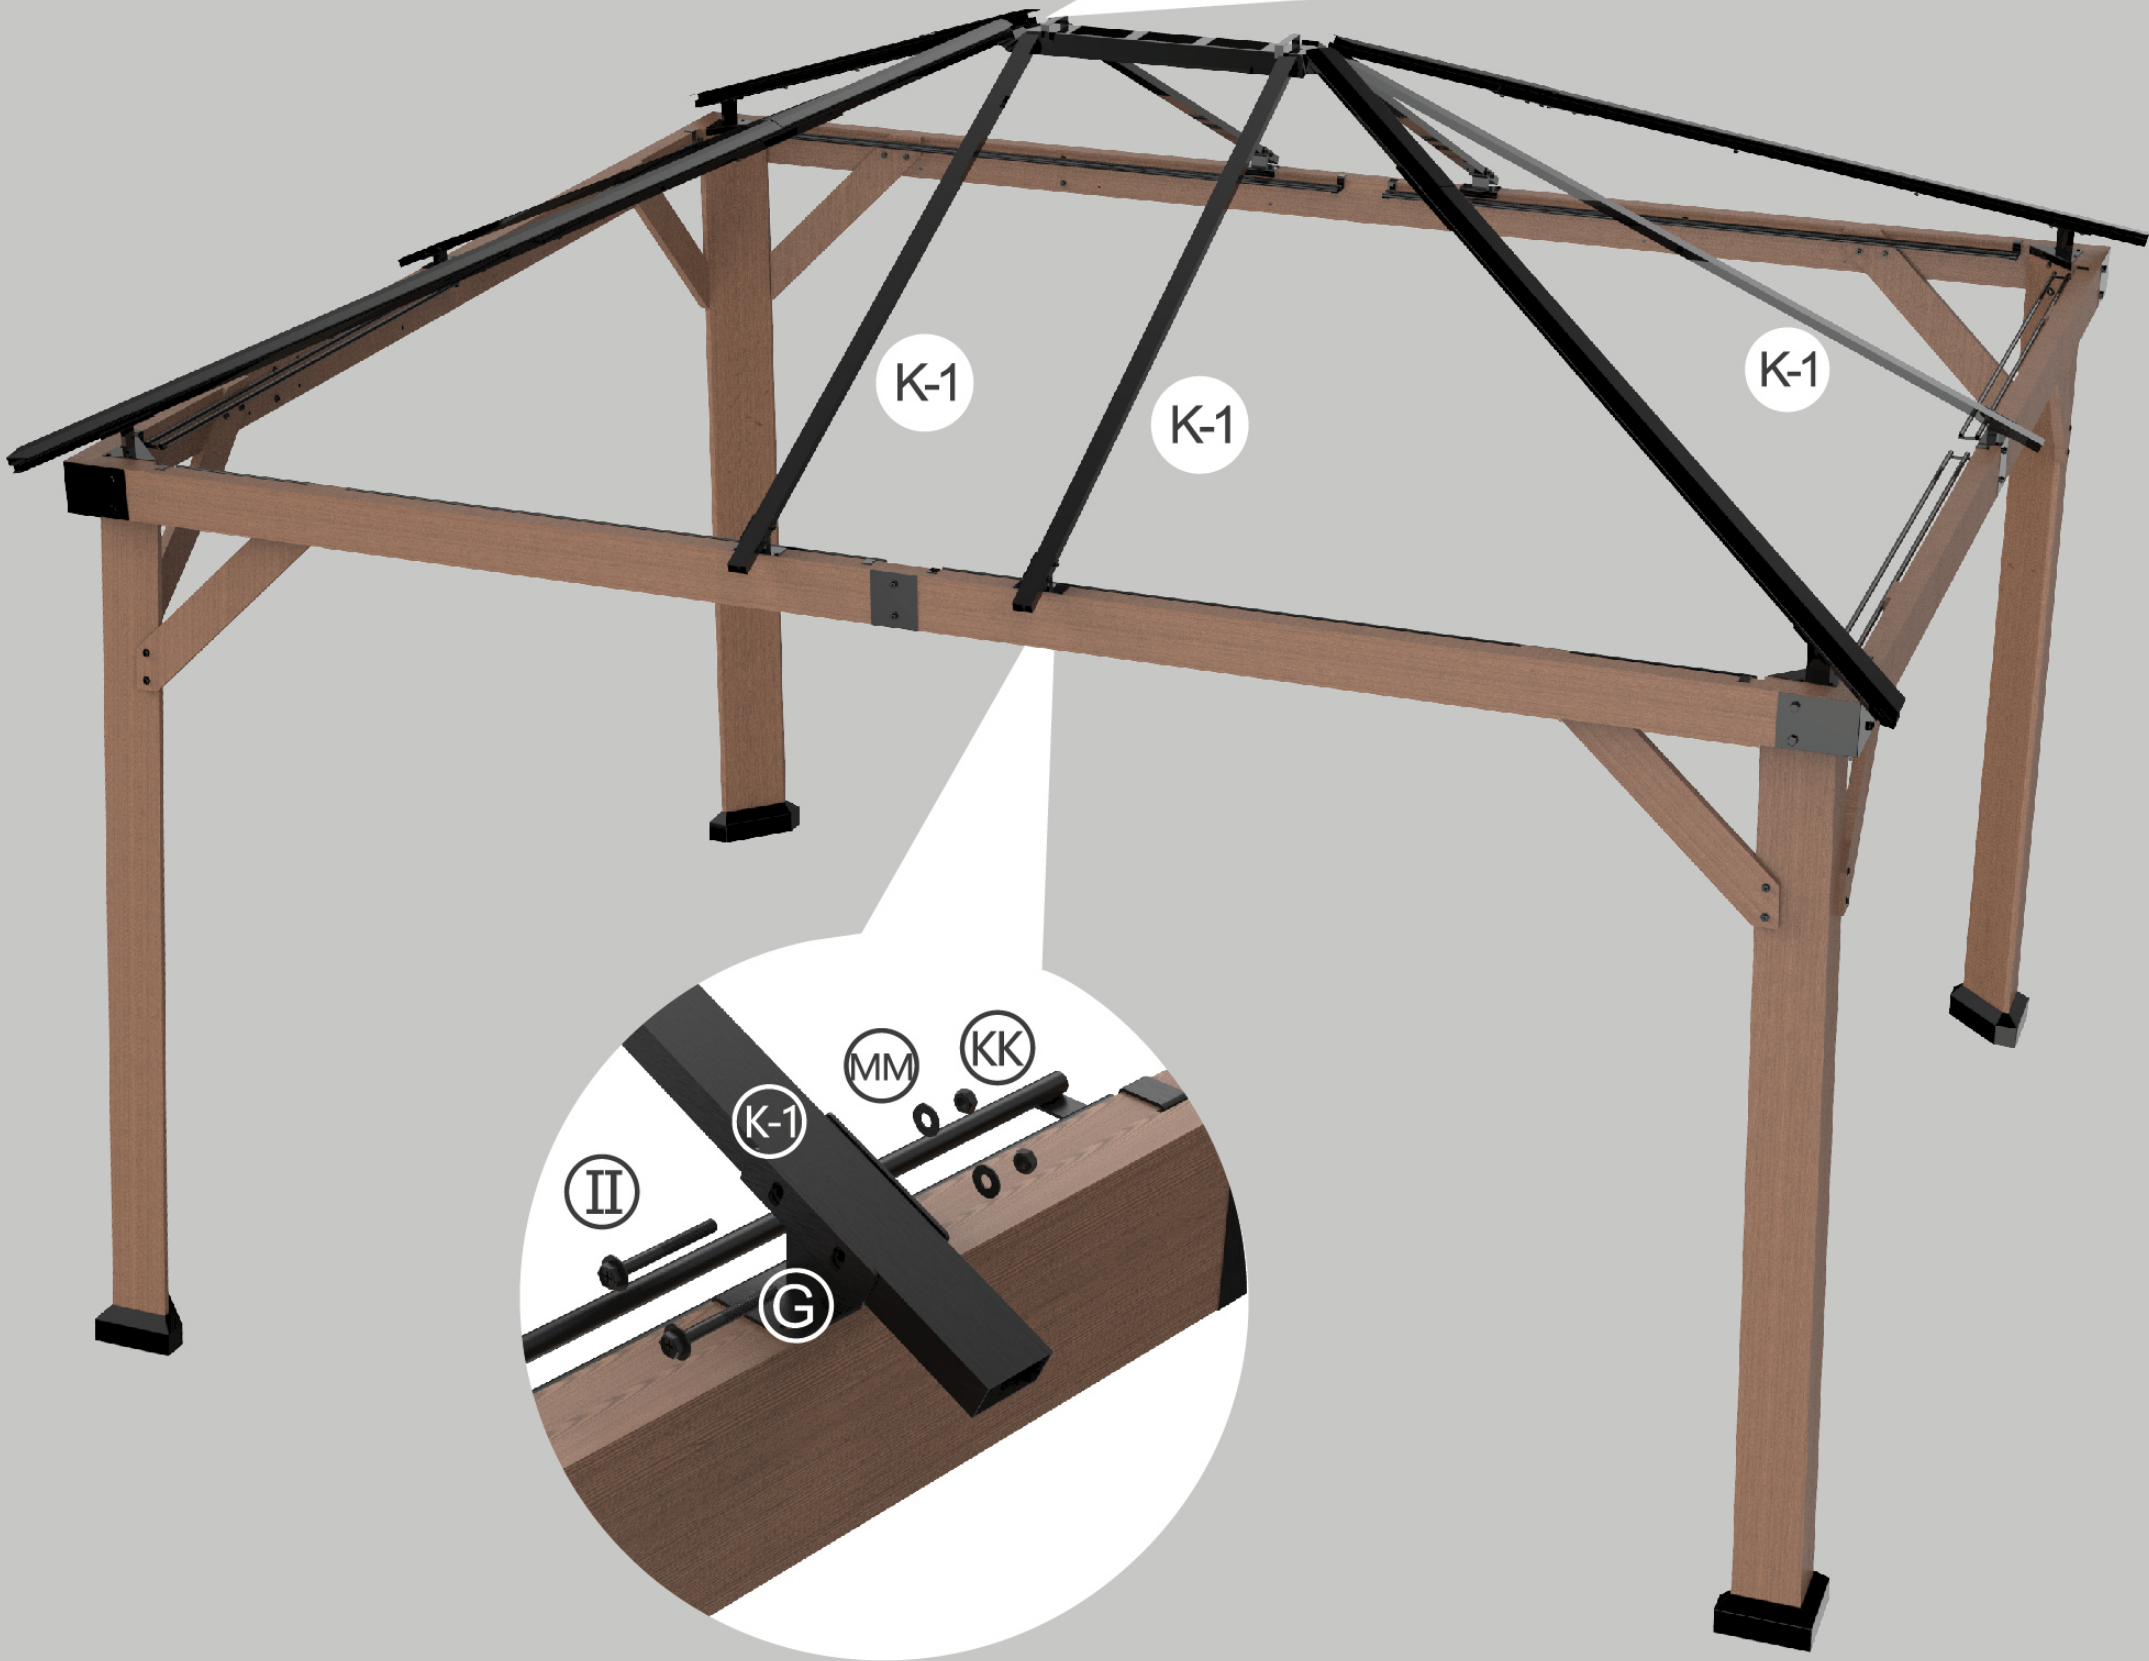





Step 16

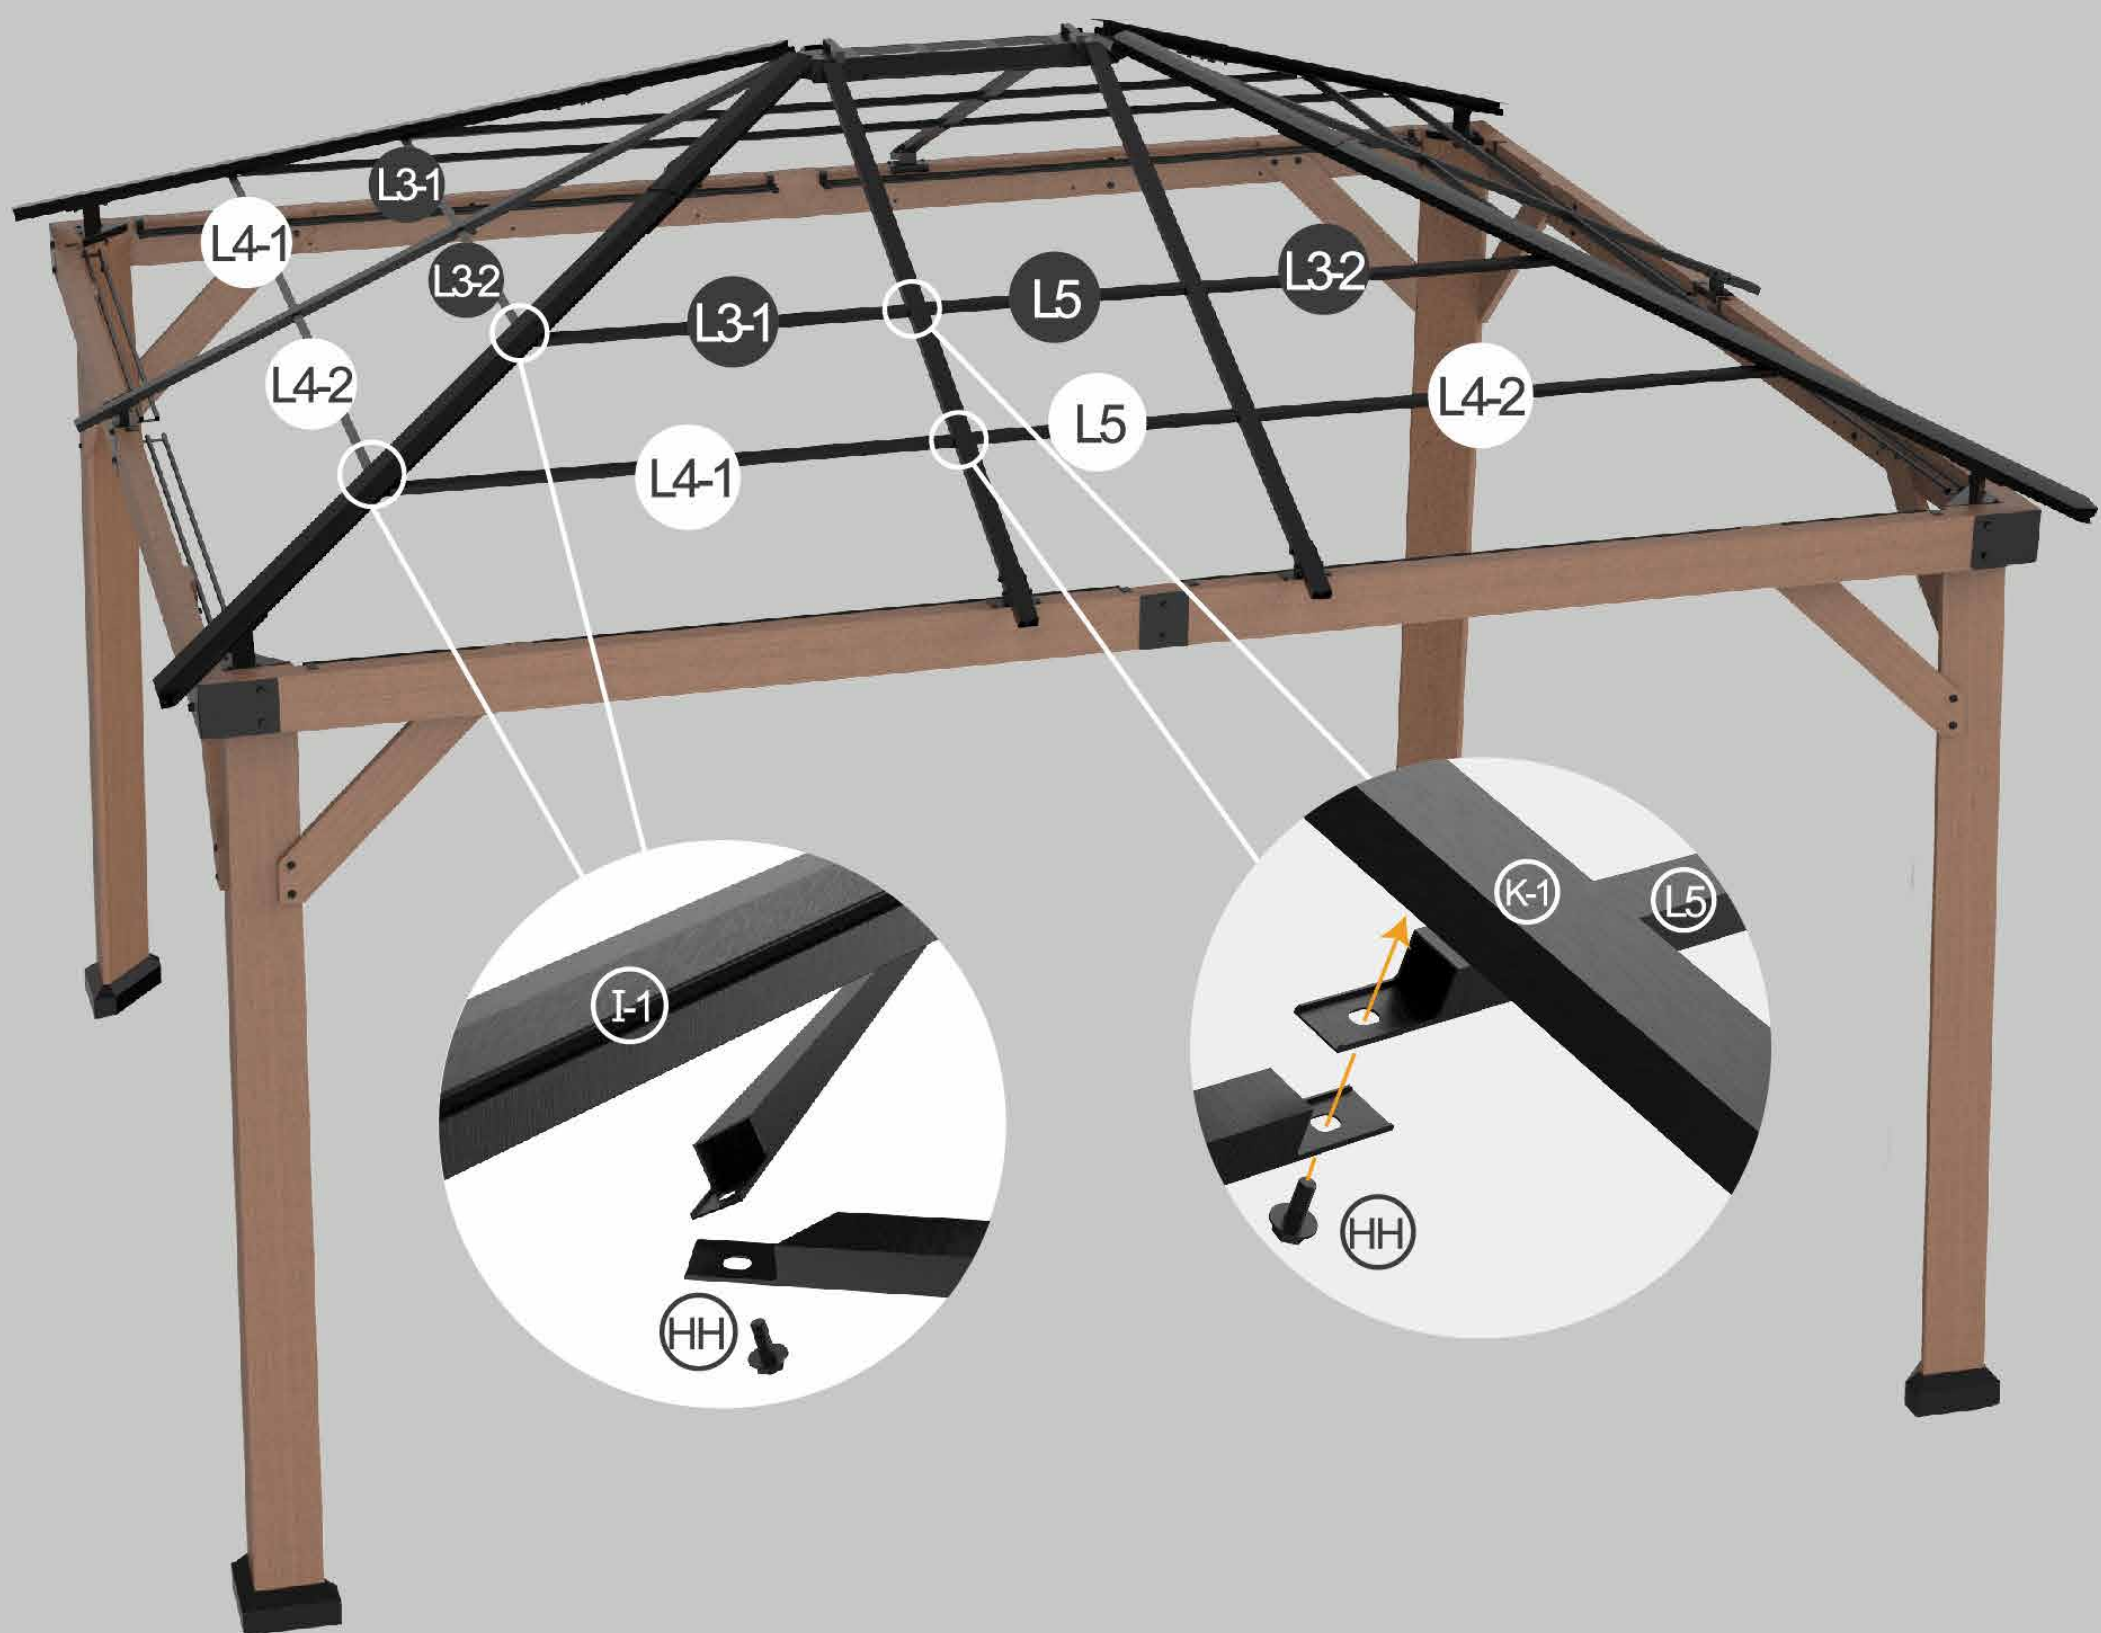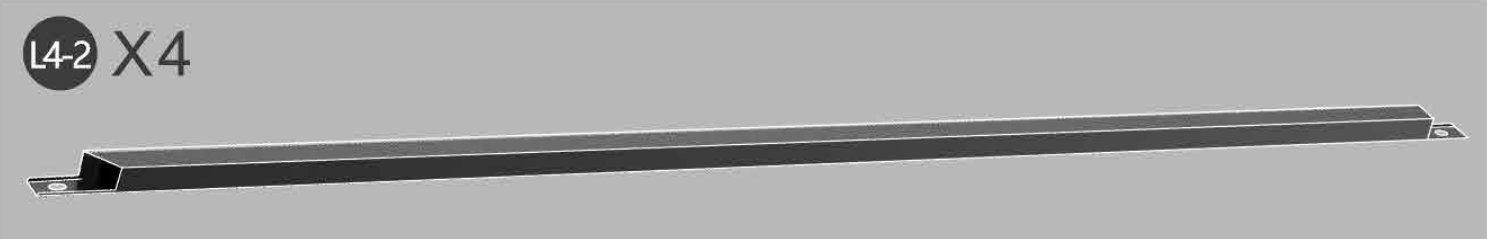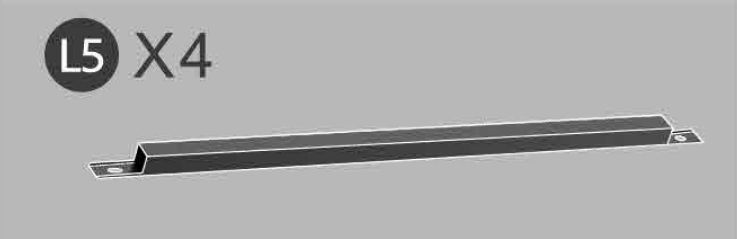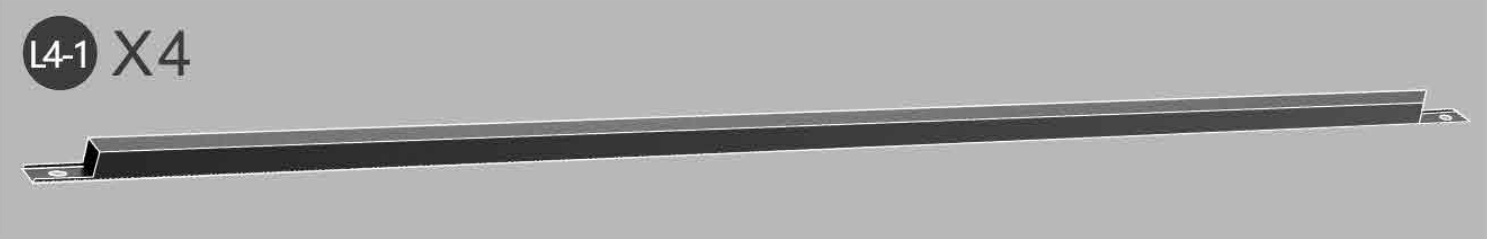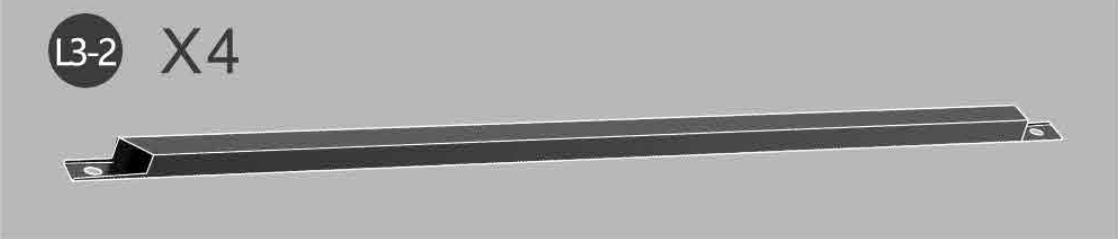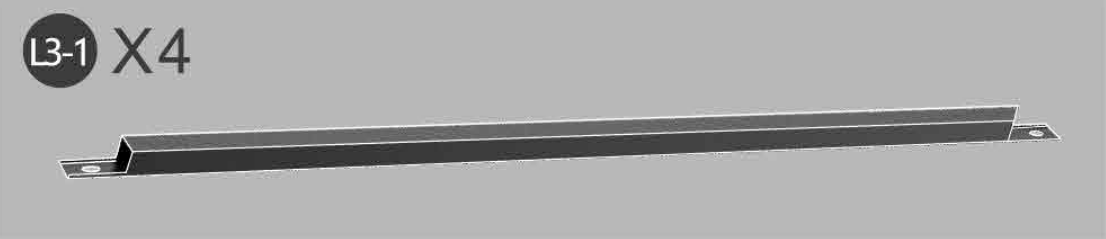



# Step 17

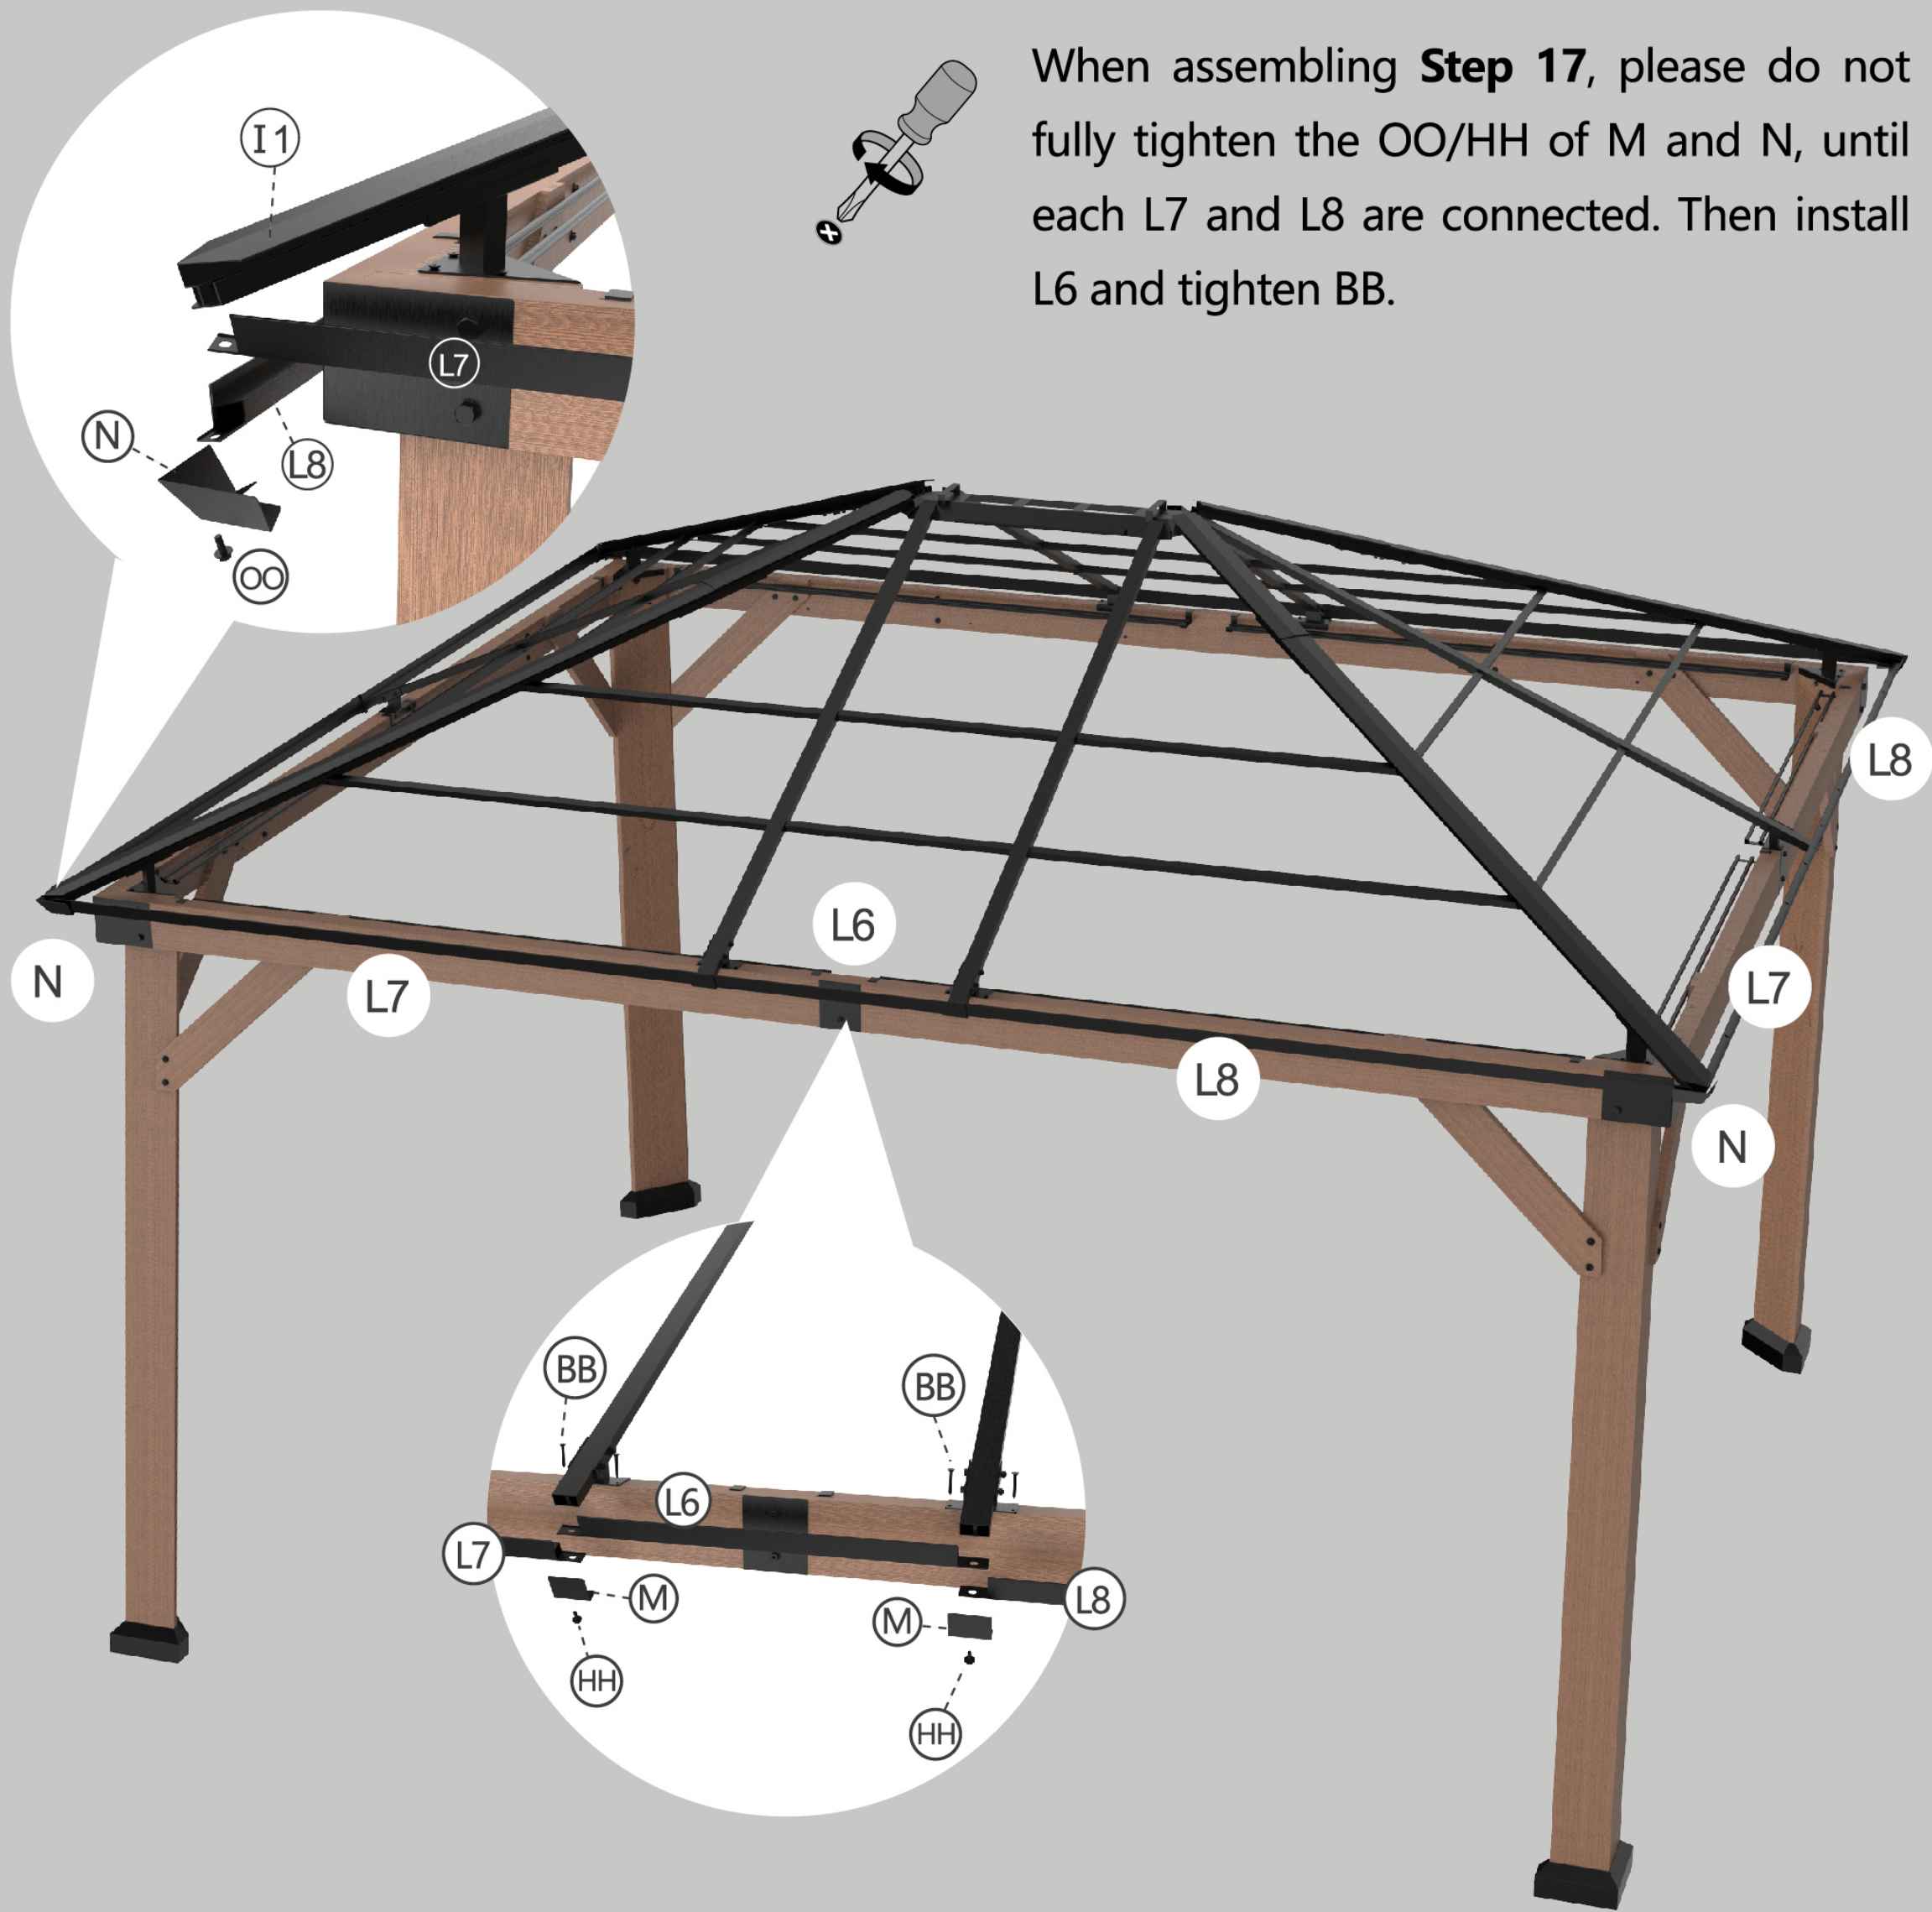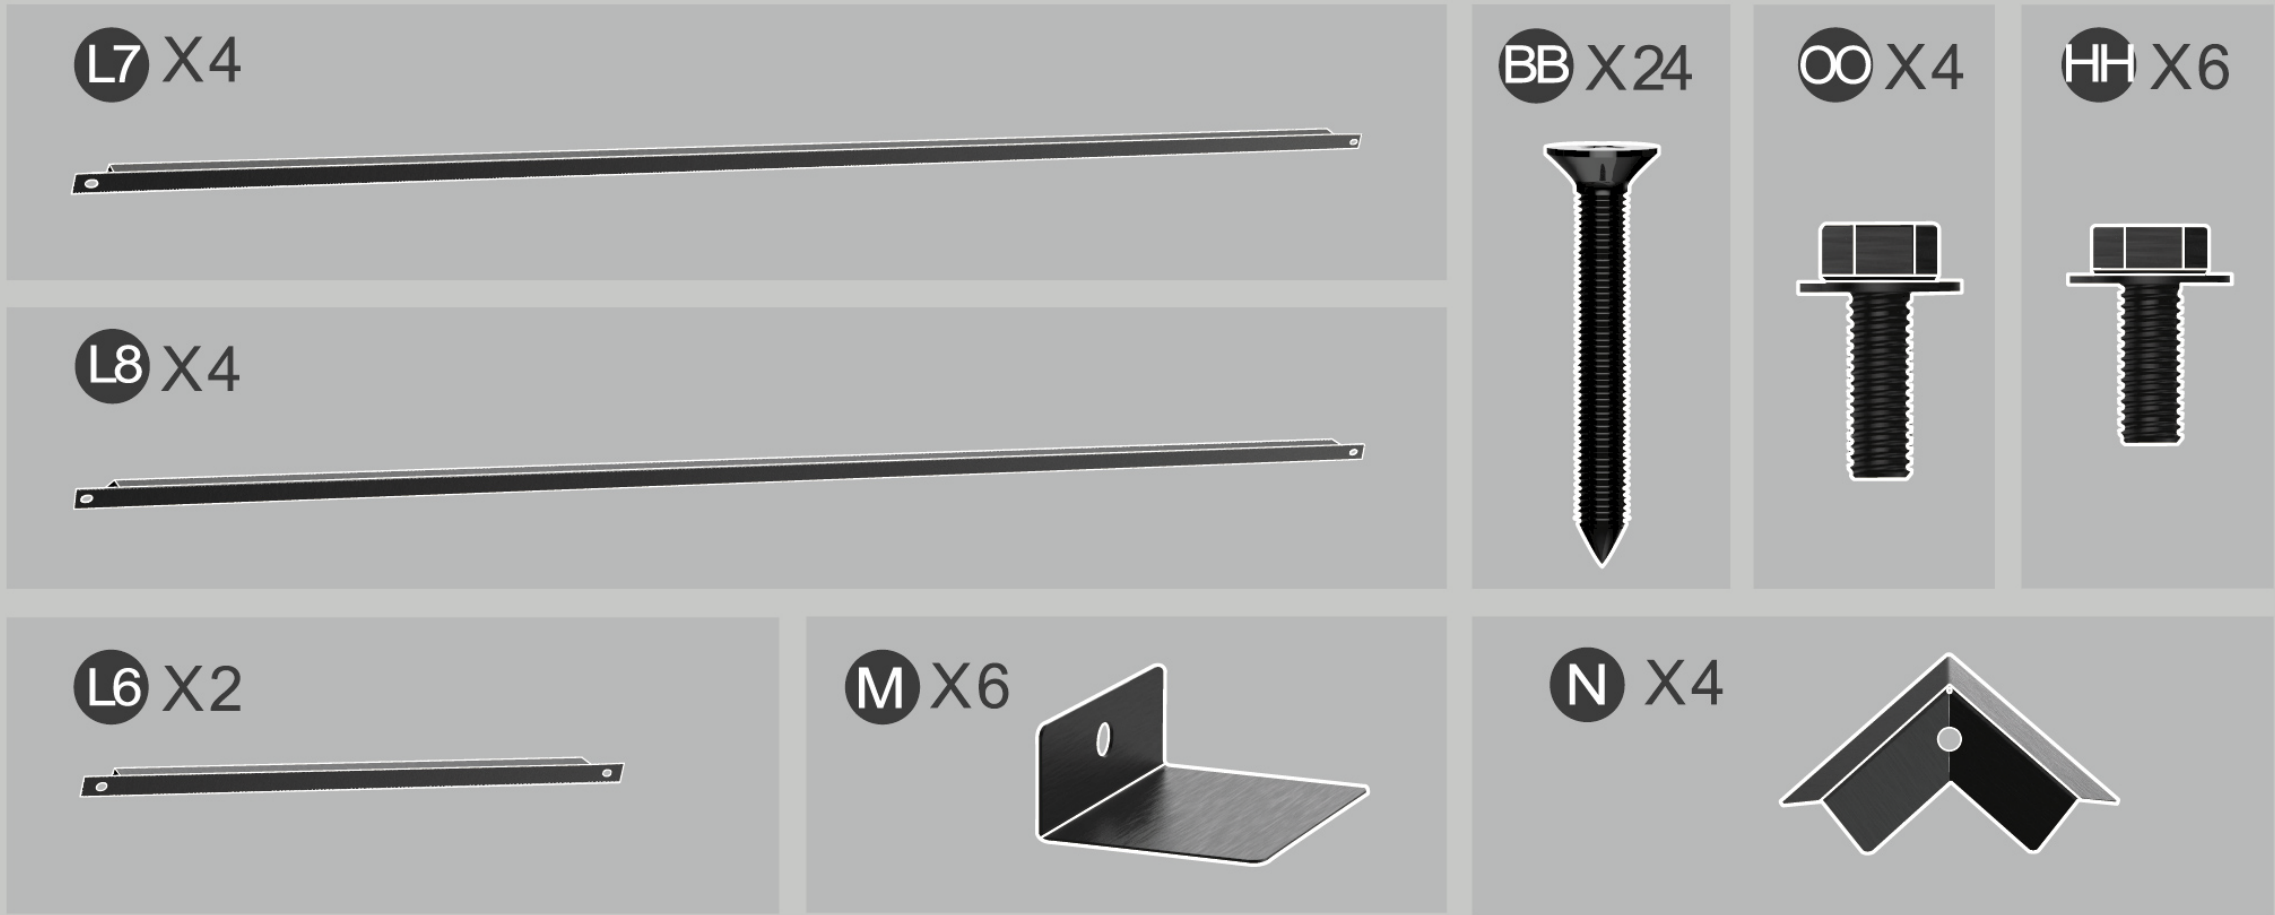



Step 18


R1 X1



MM X2



T X2

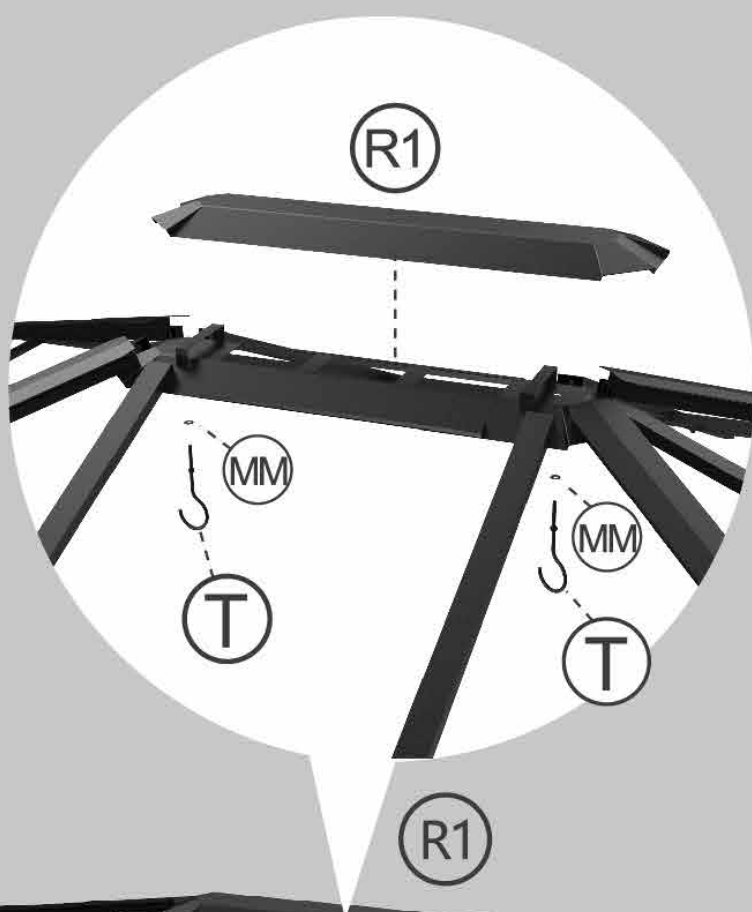

# Step 19





## Tips:

It is recommended to assemble the roof's another side after finishing one side.







Step 20

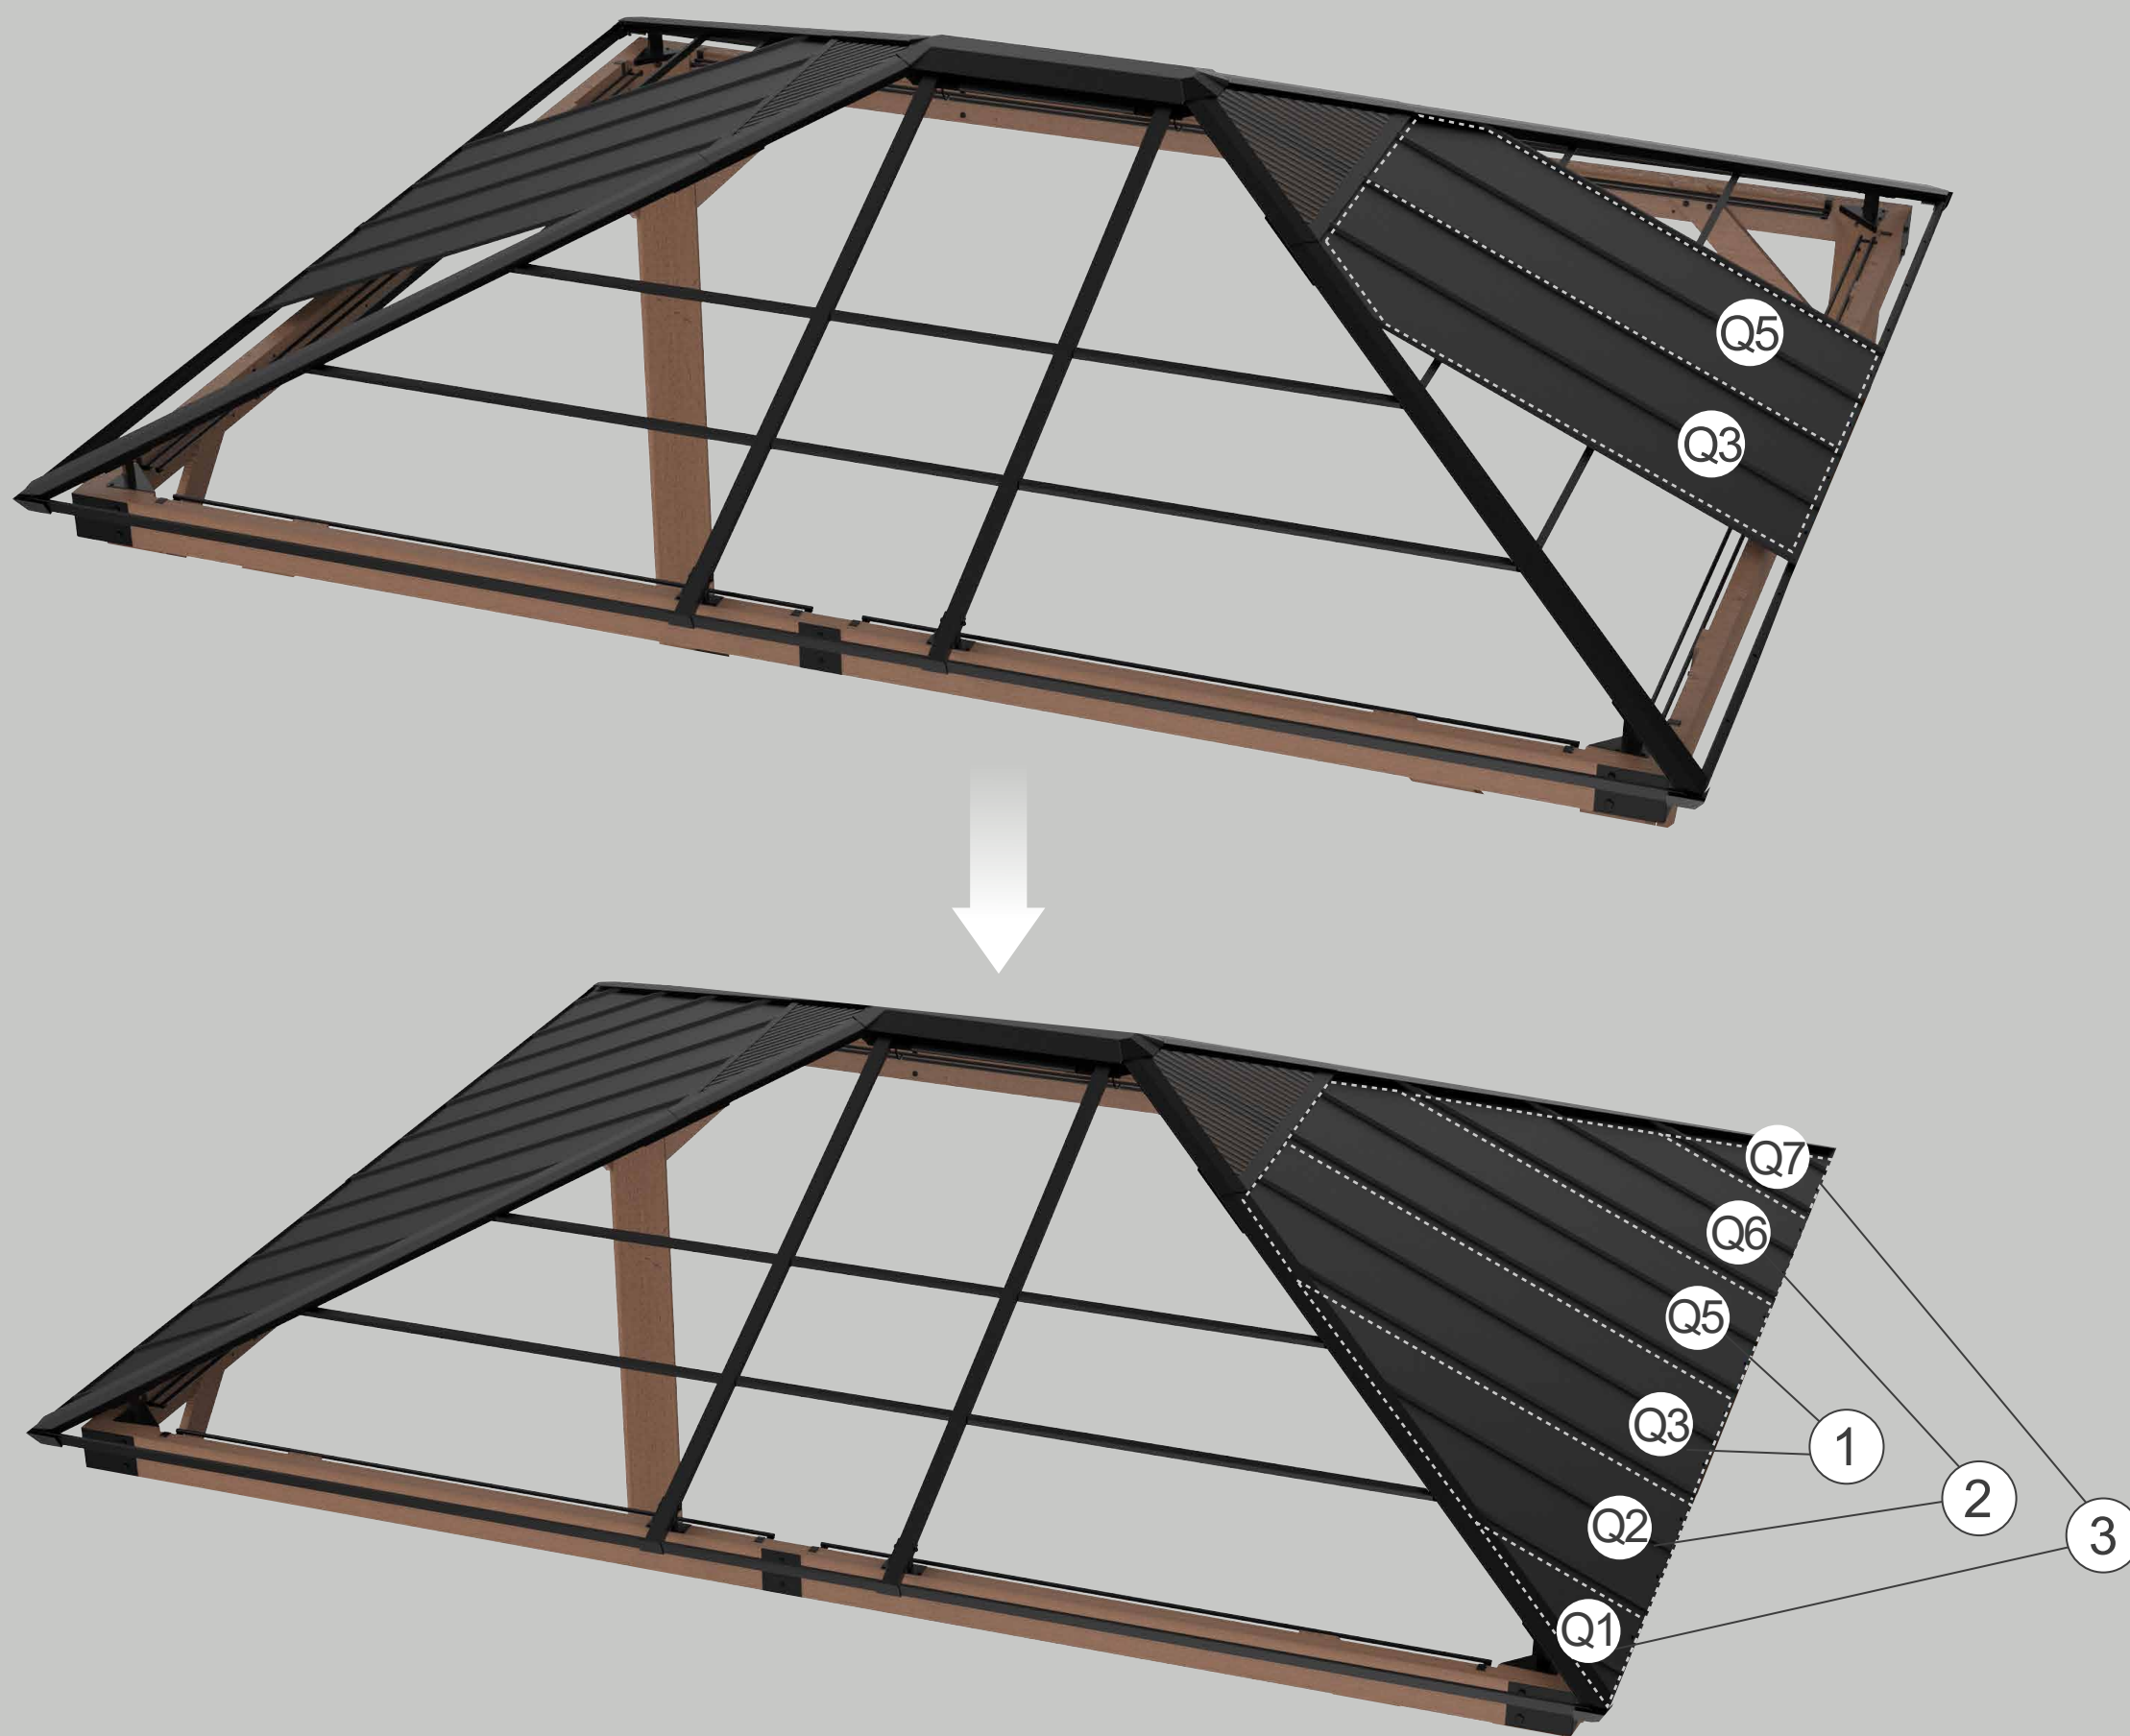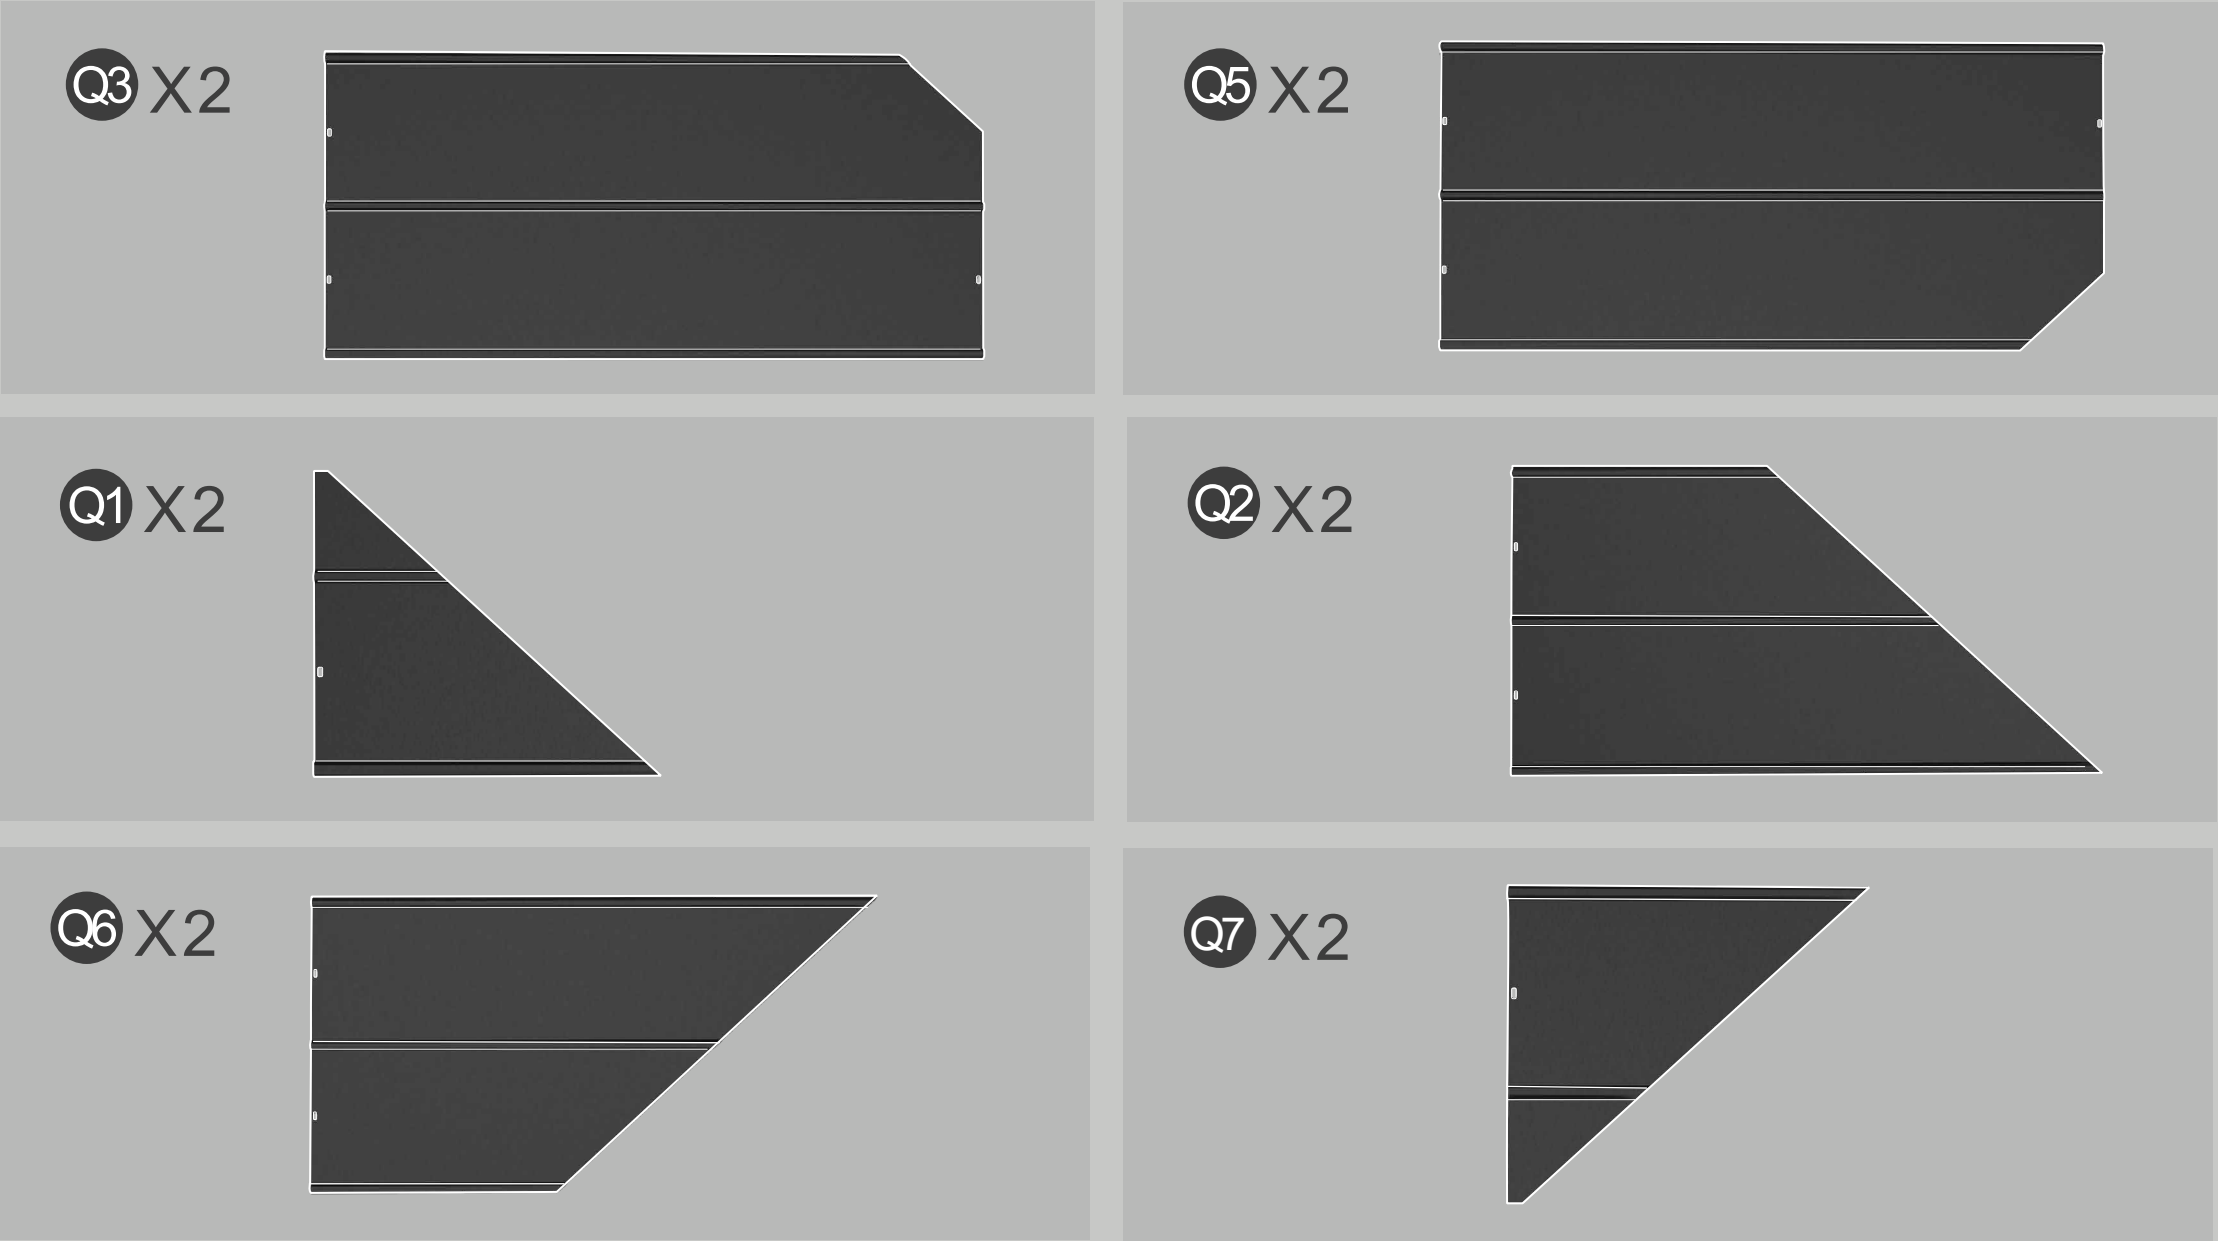





Step 21

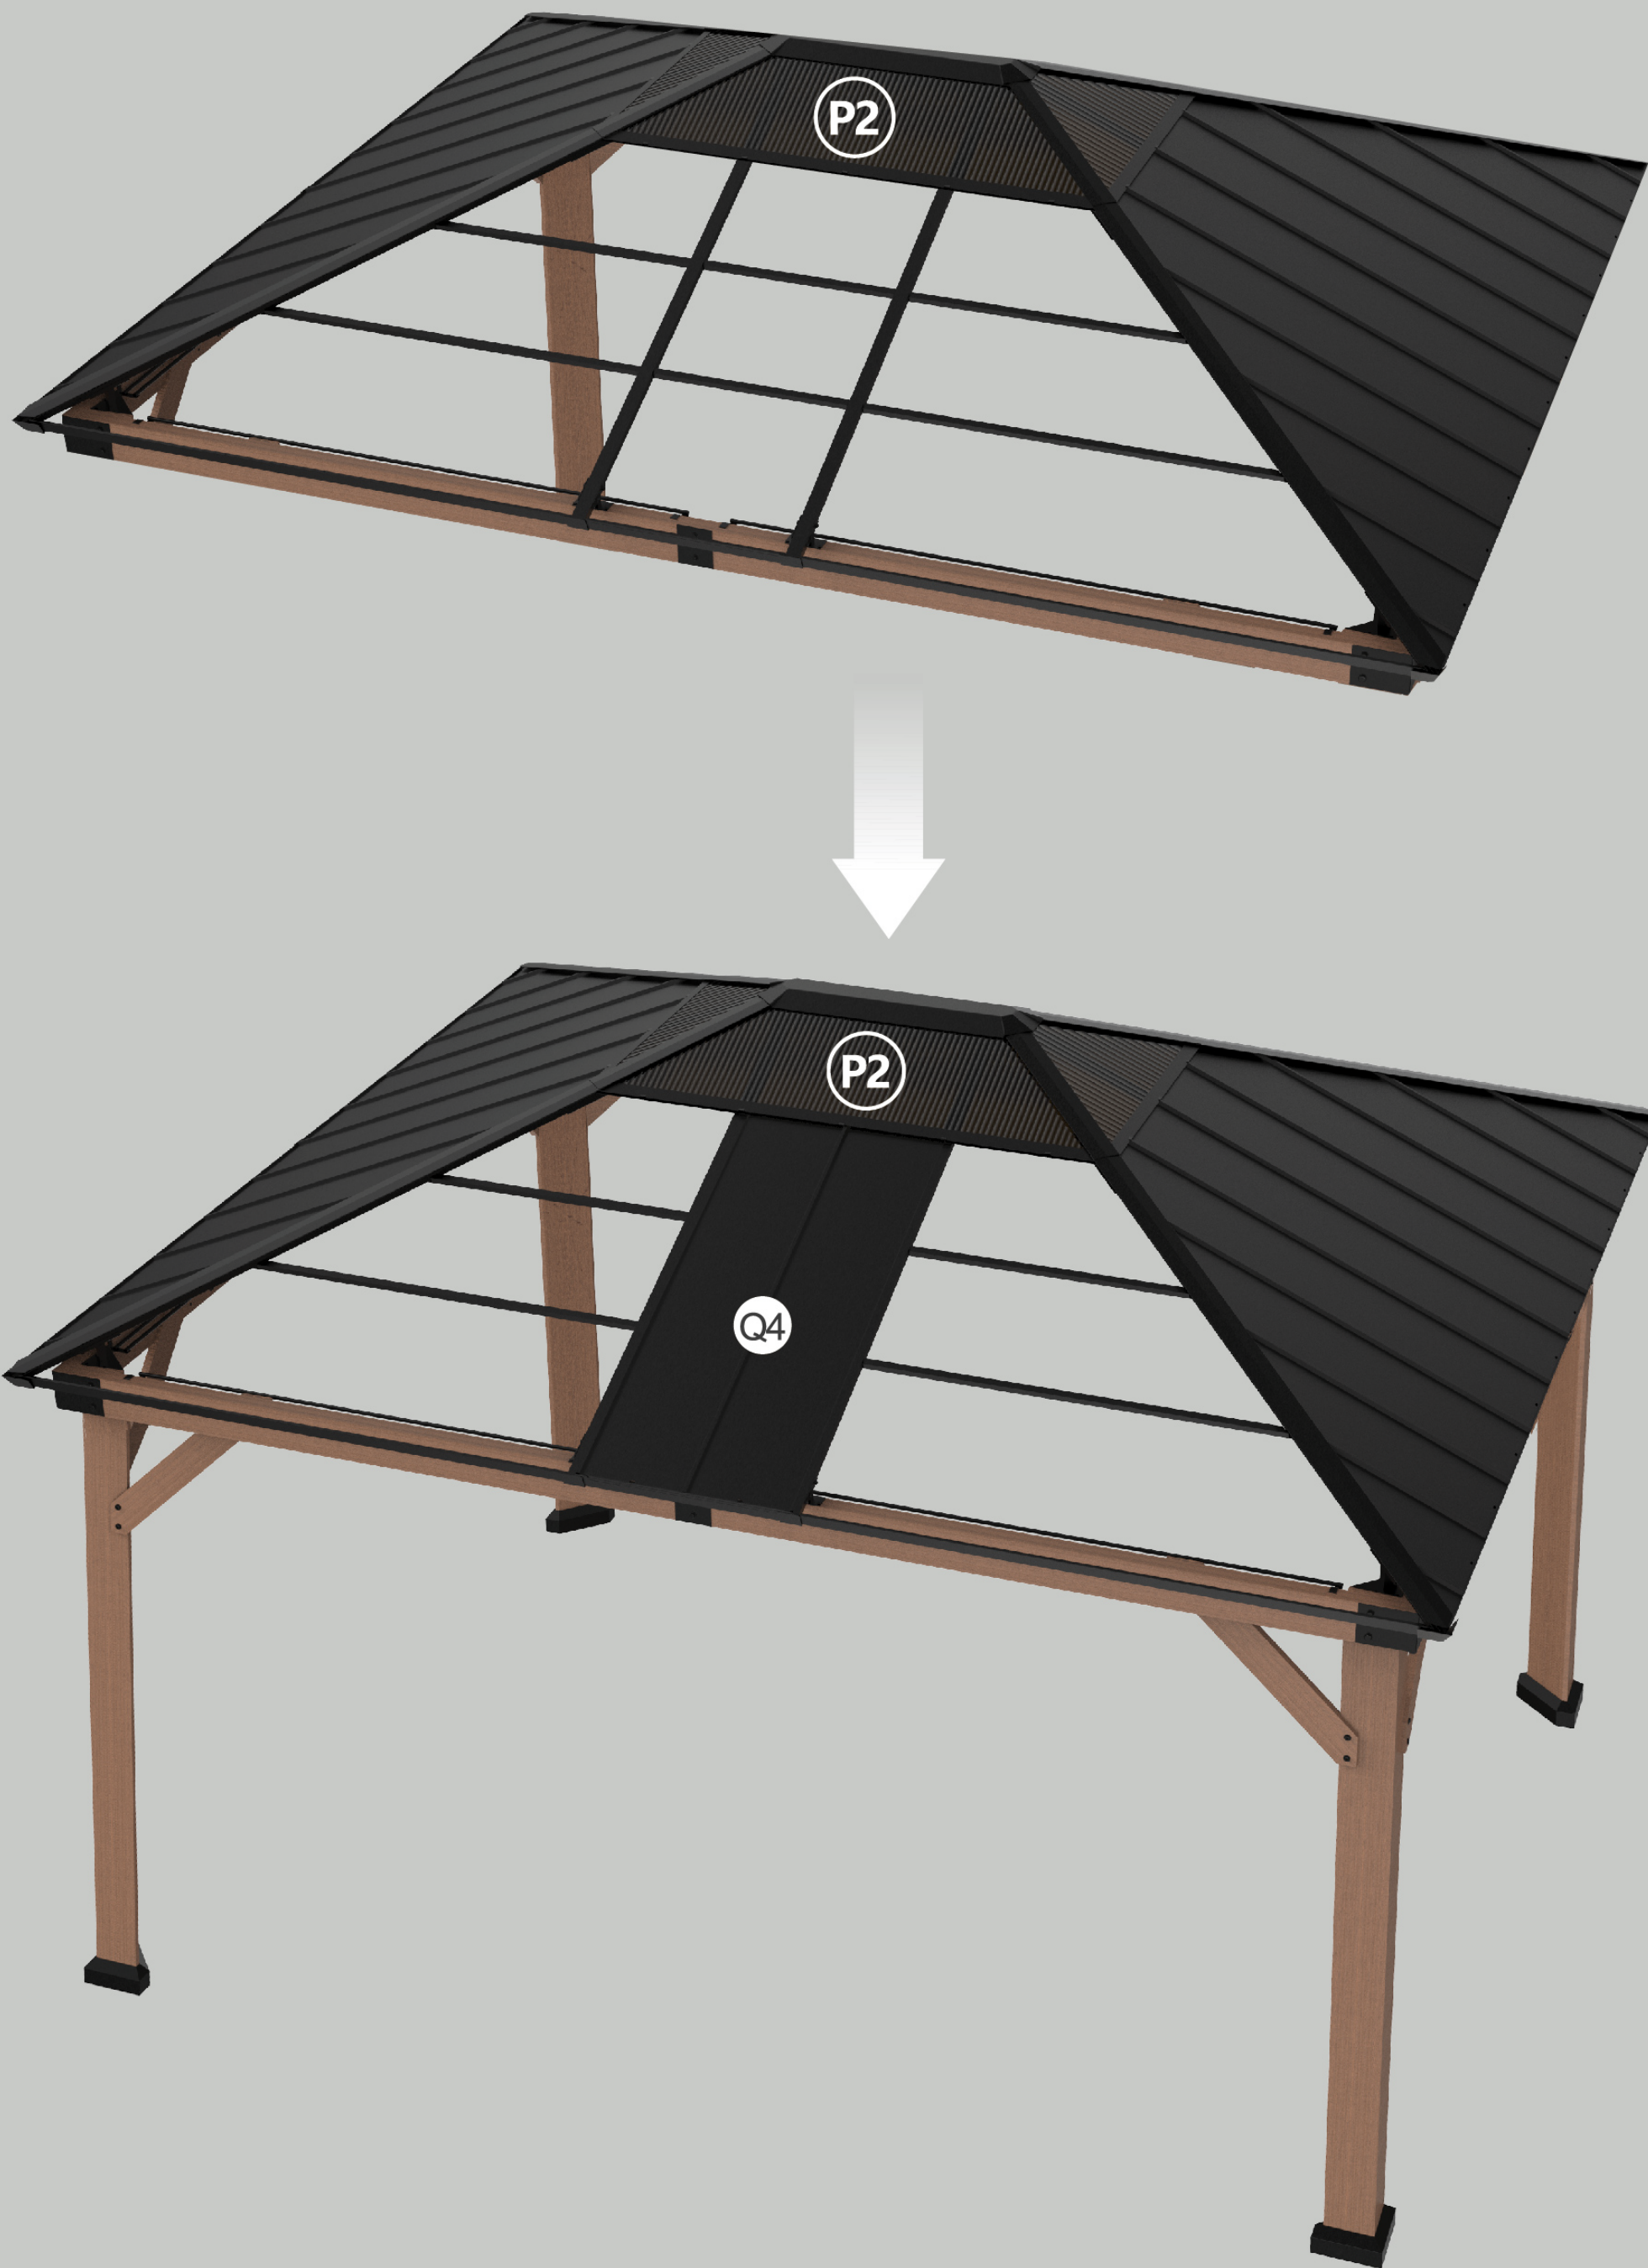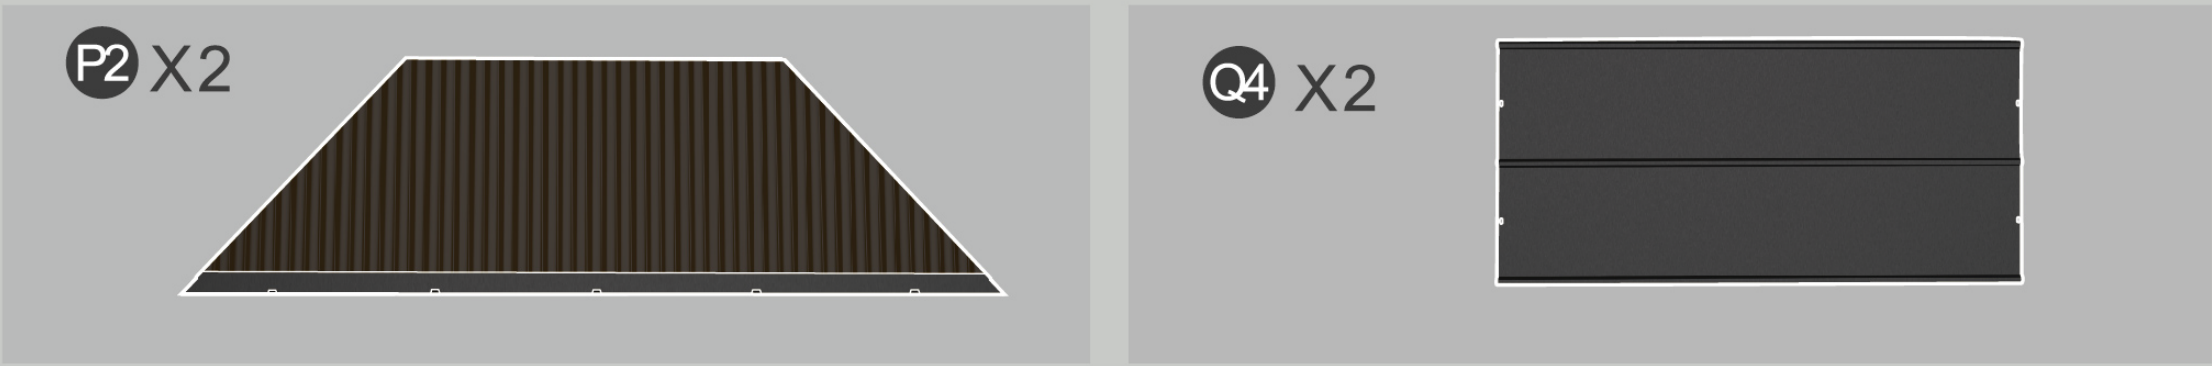



Step 22

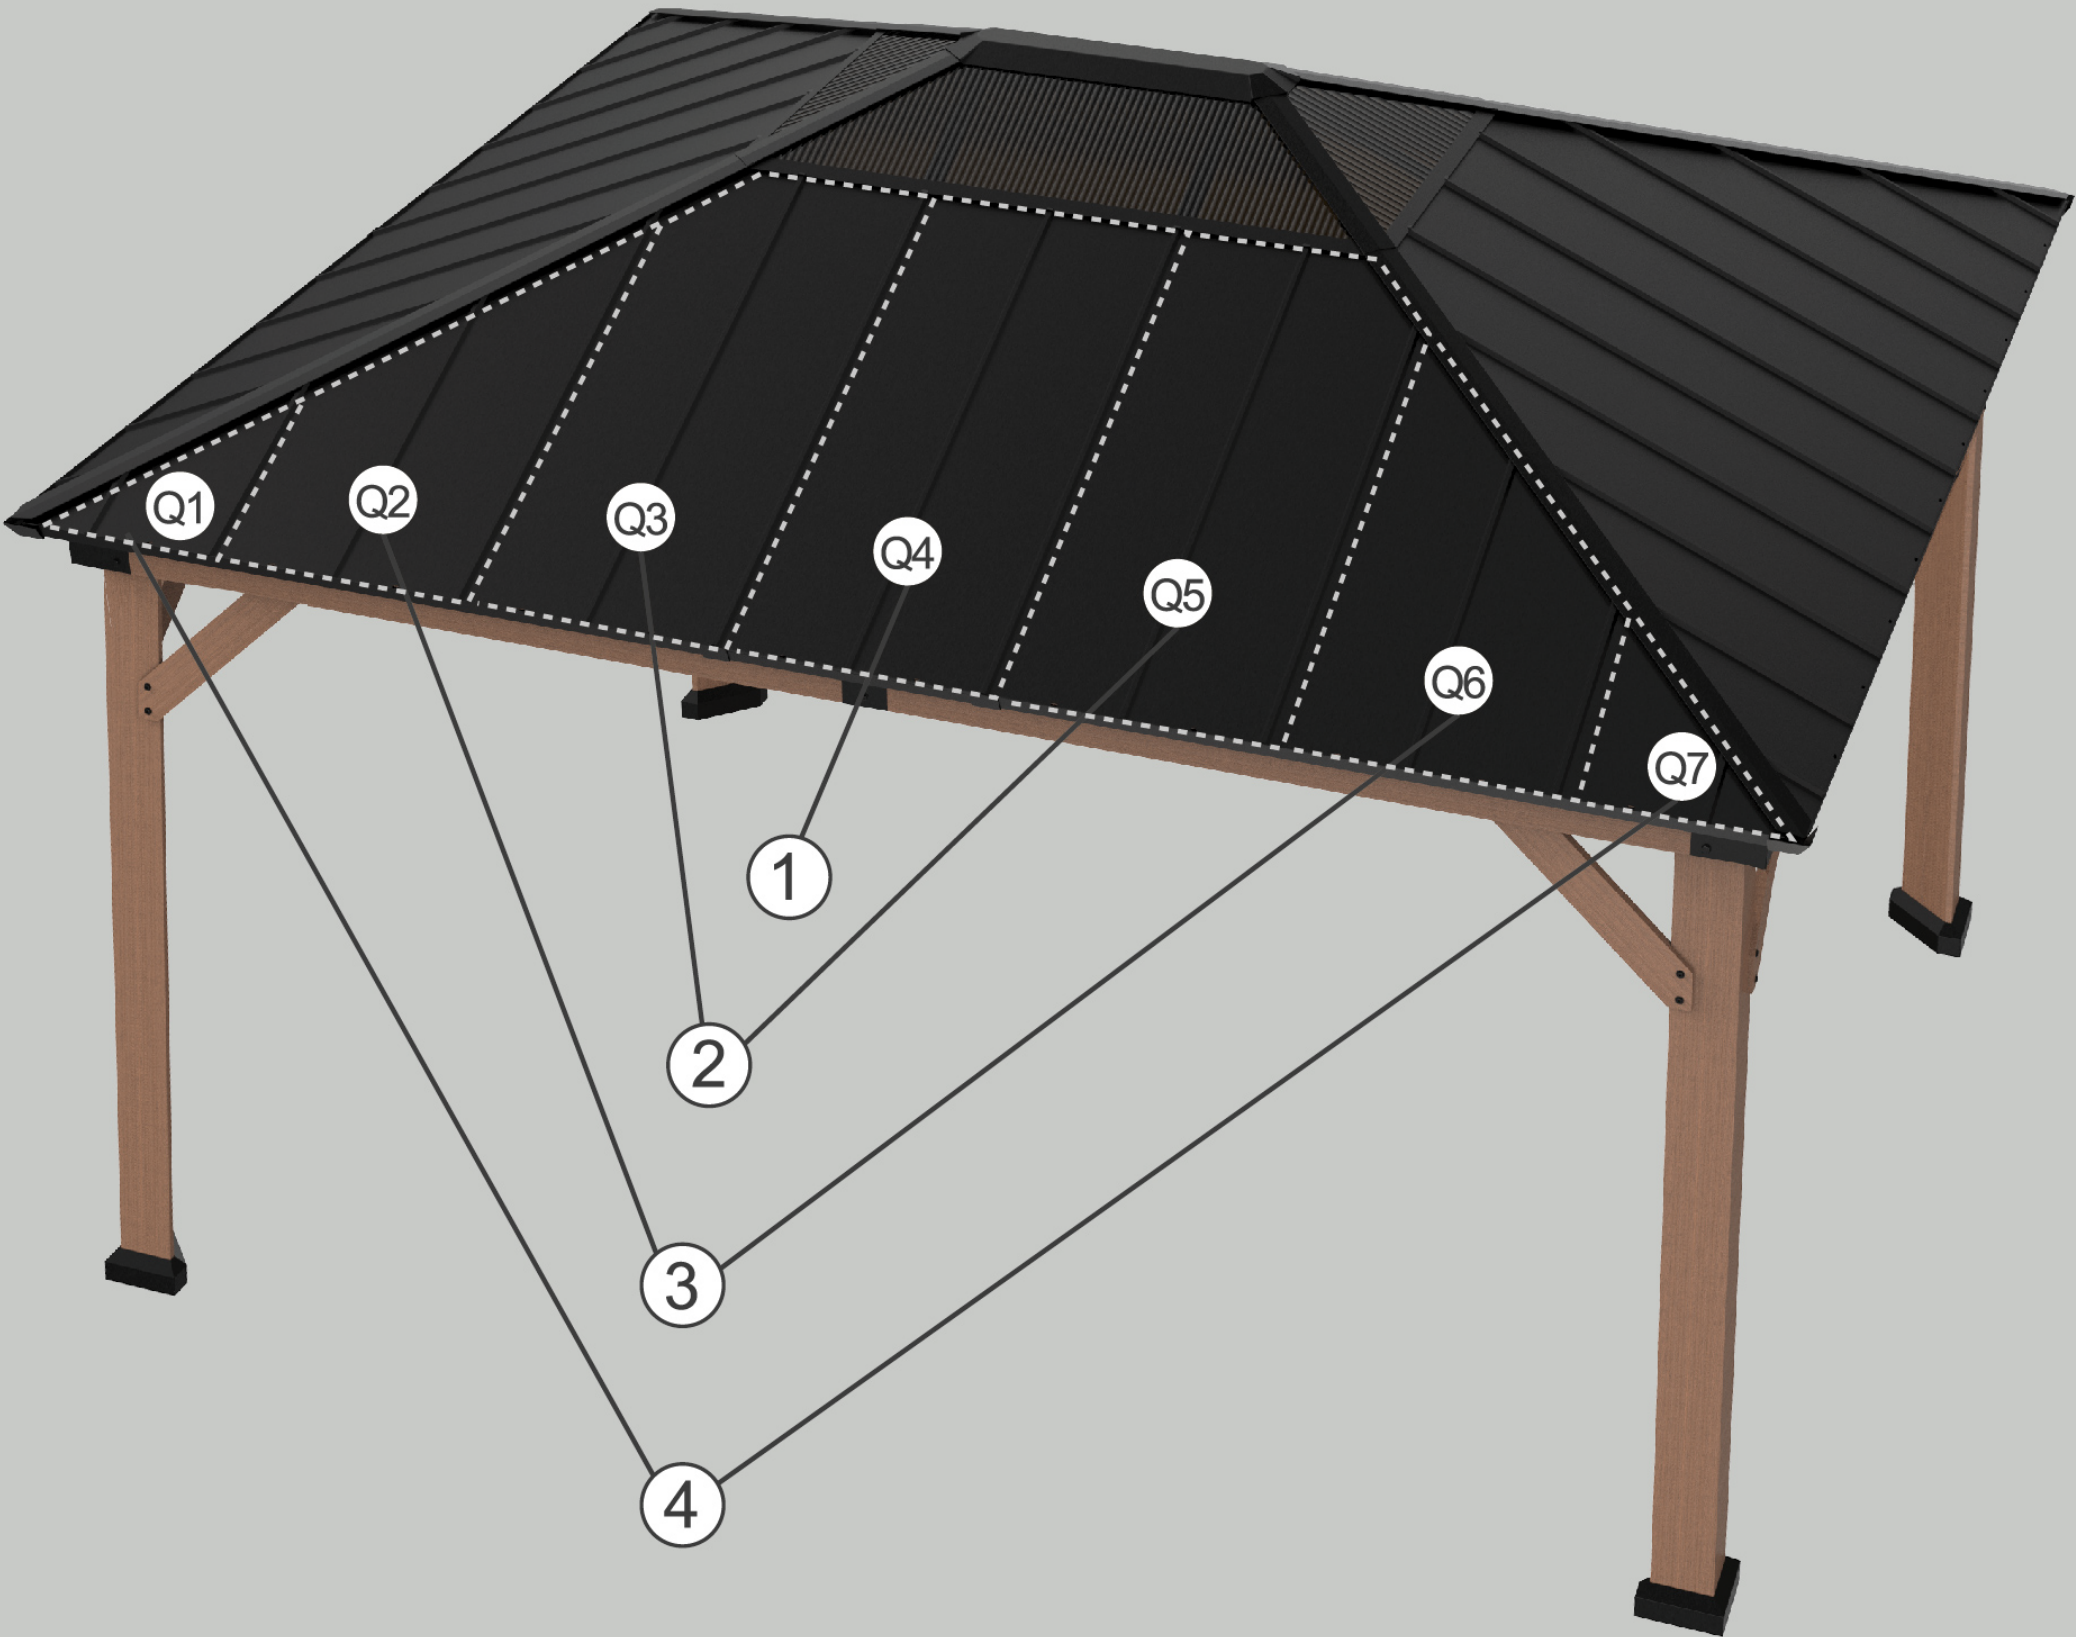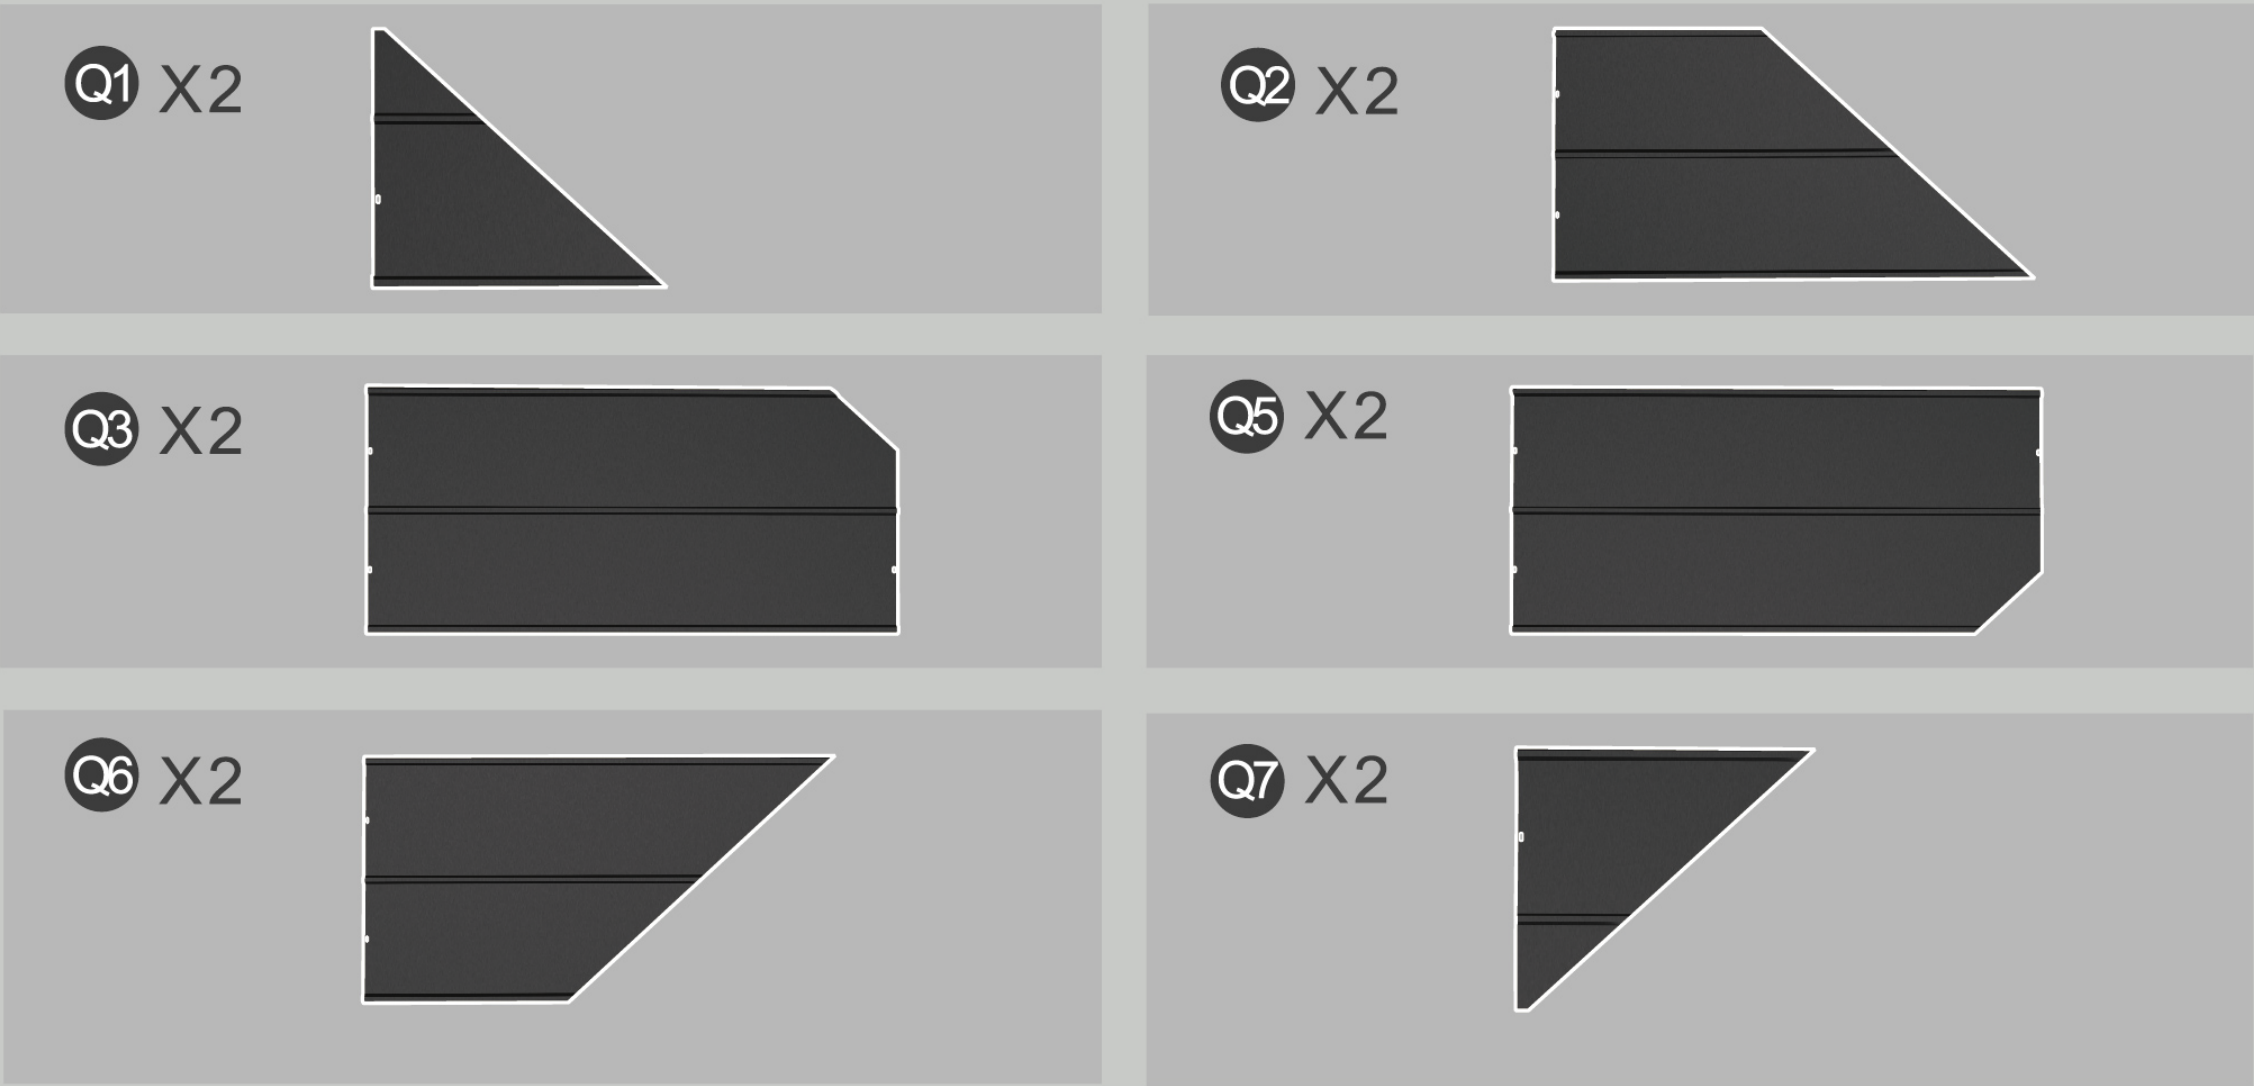

# Step 23

S2 X8




S1 X6



HH


X44

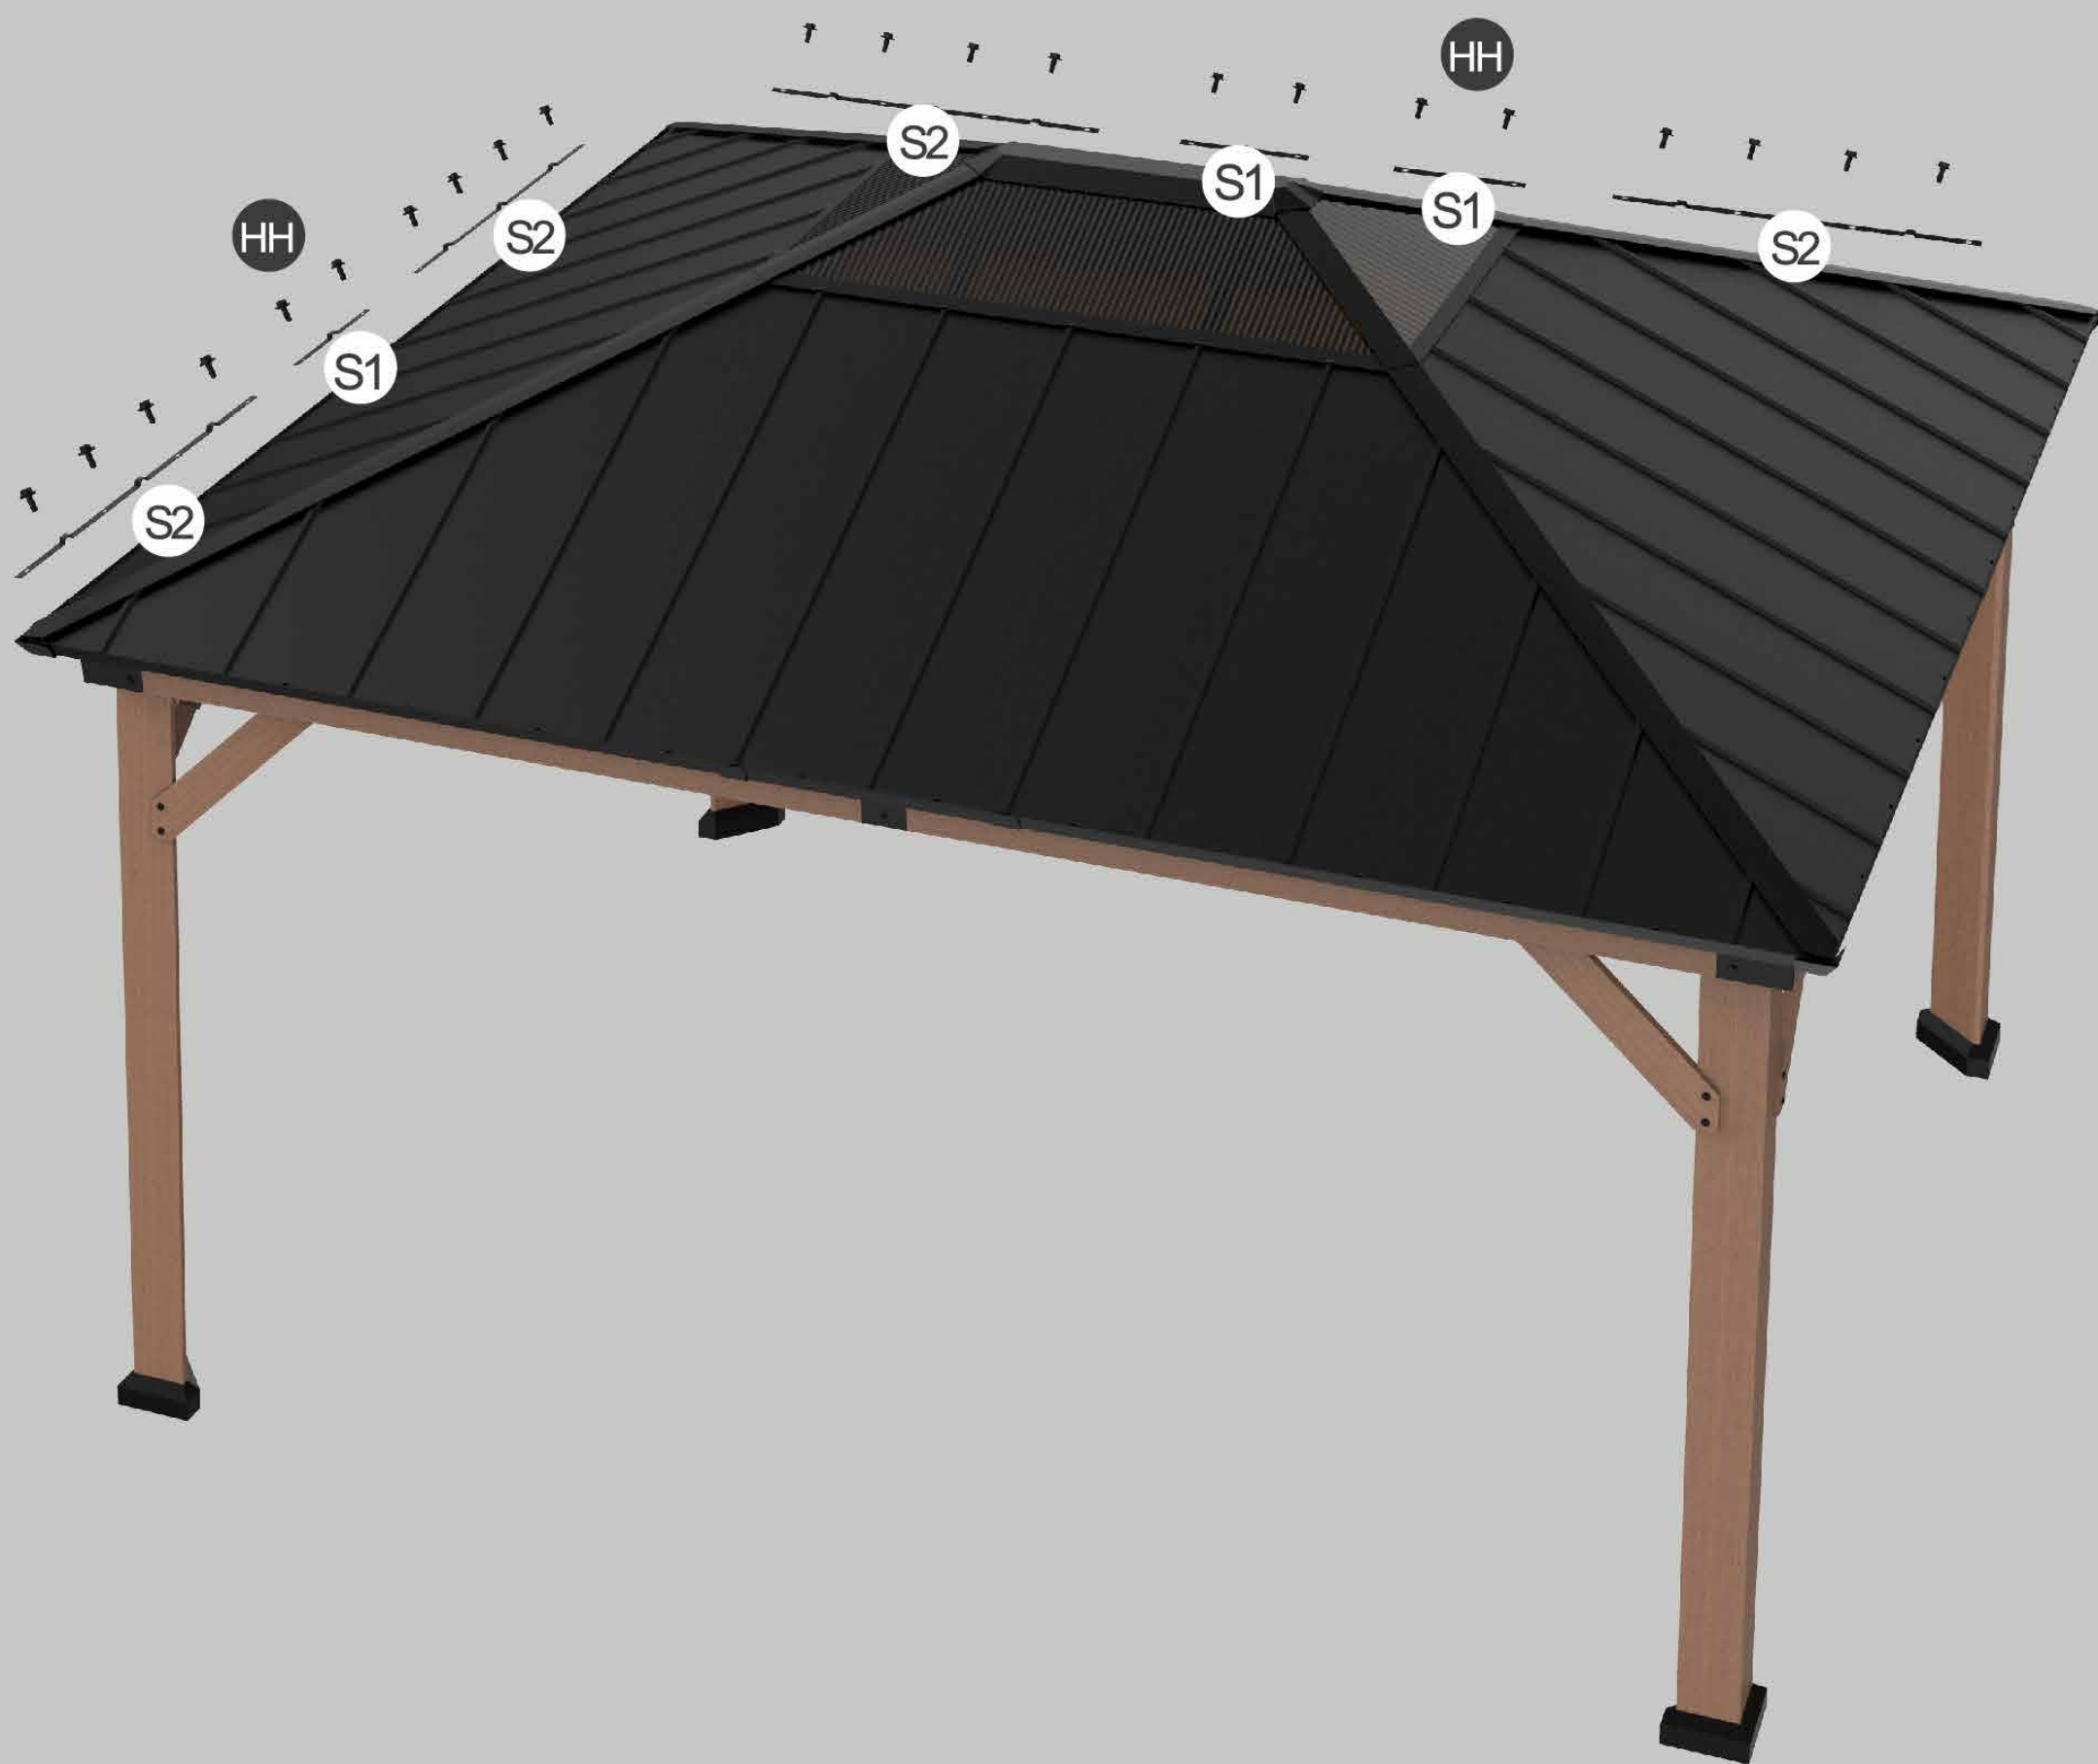



# Step 24

PP X 12

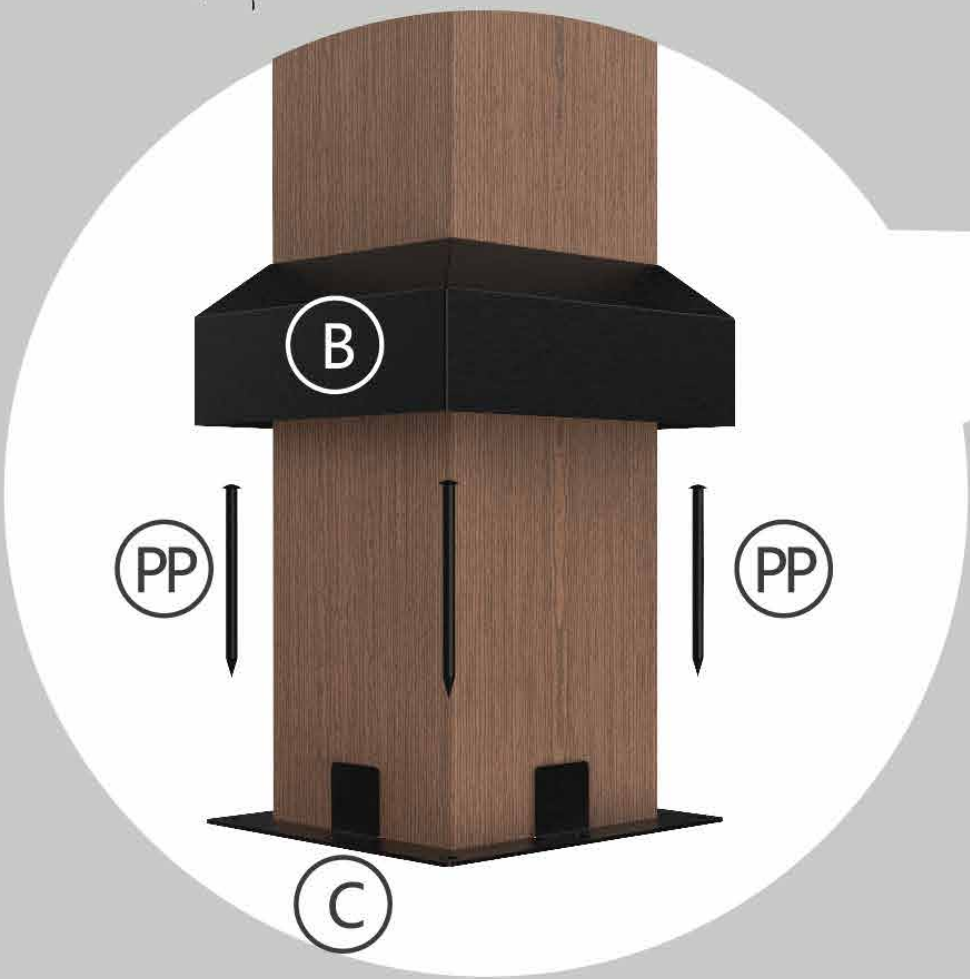

**Tips:**  
Please purchase the anchors from local hardware store if anchor the gazebo to concrete or wood.



11'x 13' Outdoor Hardtop  
Wood Framed Gazebo





**Always be creative.**





OUTDOOR GAZEBO  
★★★★★

***A*lways be creative.**